

EXHAUST


2. Front Exhaust Pipe

A: REMOVAL

CAUTION:


Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.

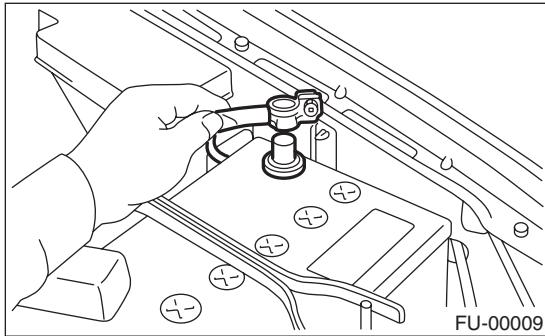


FU-00009

- 3) Remove the collector cover.
- 4) Remove the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-42, REMOVAL, Front Oxygen (A/F) Sensor.>
- 5) Remove the under cover.
- 6) Remove the exhaust manifold lower cover (RH) and the exhaust manifold cover (LH).

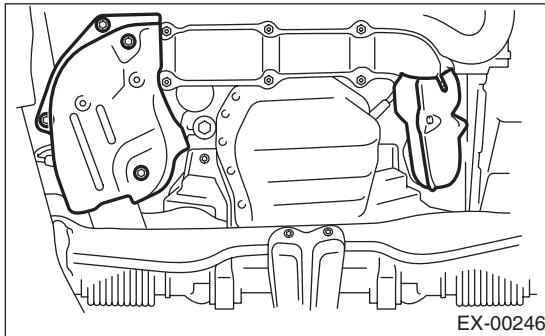


EX-00246

- 7) Remove the bolts and nuts which hold front exhaust pipe assembly onto turbocharger joint pipe.

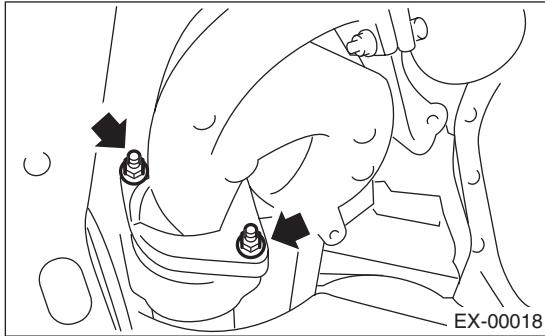


EX-00018

- 8) While holding the front exhaust pipe assembly with one hand, remove the nuts which hold the front exhaust pipe assembly to cylinder head exhaust port.

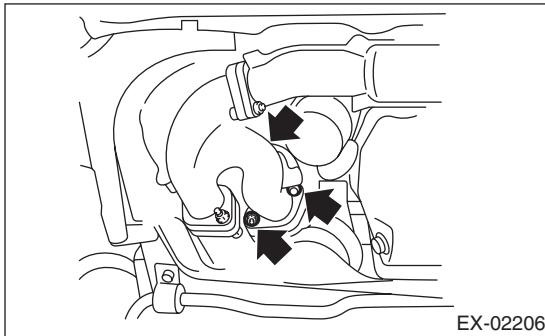


EX-02206

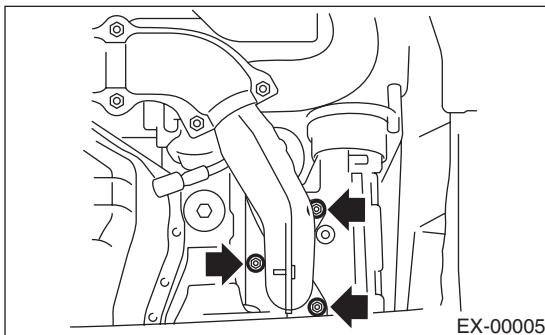

EX-00005

- 9) Remove the front exhaust pipe assembly.
- 10) Remove the covers from exhaust manifold and front exhaust pipe.
- 11) Separate the front exhaust pipe from exhaust manifolds.

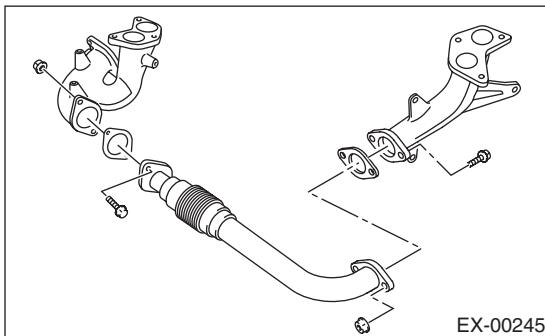

EX-00245

B: INSTALLATION


1) Assemble the front exhaust pipe and the exhaust manifold.

NOTE:

Use a new gasket.

Tightening torque:

42.5 N·m (4.3 kgf-m, 31.3 ft-lb)

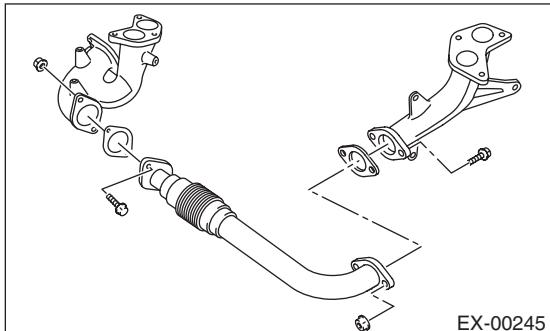

2) Install the front exhaust pipe cover.

Tightening torque:

7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

3) Install the exhaust manifold upper cover (RH).

Tightening torque:

19 N·m (1.9 kgf-m, 14.0 ft-lb)



4) Install the front exhaust pipe assembly.

NOTE:

Use a new gasket.

Tightening torque:

40 N·m (4.0 kgf-m, 28.9 ft-lb)

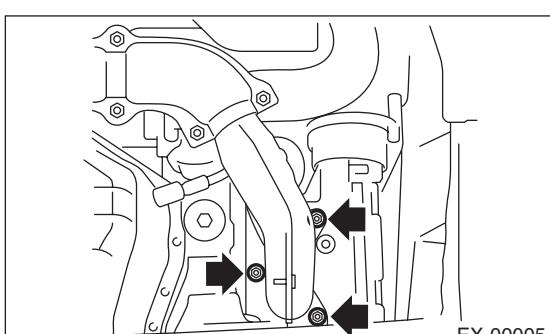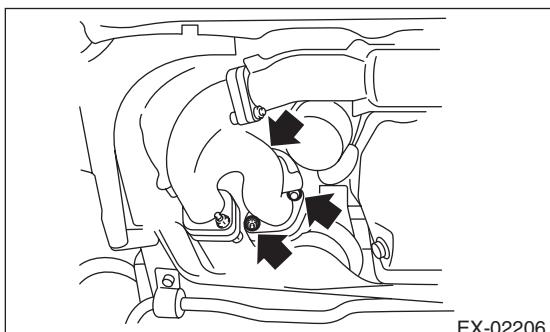


5) Connect the exhaust manifold (RH) to turbocharger joint pipe.

NOTE:

Use a new gasket.

Tightening torque:


42.5 N·m (4.3 kgf-m, 31.3 ft-lb)

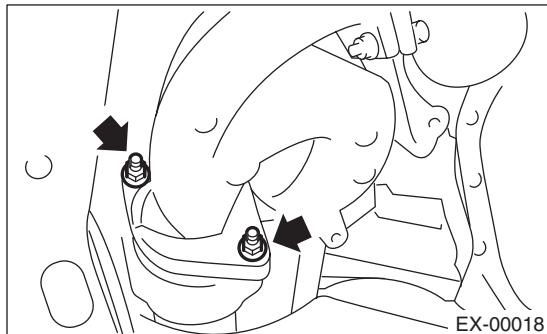

6) Install the exhaust manifold lower cover (RH) and the exhaust manifold cover (LH).

Tightening torque:

19 N·m (1.9 kgf-m, 14.0 ft-lb)

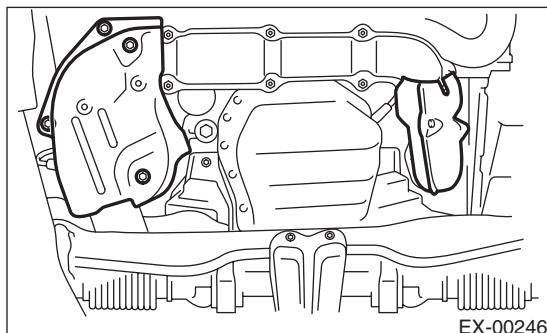


7) Install the front oxygen (A/F) sensor. <Ref. to FU(H4DOTC)-43, INSTALLATION, Front Oxygen (A/F) Sensor.>

8) Install the under cover.

9) Lower the vehicle.

10) Connect the ground cable to battery.

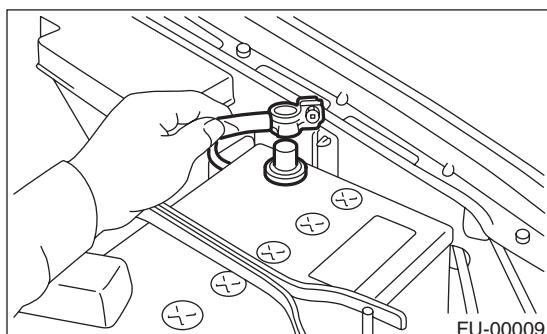

11) Install the collector cover.

C: INSPECTION

1) Check the connections and welds for exhaust leaks.

2) Make sure there are no holes or rusting.