



15. Wastegate Control Solenoid Valve

A: REMOVAL


- 1) Disconnect the ground cable from the battery.

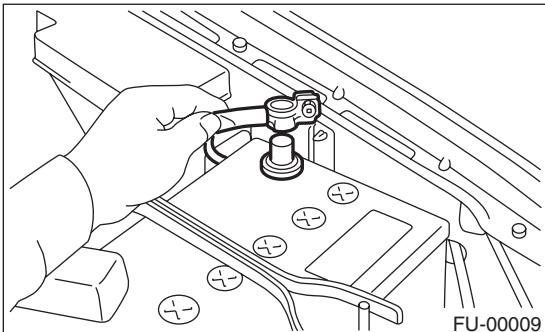


- 2) Remove the engine harness connector (A) from bracket.
- 3) Disconnect the connector (B) from wastegate control solenoid valve.
- 4) Remove the front oxygen (A/F) sensor connector (C) from the bracket.

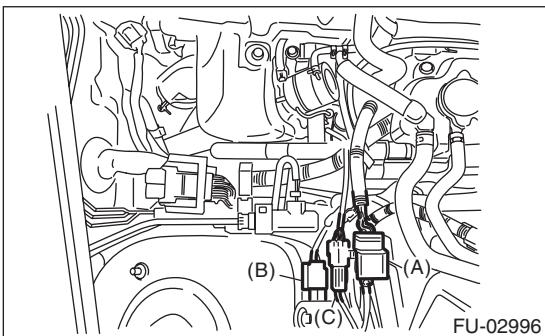

- 5) Remove the bracket from vehicle body.

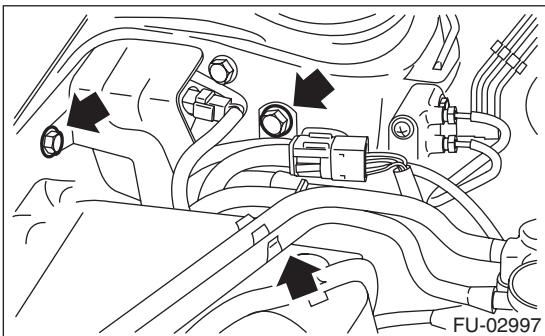

- 6) Disconnect pressure hose (D) from the wastegate control solenoid valve.

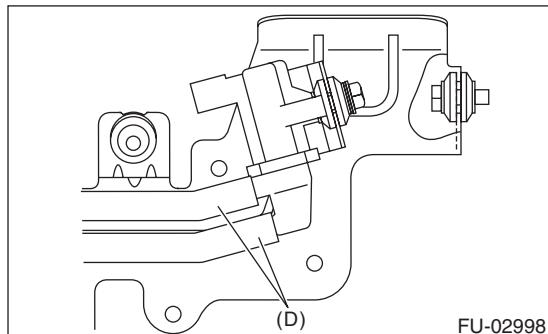

- 7) Remove the wastegate control solenoid valve from the bracket.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.5 N·m (0.66 kgf·m, 4.8 ft-lb)

