


## 2. Throttle Body


### A: REMOVAL

- 1) Disconnect the ground cable from the battery.

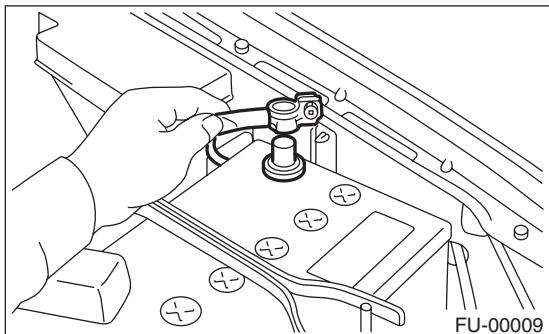


- 2) Remove the collector cover.

- 3) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
- 4) Disconnect the connector from the throttle position sensor (A), and the manifold pressure sensor (B).

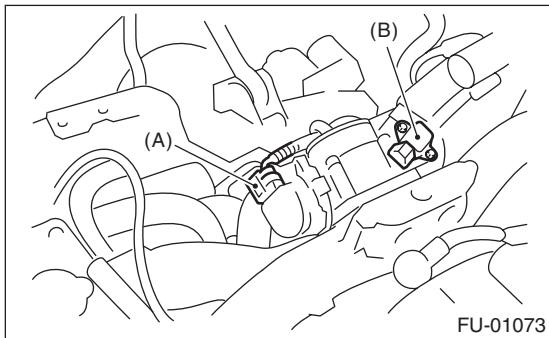

- 5) Disconnect the engine coolant hoses from throttle body.

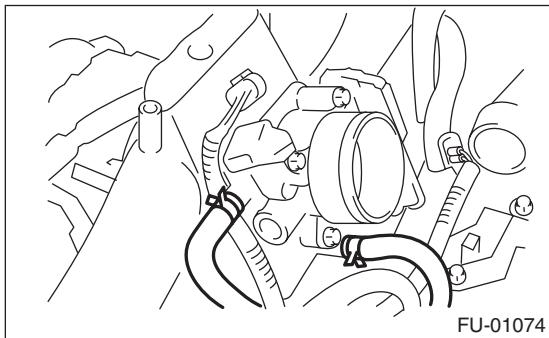

- 6) Remove the bolts which install throttle body to the intake manifold, and then remove the throttle body.

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

**Tightening torque:**

**8 N·m (0.8 kgf·m, 5.9 ft-lb)**

