


22. Fuel Pump Control Unit

A: REMOVAL

- 1) Disconnect the ground cable from the battery.

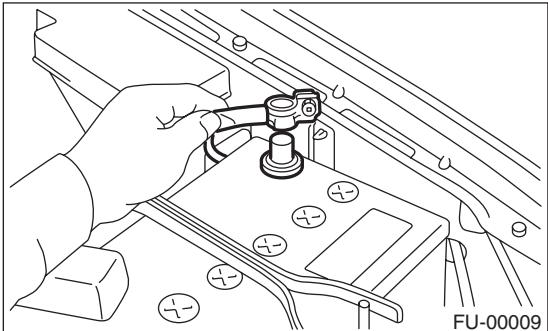

- 2) Remove the rear quarter trim. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the connector from fuel pump control unit.
- 4) Remove the fuel pump control unit.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
5 N·m (0.5 kgf-m, 3.7 ft-lb)

