

27. Fuel Level Sensor

A: REMOVAL

WARNING:

Place "NO FIRE" signs near the working area.

CAUTION:

Be careful not to spill fuel.


NOTE:

The fuel level sensor is built in fuel pump assembly.

1) Remove the fuel pump assembly.


<Ref. to FU(H4DOTC)-59, REMOVAL, Fuel Pump.>

2) Disconnect the connector from fuel pump bracket.

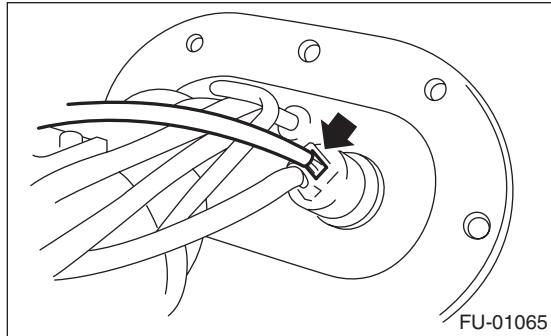

3) Remove the fuel temperature sensor (A).

4) Remove the bolt (B) which installs the fuel level sensor on the mounting bracket.

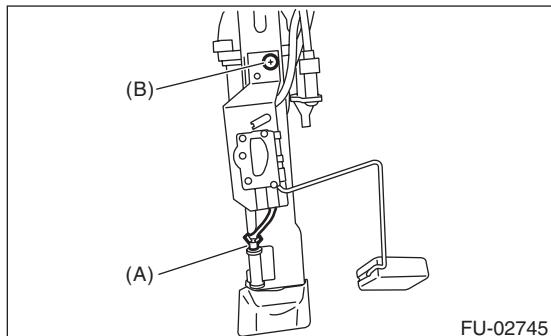

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.3 ft-lb)