

31. Fuel Damper Valve

A: REMOVAL

WARNING:


Place "NO FIRE" signs near the working area.

CAUTION:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-51, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Remove the fuel damper valve from the fuel delivery line (A) and the fuel return line (B).

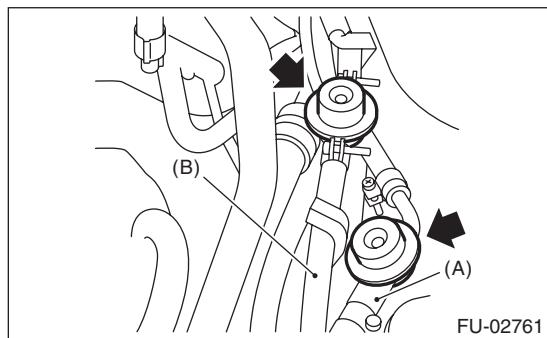

B: INSTALLATION

CAUTION:

If fuel hoses or clamps are damaged, replace them with new parts.

Install in the reverse order of removal.

Tightening torque:

1.25 N·m (0.13 kgf·m, 0.94 ft-lb)