


Camshaft Position Sensor

FUEL INJECTION (FUEL SYSTEMS)


6. Camshaft Position Sensor

A: REMOVAL

- 1) Disconnect the ground cable from the battery.

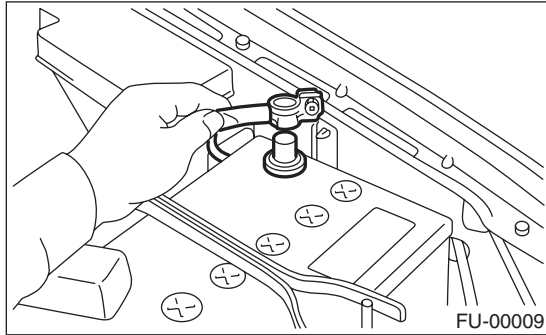

- 2) Remove the collector cover.
- 3) Disconnect the connector from camshaft position sensor RH.
- 4) Remove the camshaft position sensor RH from the cylinder head rear.

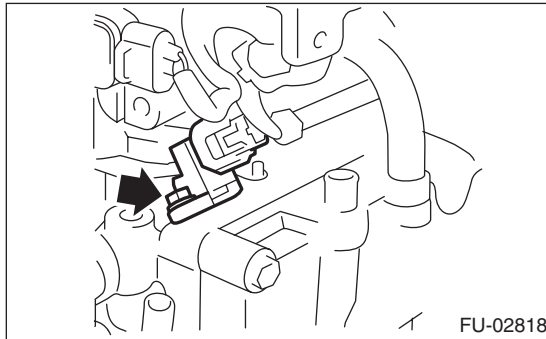

- 5) Remove the camshaft position sensor LH in the same way as RH.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

