



## 7. Knock Sensor

### A: REMOVAL


- 1) Disconnect the ground cable from the battery.

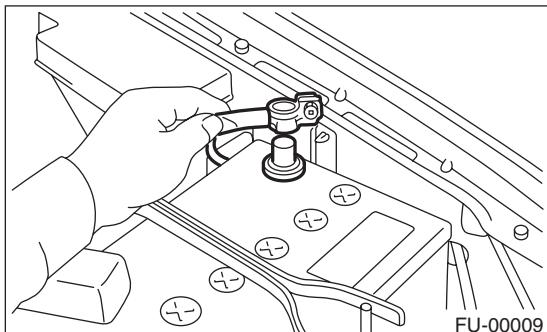

- 2) Remove the collector cover.
- 3) Remove the intercooler. <Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>
- 4) Disconnect the knock sensor connector.

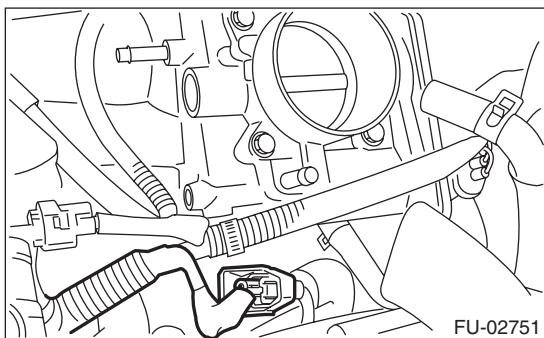

- 5) Remove the knock sensor from the cylinder block.

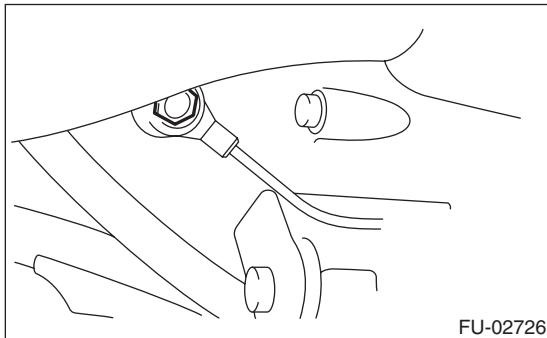

### B: INSTALLATION


- 1) Install the knock sensor to the cylinder block.

#### *Tightening torque:*

**24 N·m (2.4 kgf·m, 17.7 ft-lb)**


#### NOTE:

The portion of the knock sensor cord that is pulled out must be positioned at a 60° angle relative to the engine rear.

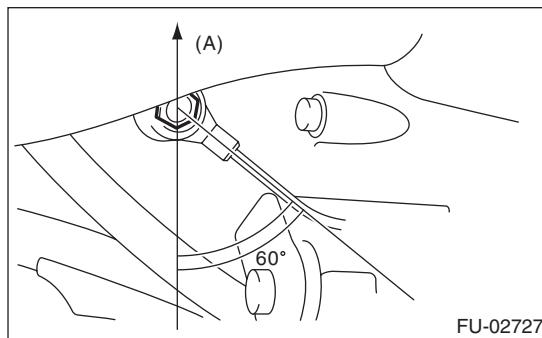

(A) Front side

- 2) Connect the knock sensor connector.

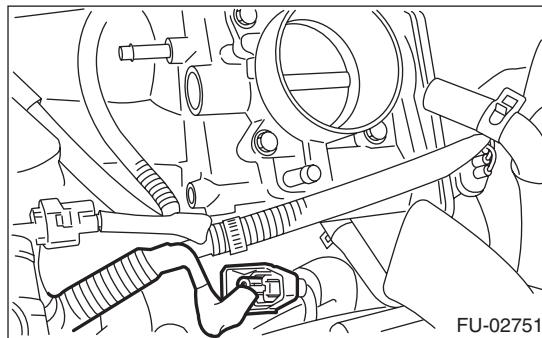

- 3) Install the intercooler.
- <Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

- 4) Install the collector cover.

- 5) Connect the ground cable to the battery.

