


## 2. Air Cleaner Element

### A: REMOVAL

- 1) Remove the clip (A) from the air cleaner upper cover.

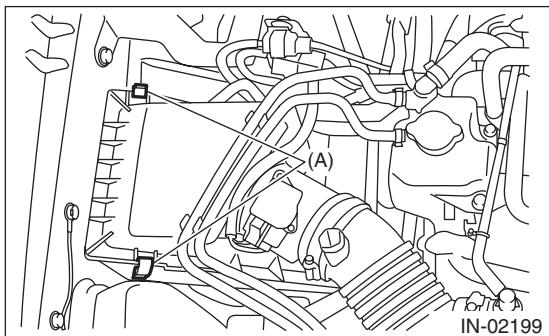


- 2) Remove the air cleaner element.

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Before installing the air cleaner upper cover, align the protrusion with the hole of air cleaner lower case, and then secure the upper cover and lower case.

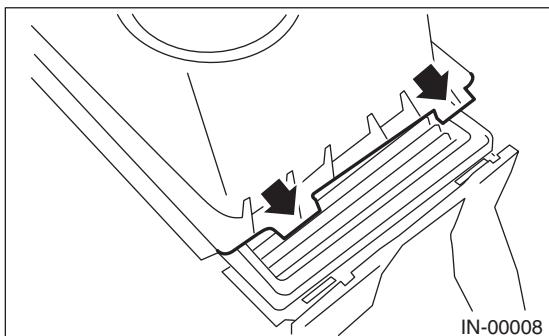

### C: INSPECTION

Replace if excessively damaged or dirty.