


Intake Duct

INTAKE (INDUCTION)


5. Intake Duct

A: REMOVAL

- 1) Disconnect the ground cable from the battery.

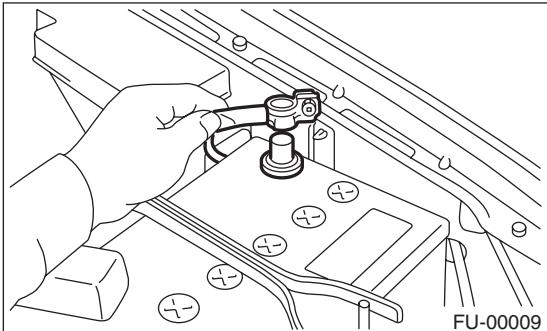

- 2) Remove the collector cover.
- 3) Remove the intake manifold.
<Ref. to FU(H4DOTC)-14, REMOVAL, Intake Manifold.>
- 4) Remove the sensor, engine harness and fuel pipe attached to the intake manifold. <Ref. to FU(H4DOTC)-20, DISASSEMBLY, Intake Manifold.>
- 5) Remove the intake duct from intake manifold.

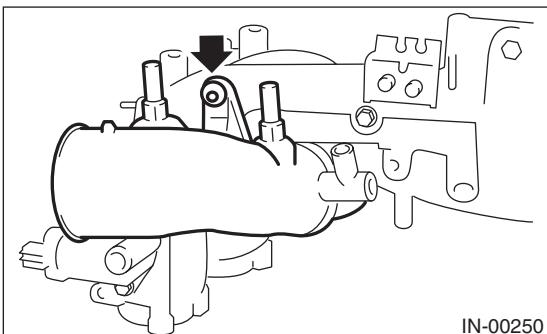

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

19 N·m (1.9 kgf·m, 14.0 ft-lb)

