



## 9. Resonator Chamber

### A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Remove the collector cover.
- 3) Remove the air intake duct. <Ref. to IN(H4DOTC)-9, REMOVAL, Air Intake Duct.>
- 4) Remove the air cleaner case. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Cleaner Case.>
- 5) Remove the resonator chamber mounting bolt on the right of engine compartment.

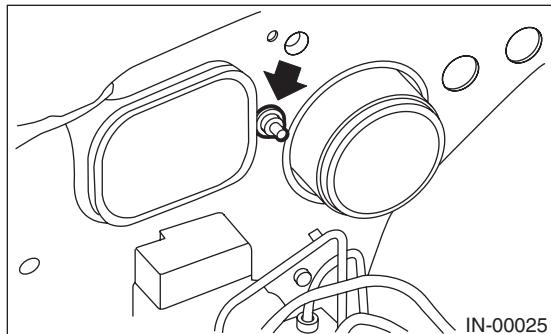

- 6) Remove the front wheel RH, and lift up the vehicle.
- 7) Remove the front mudguard RH.
- 8) Remove the resonator chamber from the inside front fender.


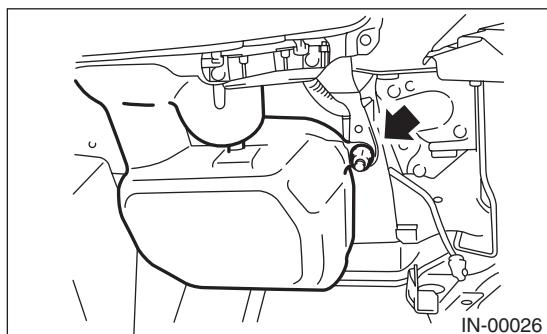


### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

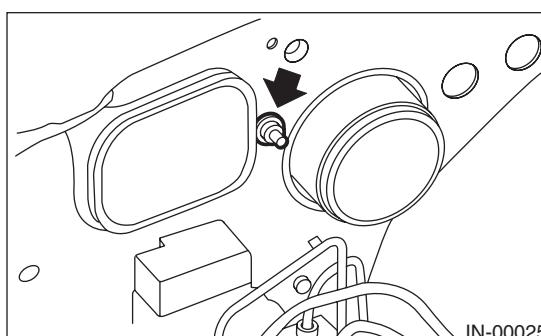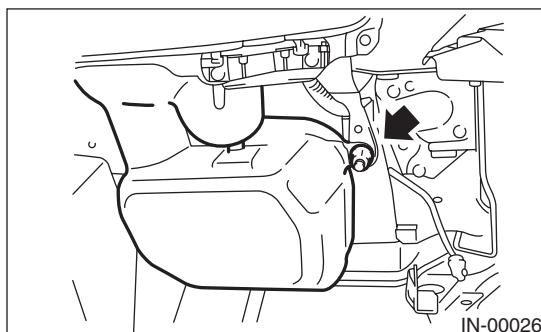

### C: INSPECTION

Check for cracks or loose connection. Check that no foreign objects are mixed in the resonator chamber.

## **Resonator Chamber**

**INTAKE (INDUCTION)**

---