


## 14. Timing Belt Cover

### A: REMOVAL

NOTE:

Perform the work with the engine installed to body when replacing a single part.

- 1) Remove the V-belts. <Ref. to ME(H4DOTC)-39, REMOVAL, V-belt.>
- 2) Remove the crank pulley. <Ref. to ME(H4DOTC)-41, REMOVAL, Crank Pulley.>
- 3) Remove the timing belt cover (LH) (A).
- 4) Remove the timing belt cover (RH) (B).
- 5) Remove the front timing belt cover (C).

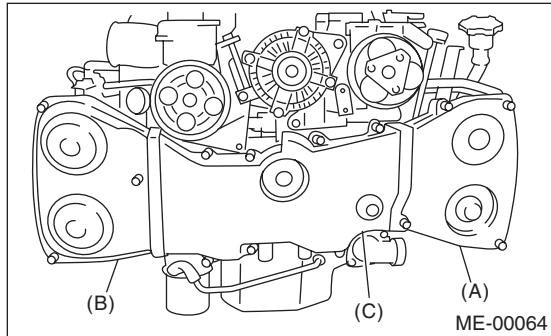

### B: INSTALLATION

- 1) Install the front timing belt cover (C).

**Tightening torque:**

**5 N·m (0.5 kgf·m, 3.7 ft-lb)**

- 2) Install the timing belt cover (RH) (B).


**Tightening torque:**

**5 N·m (0.5 kgf·m, 3.7 ft-lb)**

- 3) Install the timing belt cover (LH) (A).

**Tightening torque:**

**5 N·m (0.5 kgf·m, 3.7 ft-lb)**

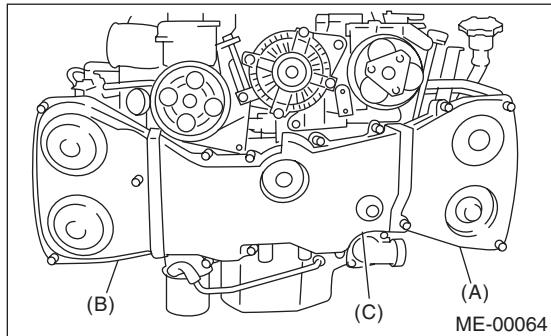

- 4) Install the crank pulley. <Ref. to ME(H4DOTC)-41, INSTALLATION, Crank Pulley.>
- 5) Install the V-belts. <Ref. to ME(H4DOTC)-39, INSTALLATION, V-belt.>

### C: INSPECTION

Check the cover for damage.