

22.Piston

A: SPECIFICATION

Refer to “Cylinder Block” for removal and installation procedures of pistons.

<Ref. to ME(H4DOTC)-70, REMOVAL, Cylinder Block.> <Ref. to ME(H4DOTC)-74, INSTALLATION, Cylinder Block.>