

## 23. Connecting Rod

### A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of connecting rod.

<Ref. to ME(H4DOTC)-70, REMOVAL, Cylinder Block. > <Ref. to ME(H4DOTC)-74, INSTALLATION, Cylinder Block. >