


10. Air Cleaner Element


A: REMOVAL

1. NON-TURBO MODEL

- 1) Remove the clips (B) on air cleaner case.

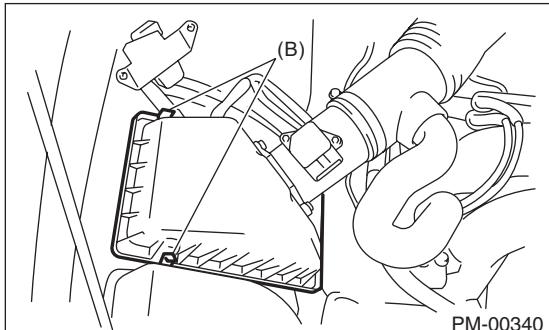


- 2) Remove the air cleaner element.

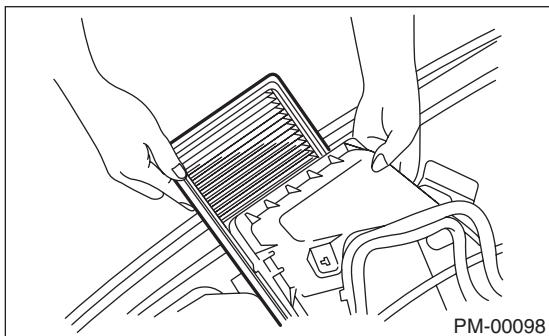


2. TURBO MODEL

- 1) Remove the clips (B) on air cleaner case.

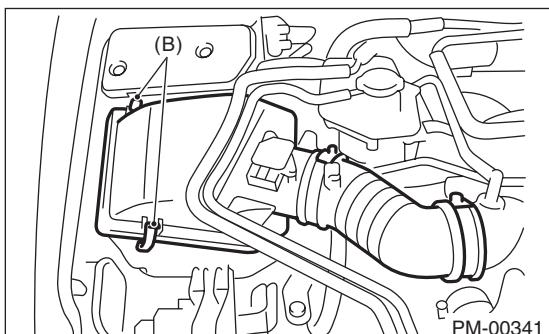

- 2) Remove the air cleaner element.

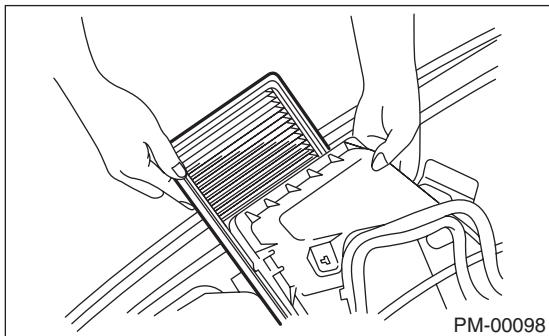


B: INSTALLATION

1. NON-TURBO MODEL


Install in the reverse order of removal.

NOTE:

- The air cleaner element differs depending on the destination market. For the specification of U5 model, refer to the NOTE (A) on the upper side of air cleaner upper cover.

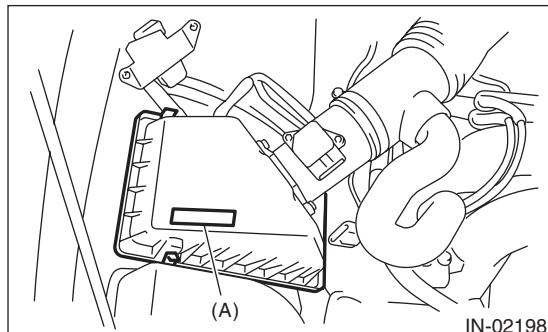

- Fasten with a clip after inserting the lower tab of case.

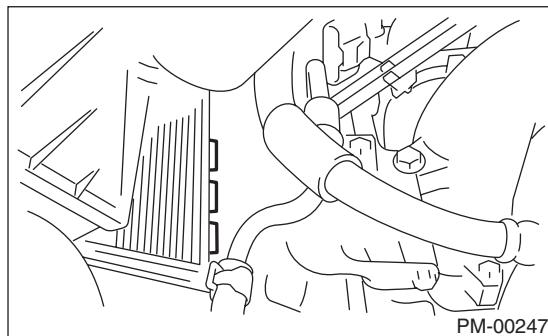


2. TURBO MODEL

Install in the reverse order of removal.

CAUTION:

Position the protrusion on the air cleaner upper cover with the hole in the air cleaner lower case to mount the upper cover on the case.

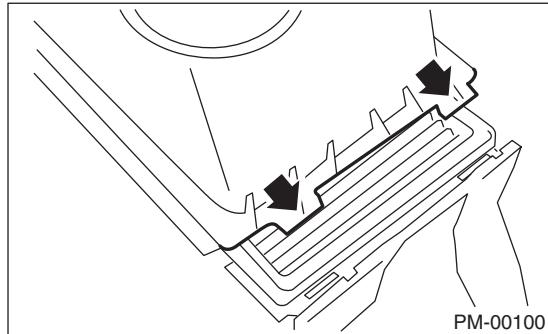

C: INSPECTION

- Replace with a new part if the air cleaner element is extremely damaged or dirty.
- Replace the air cleaner upper cover when the HC adsorption filter is damaged. (U5 model)