

## 14. Transmission Gear Oil


### A: REPLACEMENT

#### 1. MANUAL TRANSMISSION

1) Drain the gear oil by removing drain plug.

**CAUTION:**

- Before starting work, cool off the transmission gear oil well.
- If transmission gear oil adheres to the exhaust pipe, wipe it off completely.

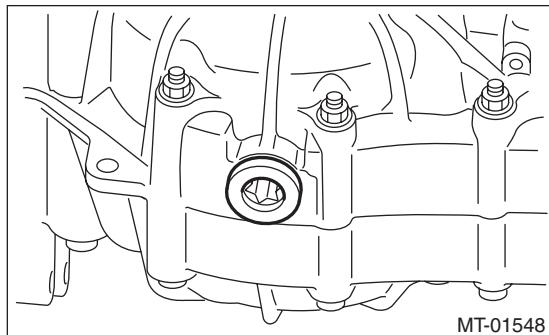

2) Replace the gasket with new part, and then tighten the drain plug to specified torque.

**Tightening torque:**

**Copper gasket**

70 N·m (7.1 kgf-m, 51.6 ft-lb)

**Aluminum gasket**

44 N·m (4.5 kgf-m, 32.5 ft-lb)


3) Fill the transmission gear oil through the oil level gauge hole up to the upper point of level gauge.

**CAUTION:**

Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

**Gear oil capacity:**

3.5 ℥ (3.7 US qt, 3.1 Imp qt)

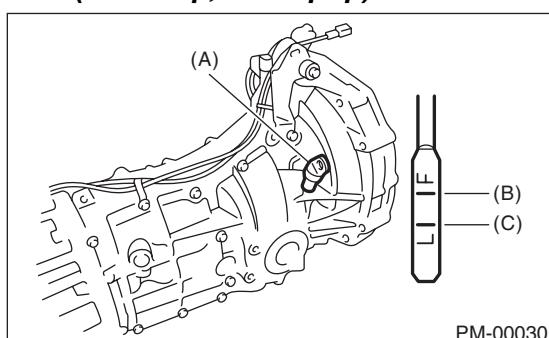

(A) Oil level gauge

(B) Upper level

(C) Lower level