


16. ATF

A: INSPECTION

NOTE:

The level of ATF varies with fluid temperature. Pay attention to the ATF temperature when checking ATF level.

- 1) Raise the ATF temperature by driving a distance of 5 — 10 km (3 — 6 miles). Otherwise, idle the engine to raise ATF temperature to 70 — 80°C (158 — 176°F) on Subaru Select Monitor. <Ref. to 4AT(diag)-16, READ CURRENT DATA, OPERATION, Subaru Select Monitor.>
- 2) Make sure the vehicle is level.
- 3) After slowly selecting all positions (P, R, N, D, 3, 2, 1), set the select lever in the "P" range. Idle the engine for 1 or 2 minutes, and measure the ATF level.

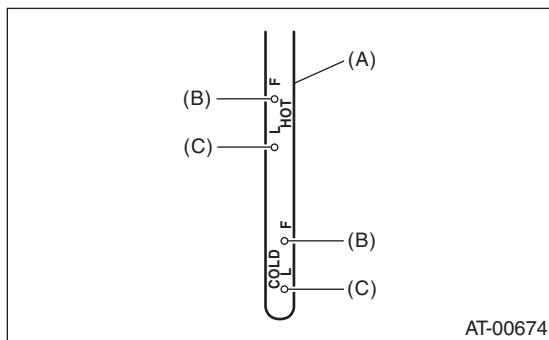

(A) ATF level gauge
 (B) Upper level
 (C) Lower level

- 4) Make sure that ATF level is between the upper level and lower level on the HOT side.

If the ATF level is below the lower level, check for leaks in the transmission. If there are leaks, it is necessary to replace the gasket, oil seals, plugs, or repair other parts.

- 5) If the ATF level is below the mid level between upper and lower marks, add the recommended ATF until the fluid level is above mid level.

CAUTION:

- Be careful not to exceed the upper level.
- Adding ATF up to the upper level when the transmission is cold will overfill the ATF. Do not fill beyond the upper level as overfilling can cause problems.

- 6) Check the ATF level after raising ATF temperature to 70 — 80°C (158 — 176°F) by running the vehicle or by idling the engine again.

B: REPLACEMENT

1. ATF

- 1) Lift up the vehicle.
- 2) Drain the ATF completely.


CAUTION:

After running the engine or after idling for a long time, the ATF is hot. Be careful not to burn yourself.

- 3) Replace the gasket with new part, and then tighten the drain plug (ATF).

Tightening torque:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

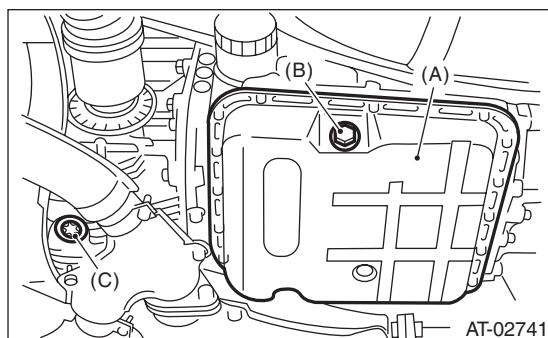

(A) Oil pan
 (B) Drain plug (ATF)
 (C) Differential gear oil drain plug

- 4) Lower the vehicle.
- 5) Fill ATF from the oil charger pipe.

Recommended fluid:

SUBARU ATF

Capacity:

Fill with the same amount of ATF that was drained from drain plug hole.

Capacity when transmission is overhauled:

9.3 — 9.6 l (9.8 — 10.1 US qt, 8.2 — 8.4 Imp qt)

- 6) Bleed the air of control valve.
 <Ref. to 4AT-61, Air Bleeding of Control Valve.>
- 7) Check the level and leaks of ATF.
 <Ref. to 4AT-28, INSPECTION, Automatic Transmission Fluid.>

2. ATF FILTER

NOTE:

- The ATF filter is maintenance free.
- ATF filter needs replacement when it is physically damaged or ATF leaked.
- For the replacement procedure of ATF filter, refer to "ATF FILTER". <Ref. to 4AT-63, ATF Filter.>