

Schedule

PERIODIC MAINTENANCE SERVICES

2. Schedule

A: MAINTENANCE SCHEDULE

1. FOR U.S. MODEL

	MAINTENANCE INTERVAL																		Remarks
	[Number of months or km (miles), whichever occurs first]																		
Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120		
× 1,000 km	4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192		
× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120		
1 Engine oil		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
2 Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
3 Spark plug				R				R				R						R	Non-turbo Model
								R										R	Turbo Model
4 Drive belt				I				I				I		R					
5 Timing belt				I				I				I		R					
6 Fuel line				(I)				(I)				(I)				I	Note (1)		
7 Fuel filter								R								R	Note (1)		
8 Air cleaner element				R				R				R				R	Note (2)		
9 Cooling system			I				I				I				I		I		
10 Engine coolant			R				R				R			R		R			
11 Clutch system	I	I	I	I		I	I	I	I	I	I	I	I	I	I	I	I		
12 Transmission oil			I				I				I			I		I			
13 ATF			I				I			I			I		I		I		
14 Front & rear differential gear oil			I				I			I			I			I		I	
15 Brake line		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
16 Brake fluid			R				R			R			R			R			
17 Disc brake pads and discs			I				I			I			I			I		I	
18 Brake linings and drums			I				I			I			I			I		I	
19 Parking brake		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
20 Suspension	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
21 Wheel bearing								(I)									(I)		
22 Axle boots and joints		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
23 Tire rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note (4)	
24 Steering system (Power steering)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
25 Airbag system		10th-year inspection																	
26 ATF filter assembly		Annual inspection																	Note (3)
27 Air conditioner filter		Every 12 months or 12,000 km (7,500 miles) inspection																	

Symbol

R: Replace

I: Inspect

(R) or (I): Inspections recommended for vehicle safety

NOTE:

- This inspection is not necessary to observe exhaust gas regulations or is the responsibility of the manufacturer under the current basic EPA regulations that must be observed by law.
- Replace the air cleaner element more frequently than the periodic replacement if the vehicle is being used in an excessively dusty environment.
- The ATF filter needs replacement when it is physically damaged, rusty or ATF leaked.
- Replace the tires if the tread-wear indicator has caused a bar-shaped cut across the tread. The indicator will appear when the remaining amount of tread is less than 1.6 mm (0.063 in).

Schedule

PERIODIC MAINTENANCE SERVICES

2. FOR CANADA MODEL

		MAINTENANCE INTERVAL [Number of months or km (miles), whichever occurs first]																		
	Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	Remarks	
	× 1,000 km	4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192		
	× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120		
1	Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
3	Spark plug					R				R				R			R	Non-turbo Model		
										R							R	Turbo Model		
4	Drive belt					I				I				I		R				
5	Timing belt					I				I				I		R				
6	Fuel line					(I)				(I)				(I)			I	Note (1)		
7	Fuel filter									R							R	Note (1)		
8	Air cleaner element					R				R				R			R	Note (2)		
9	Cooling system					I				I				I			I			
10	Engine coolant					R				R				R			R			
11	Clutch system		I		I		I		I	I		I		I	I	I	I			
12	Transmission oil					I				I				I			I			
13	ATF					I				I				I			I			
14	Front & rear differential gear oil					I				I				I			I			
15	Brake line		I		I		I		I	I		I		I	I	I	I			
16	Brake fluid					R				R				R			R			
17	Disc brake pads and discs					I				I				I			I			
18	Brake linings and drums					I				I				I			I			
19	Parking brake			I		I		I		I		I		I	I	I	I			
20	Suspension		I		I		I		I	I		I		I	I	I	I			
21	Wheel bearing									(I)							(I)			
22	Axle boots and joints			I		I		I		I		I		I	I	I	I	I		
23	Tire rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note (4)		
24	Steering system (Power steering)			I		I		I		I		I		I	I	I	I	I		
25	Airbag system	10th-year inspection																		
26	ATF filter assembly	Annual inspection															Note (3)			
27	Air conditioner filter	Every 12 months or 12,000 km (7,500 miles) inspection																		

Symbol

R: Replace

I: Inspect

(R) or (I): Inspections recommended for vehicle safety

NOTE:

- This inspection is not necessary to observe exhaust gas regulations or is the responsibility of the manufacturer under the current basic EPA regulations that must be observed by law.
- Replace the air cleaner element more frequently than the periodic replacement if the vehicle is being used in an excessively dusty environment.
- The ATF filter needs replacement when it is physically damaged, rusty or ATF leaked.
- Replace the tires if the tread-wear indicator has caused a bar-shaped cut across the tread. The indicator will appear when the remaining amount of tread is less than 1.6 mm (0.063 in).

Schedule

PERIODIC MAINTENANCE SERVICES

B: PERIODIC REPLACEMENT PARTS

Item	Every	Repeat short distance drive	Repeat rough muddy road drives	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel filter	15 months				I		
	24,000 km						
	15,000 miles						
Fuel line	15 months				I		
	24,000 km						
	15,000 miles						
Transmission oil	15 months						R
	24,000 km						
	15,000 miles						
ATF	15 months						R
	24,000 km						
	15,000 miles						
Front & rear differential gear oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Brake fluid	15 months					R	
	24,000 km						
	15,000 miles						
Disc brake pads and discs	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Brake linings and drums	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Parking brake	15 months	I	I		I		I
	24,000 km						
	15,000 miles						
Suspension	7.5 months		I	I	I		I
	12,000 km						
	7,500 miles						
A axle boots and joints	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						
Steering system (Power steering)	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						