


## 5. Spark Plug

### A: REPLACEMENT

- 1) Remove the intake duct and intake chamber.
- 2) Remove the washer tank and set to the side.
- 3) Disconnect the spark plug cord.
- 4) Remove the spark plug with a plug-wrench.

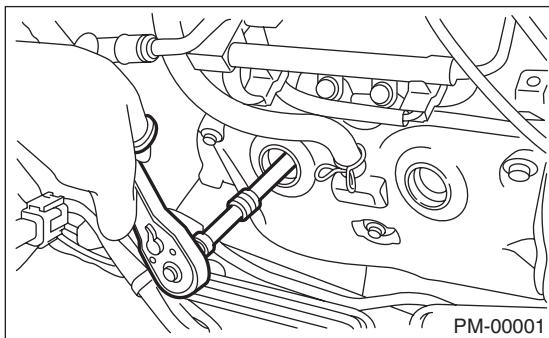

- 5) Install a new spark plug.

#### ***Spark plug:***

##### ***Non-turbo model***

***NGK: FR5AP-11***

##### ***Turbo model:***

***NGK: ILFR6B***

#### ***Spark plug gap:***

##### ***Non-turbo model***

***1.0 — 1.1 mm (0.039 — 0.043 in)***

##### ***Turbo model***

***0.7 — 0.8 mm (0.028 — 0.031 in)***

- 6) Tighten the spark plug lightly with hand, and then secure with a plug-wrench to the specified torque.

#### ***Tightening torque:***

***21 N·m (2.1 kgf·m, 15.5 ft-lb)***

#### **NOTE:**

- Be sure to place the gasket between the cylinder head and spark plug.
- If the torque wrench is not available, tighten the spark plug until gasket contacts cylinder head, then tighten further 1/4 to 1/2 turns.