


15. Rear Vehicle Speed Sensor

A: REMOVAL


- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from the battery.
- 3) Lift up the vehicle.
- 4) Disconnect the connector from the rear vehicle speed sensor.

- MP-T MODEL

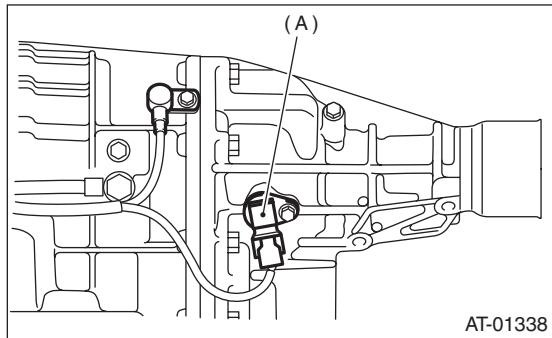

(A) Rear vehicle speed sensor


- VTD MODEL

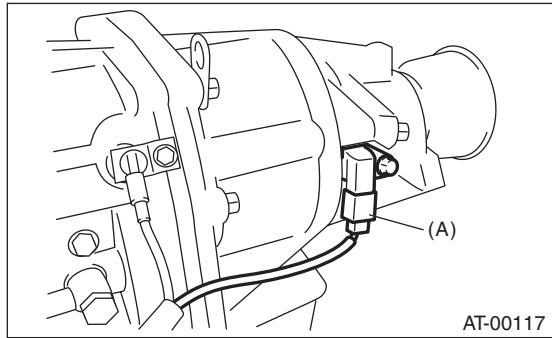


(A) Rear vehicle speed sensor

- 5) Remove the rear vehicle speed sensor.

- MP-T MODEL

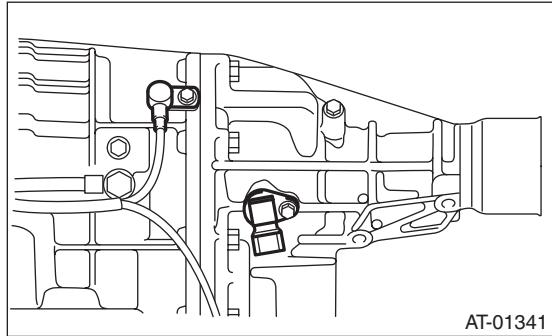

- VTD MODEL

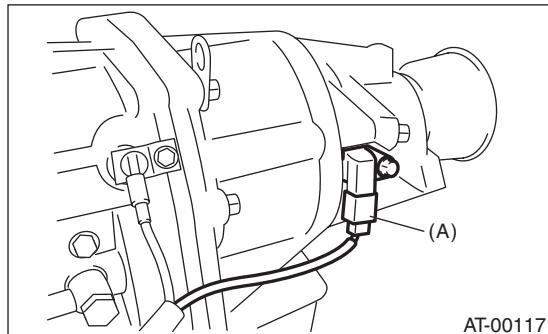

(A) Rear vehicle speed sensor

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Replace O-ring with a new part.

Tightening torque:

7 N·m (0.7 kgf-m, 5.1 ft-lb)