

23. Air Breather Hose

A: REMOVAL

1) Remove the air intake chamber. (Non-turbo model)


<Ref. to IN(H4SO)-6, REMOVAL, Air Intake Chamber.>

2) Remove the intercooler. (Turbo model)

<Ref. to IN(H4DOTC)-11, REMOVAL, Intercooler.>


3) Disconnect the air breather hose.

- Non-turbo model

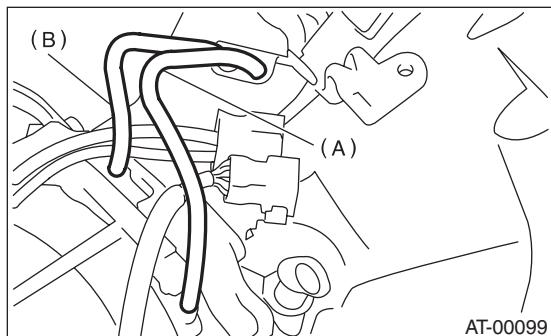

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

- Turbo model

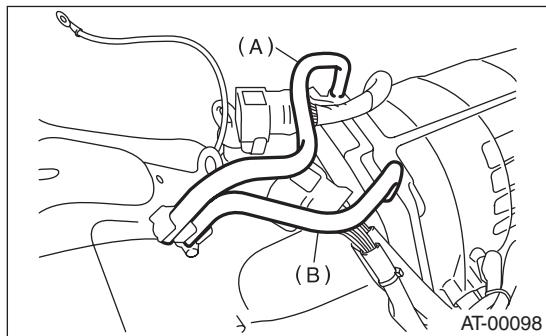


(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

B: INSTALLATION


1) Install the air breather hose.

- Non-turbo model

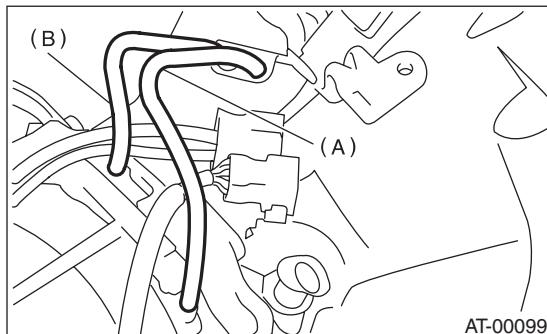

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

- Turbo model

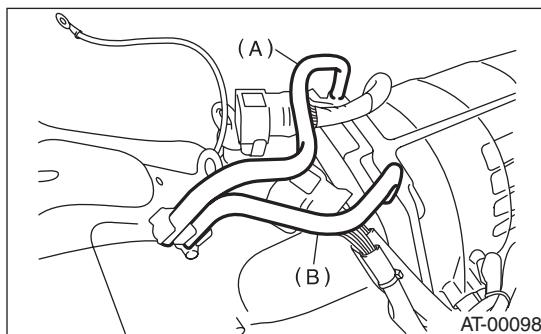

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

2) Install the air intake chamber. (Non-turbo model)

<Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Chamber.>

3) Install the intercooler. (Turbo model)

<Ref. to IN(H4DOTC)-11, INSTALLATION, Intercooler.>

C: INSPECTION

Make sure the hose is not cracked or clogged.