

General Diagnostic Table

CONTROL SYSTEMS

9. General Diagnostic Table

A: INSPECTION

Symptoms	Problem parts
Shift lock does not function.	<ul style="list-style-type: none">• Stop light switch• Shift lock solenoid• Body integrated unit
Shift lock cannot be released.	<ul style="list-style-type: none">• Stop light switch• Shift lock solenoid• Body integrated unit• Inhibitor switch
Key interlock does not function.	<ul style="list-style-type: none">• Key warning switch• “P” range switch• Key lock solenoid• Body integrated unit
Key interlock cannot be released.	<ul style="list-style-type: none">• Key warning switch• “P” range switch• Key lock solenoid• Body integrated unit
Starter does not run.	<ul style="list-style-type: none">• Inhibitor switch• Select cable• Starter circuit
Back-up light does not illuminate.	<ul style="list-style-type: none">• Inhibitor switch• Select cable• Back-up light circuit
Gear can be shifted from “N” to “R” during driving.	<ul style="list-style-type: none">• Shift lock solenoid• TCM