

General Description

AIRBAG SYSTEM (DIAGNOSTICS)

3. General Description

A: CAUTION

Refer to "CAUTION" in "General Description" in Airbag System. <Ref. to AB-9, CAUTION, General Description.>

B: INSPECTION

Measure the battery voltage and check electrolyte.

Standard voltage: 12 V

Specific gravity: 1.260 or more

 
C: PREPARATION TOOL

CAUTION:

 
To measure the voltage and resistance of airbag system component, be sure to use the specified test harness.

1. SPECIAL TOOL

 
- Subaru Select Monitor

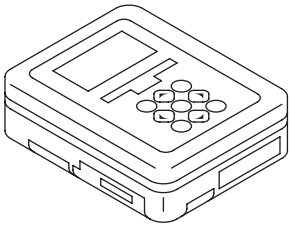ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

- TEST HARNESS H

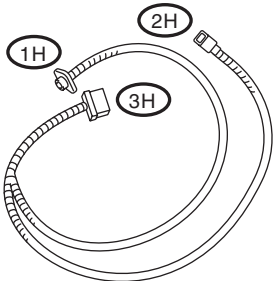 
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299FA030	98299FA030	TEST HARNESS H	Used when measuring voltage and resistance of front sub sensor and front door impact sensor.

General Description

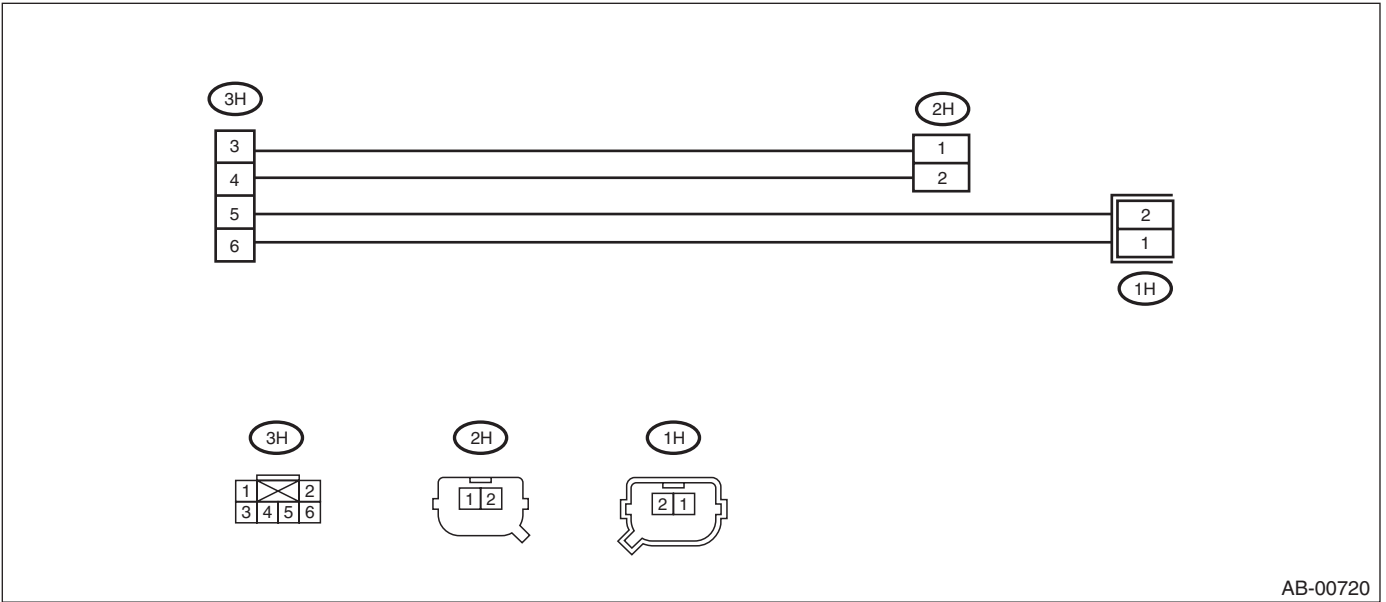

• TEST HARNESS N

 
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
ST98299SA000	98299SA000	TEST HARNESS N	Used when measuring voltage and resistance of driver's airbag module, seat belt pretensioner and curtain airbag module.

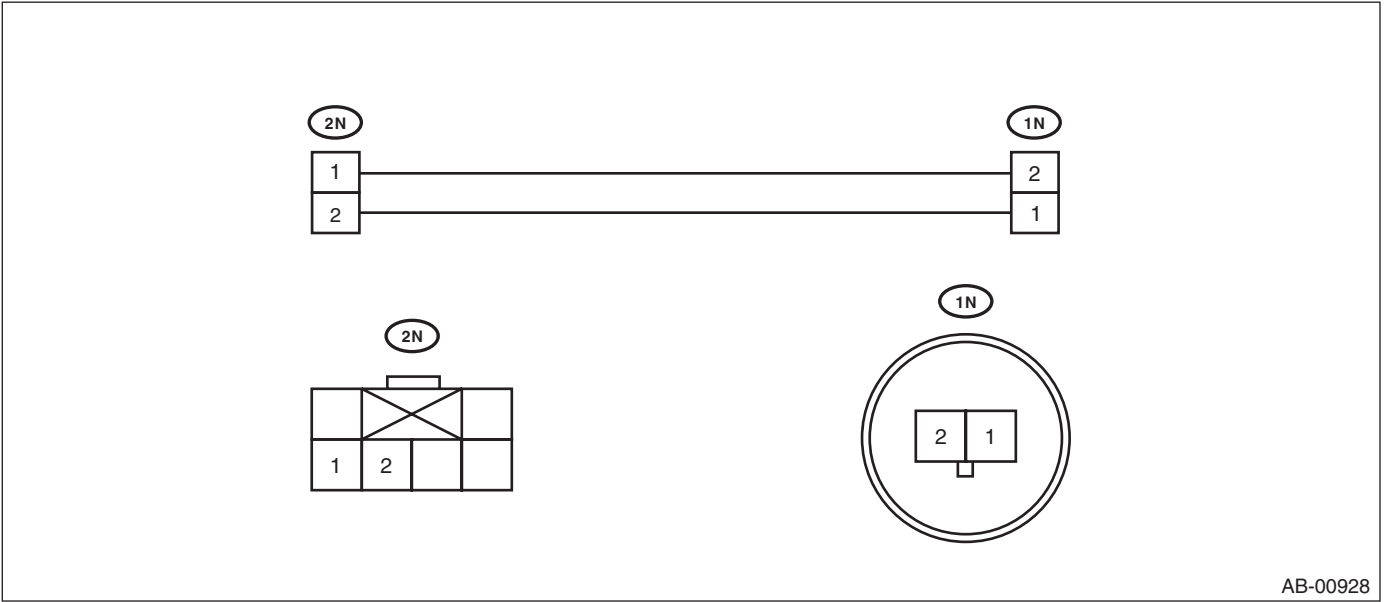 


General Description

 
AIRBAG SYSTEM (DIAGNOSTICS)

• TEST HARNESS Q

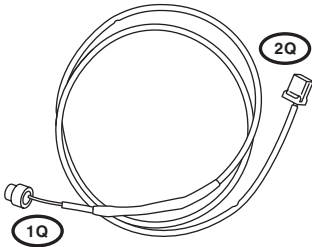ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299SA040	98299SA040	TEST HARNESS Q	Used when measuring voltage and resistance of driver's airbag module.

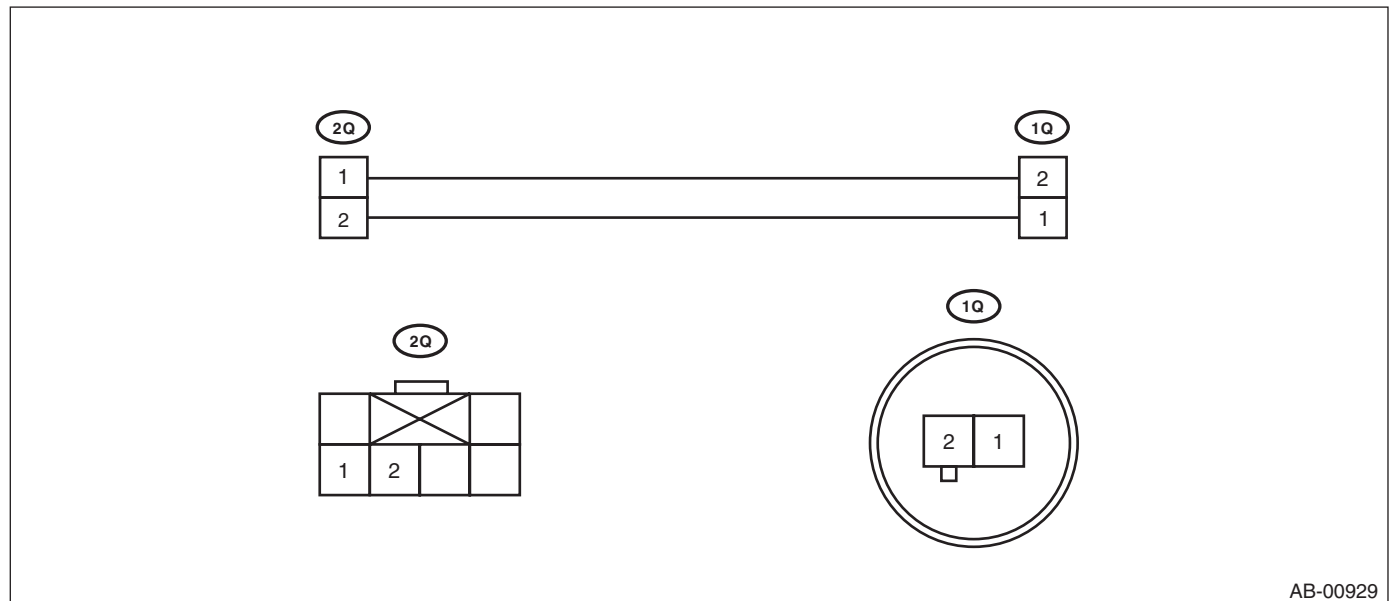 


• TEST HARNESS AG

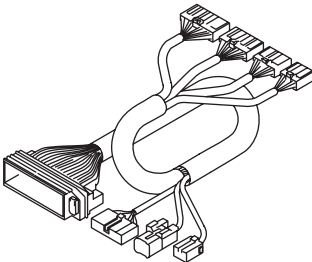ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG070	98299AG070	TEST HARNESS AG	Used when measuring voltage and resistance of airbag control module.

General Description

 
AIRBAG SYSTEM (DIAGNOSTICS)

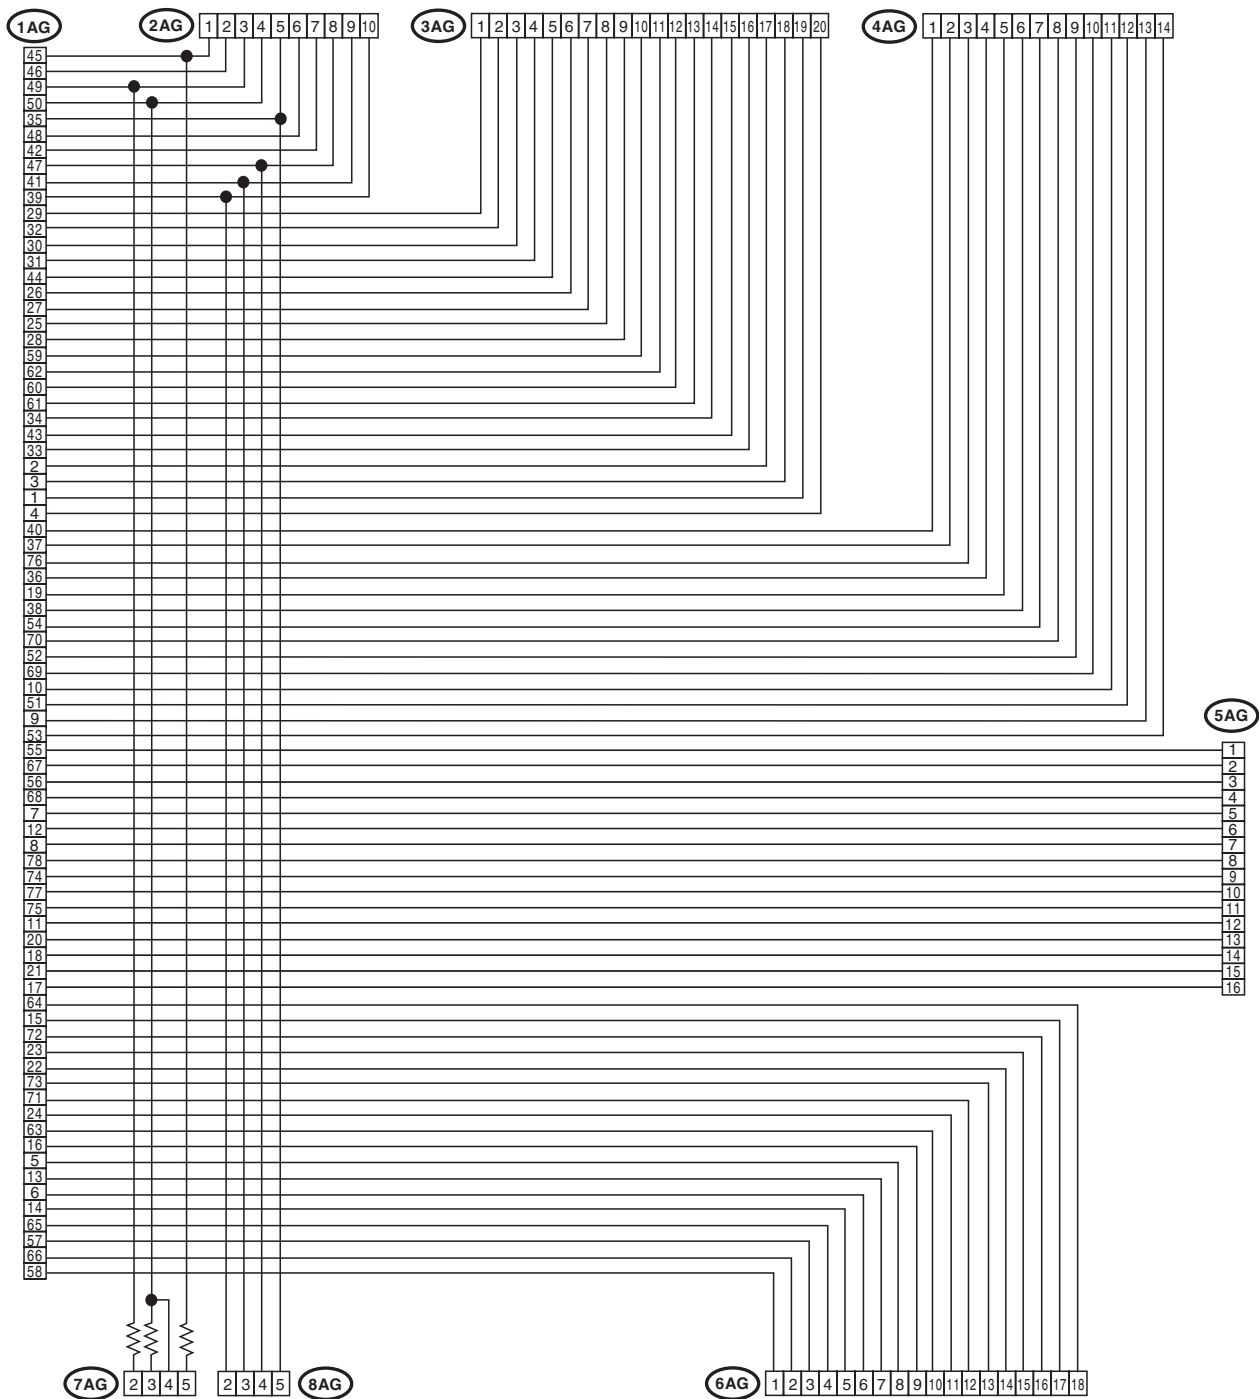

AB-01902

 
General Description

AIRBAG SYSTEM (DIAGNOSTICS)

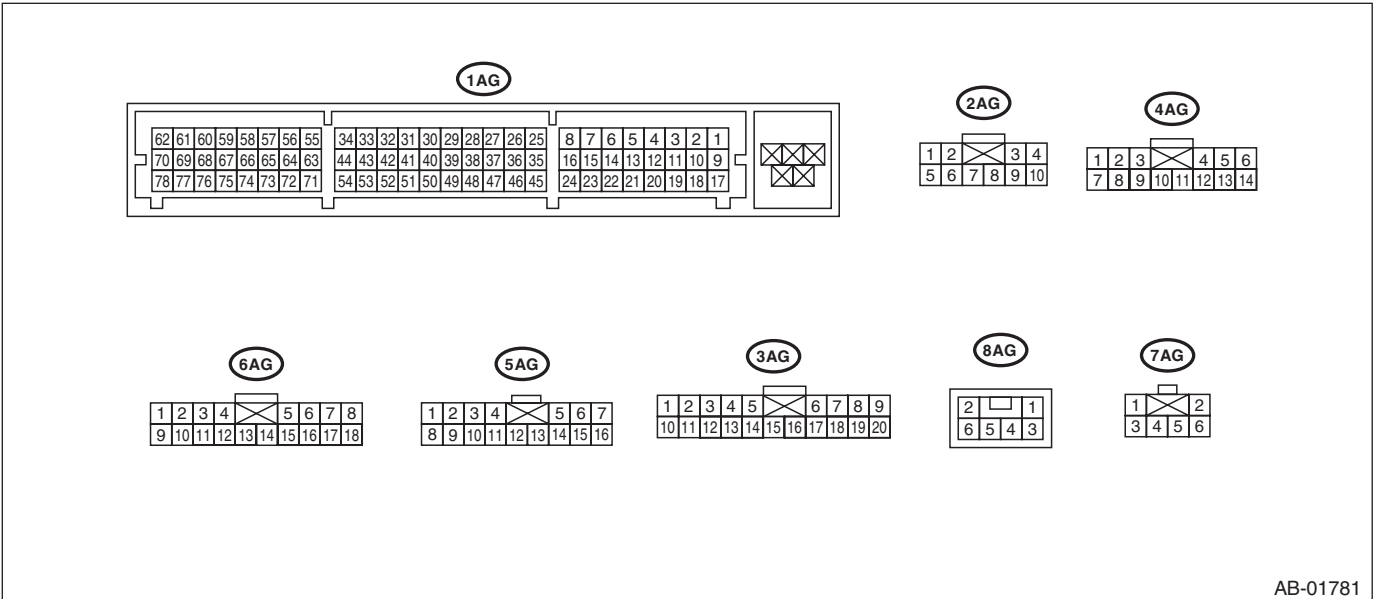

 
• TEST HARNESS V

 
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
ST98299AG010	98299AG010	TEST HARNESS V	Used when measuring voltage and resistance of side airbag sensor and curtain airbag sensor.

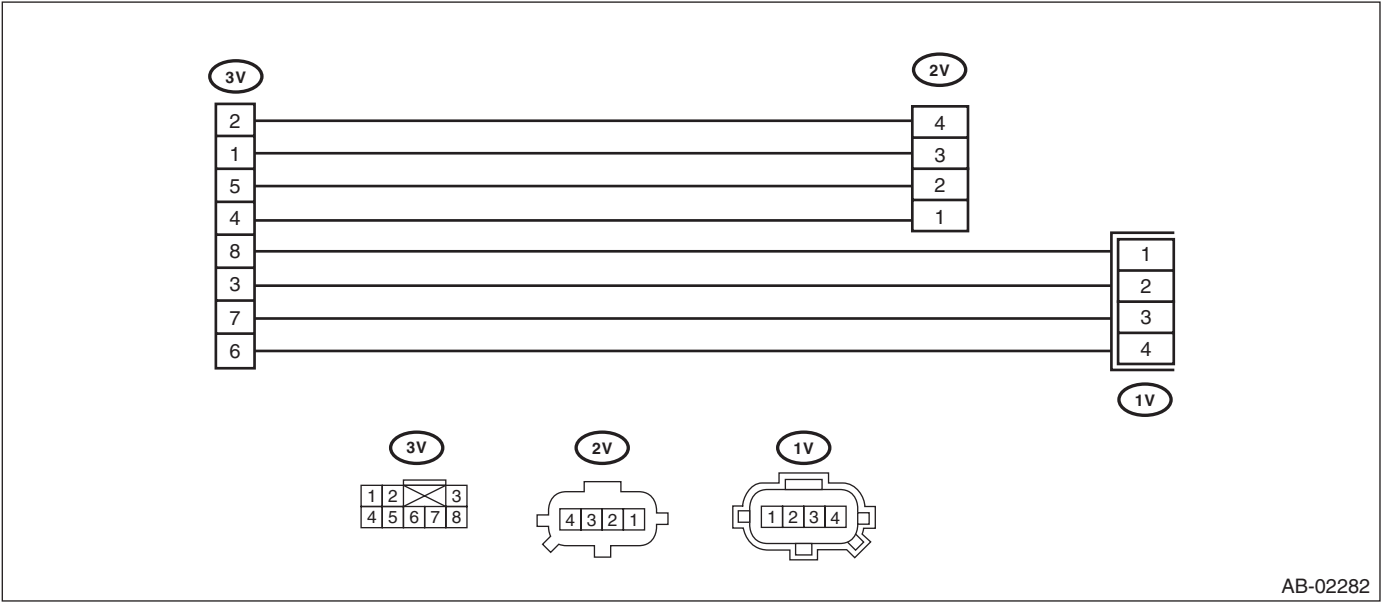

General Description

• AIRBAG RESISTOR

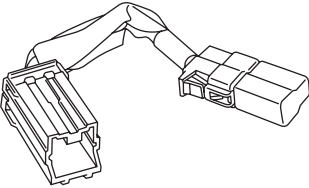 
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299PA040	98299PA040	AIRBAG RESISTOR	Used in replacement of airbag module for which resistance value is same as airbag module. Two STs are required for diagnosis of two-stage inflator type airbag module.

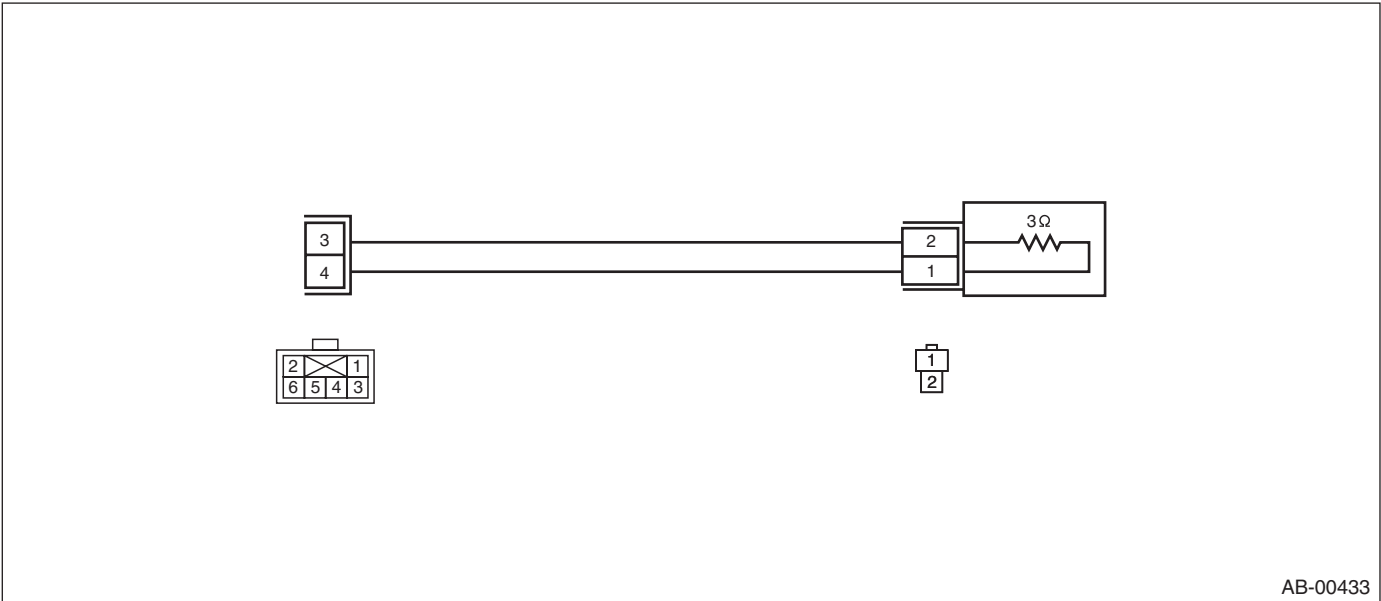 


General Description

AIRBAG SYSTEM (DIAGNOSTICS)

• TEST HARNESS AJ

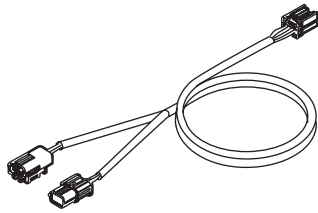 
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299FG000	98299FG000	TEST HARNESS AJ	Used when measuring power supply and resistance of side airbag harness.

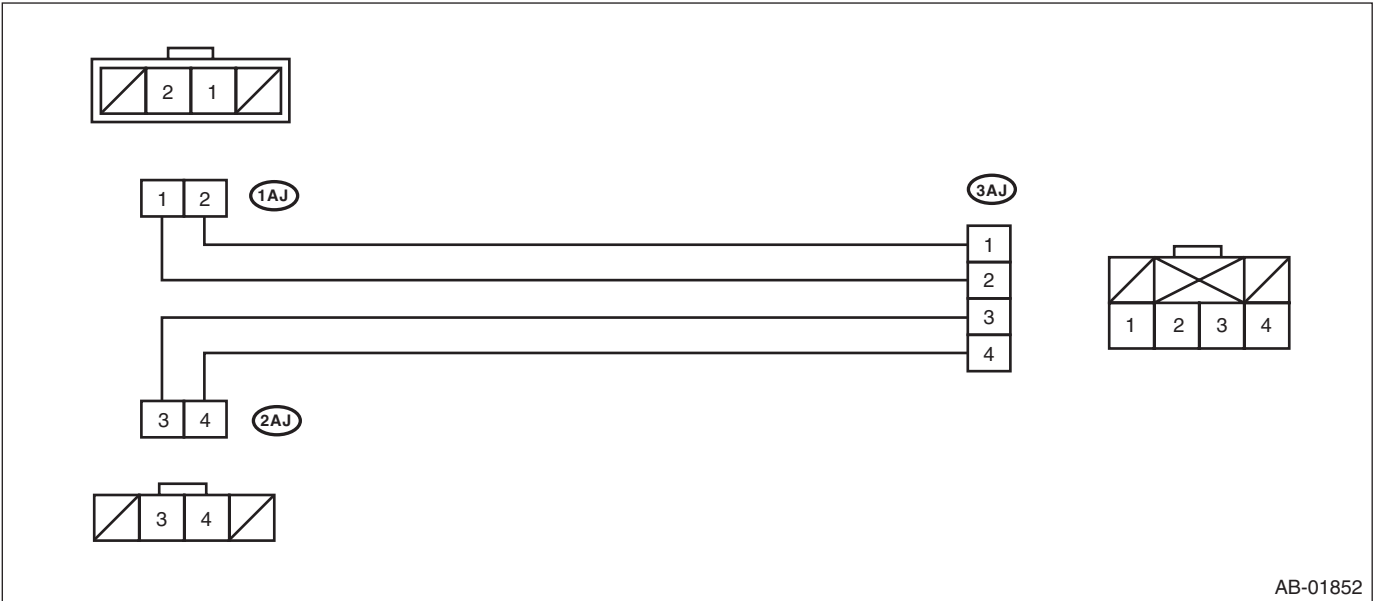 


General Description

AIRBAG SYSTEM (DIAGNOSTICS)

• TEST HARNESS AI

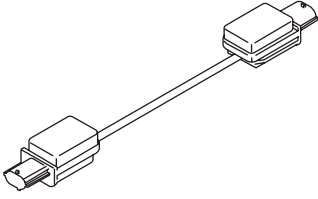ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST98299AG090	98299AG090	TEST HARNESS AI	- Used for diagnoses of side airbag sensor and curtain airbag sensor. - Used together with test harness V.

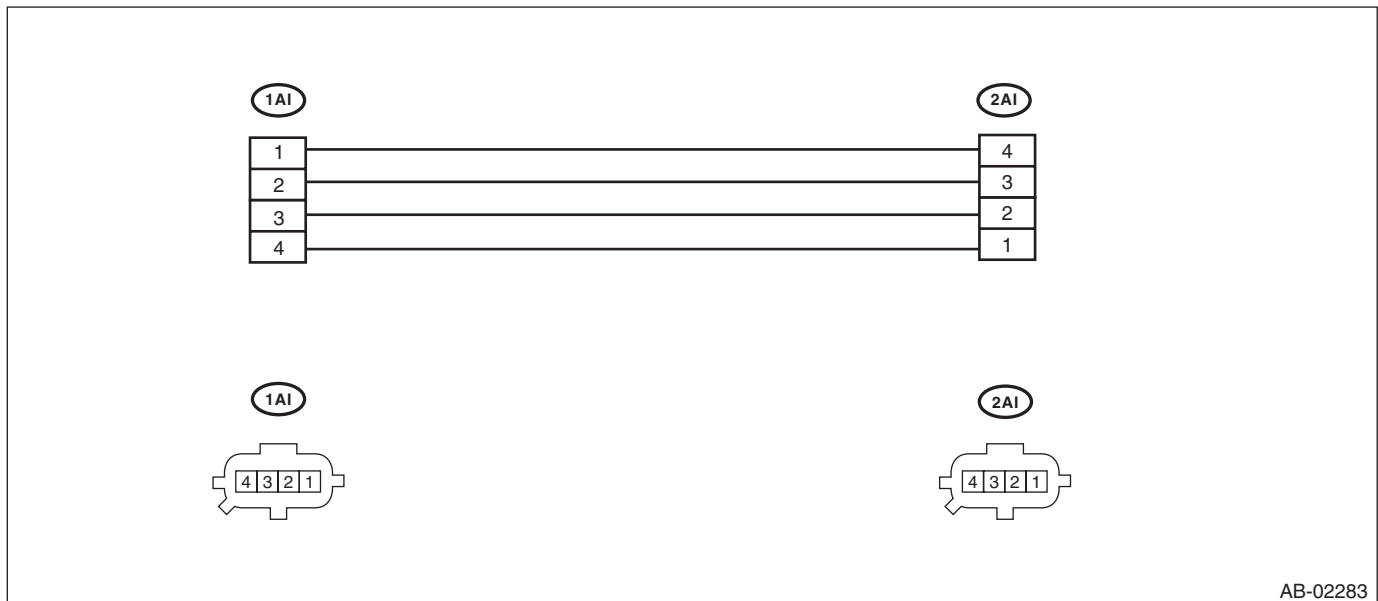

2. GENERAL TOOL

 
TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.
Oscilloscope	Used for measuring the sensor.
Probe	Used when measuring voltage and resistance of passenger's airbag module.

General Description

AIRBAG SYSTEM (DIAGNOSTICS)

3. HOW TO USE PROBE

Insert the probe into the harness hole, and contact it with the terminal.

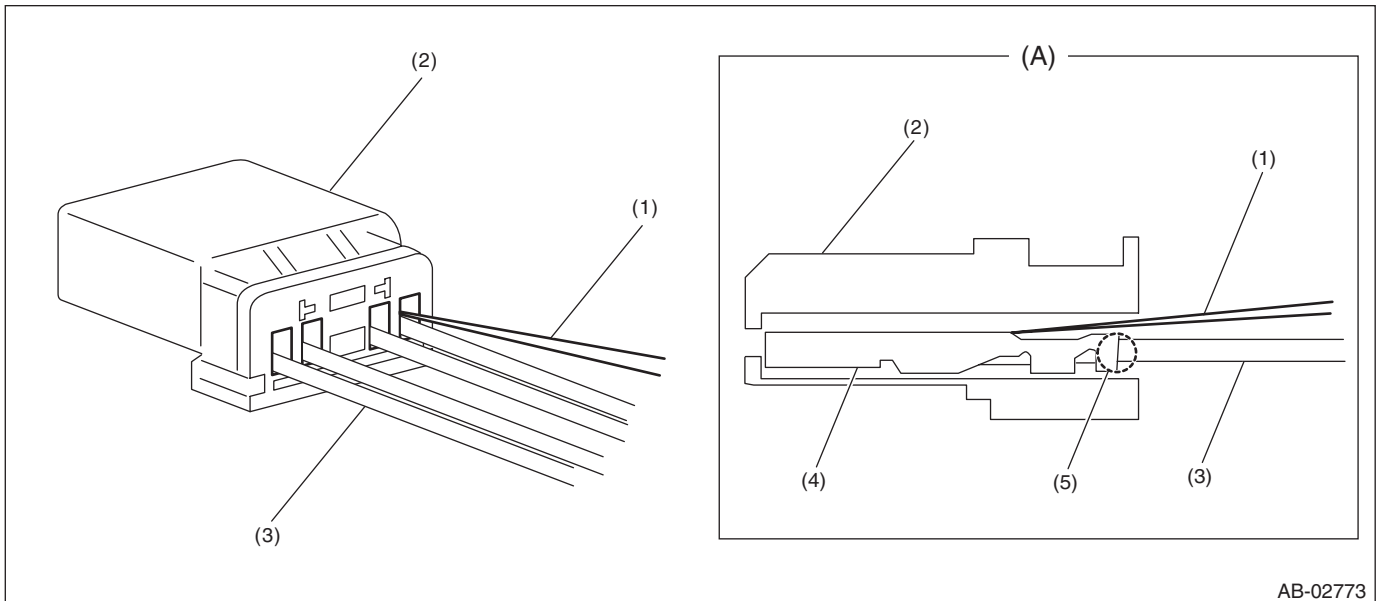

(A) Cross section

(1) Probe

(3) Harness

(5) Connection

(2) Connector (housing)

(4) Terminal

CAUTION:

- Do not insert the probe forcibly.
- Be careful not to contact it to the connection (5) between the terminal and harness. (Harness will come off easily from connector if doing so.)