


## 4. Electrical Component Location

### A: LOCATION

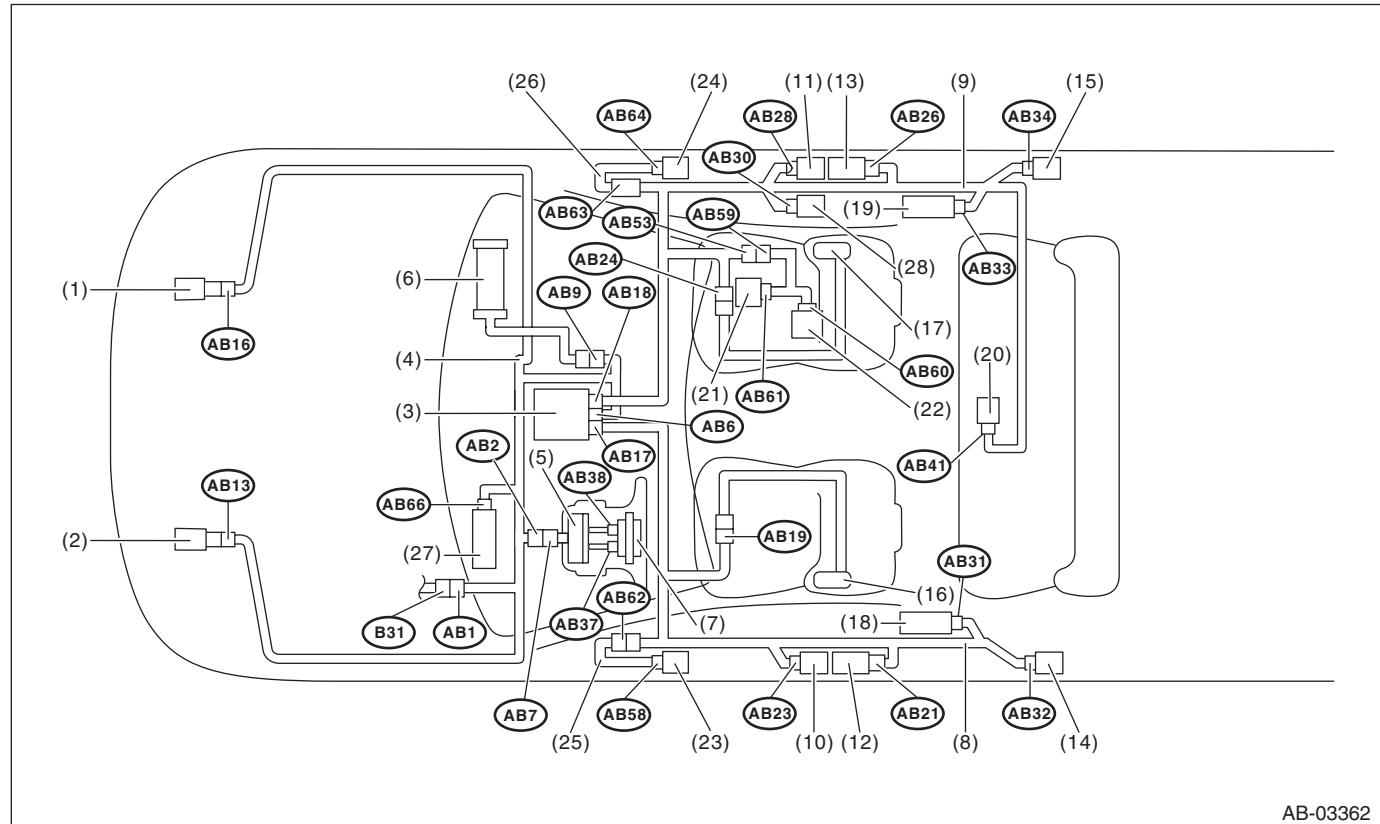

(1) Front sub sensor RH	(11) Side airbag sensor RH	(20) Satellite safing sensor
(2) Front sub sensor LH	(12) Seat belt pretensioner LH	(21) Occupant detection control module
(3) Airbag control module	(13) Seat belt pretensioner RH	(22) Buckle switch RH
(4) Airbag main harness	(14) Curtain airbag sensor LH	(23) Front door impact sensor LH
(5) Roll connector	(15) Curtain airbag sensor RH	(24) Front door impact sensor RH
(6) Passenger's airbag inflator	(16) Side airbag inflator LH	(25) Door harness LH
(7) Driver's airbag inflator	(17) Side airbag inflator RH	(26) Door harness RH
(8) Airbag rear harness LH	(18) Curtain airbag inflator LH	(27) Knee airbag inflator
(9) Airbag rear harness RH	(19) Curtain airbag inflator RH	(28) Lap seat belt pretensioner RH
(10) Side airbag sensor LH		

## Electrical Component Location

### AIRBAG SYSTEM (DIAGNOSTICS)

---

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB21)	(AB23)
Pin	2	4	30	4	4	2	2	24	24	4	2	4
Color	Gray	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Black	Yellow
Male/Female	Male	Female	Female	Male	Female							
Connector No.	(AB24)	(AB26)	(AB28)	(AB30)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)	(AB41)	(AB53)
Pin	4	2	4	2	2	4	2	4	2	2	2	3
Color	Yellow	Black	Yellow	Orange	Black	Yellow	Black	Yellow	Orange	Black	Yellow	Dark gray
Male/Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Male
Connector No.	(AB58)	(AB59)	(AB60)	(AB61)	(AB62)	(AB63)	(AB64)	(AB66)				
Pin	2	3	2	6	2	2	2	2				
Color	Yellow	Dark gray	Yellow	Black	Yellow	Yellow	Yellow	Black				
Male/Female	Female	Female	Male	Female	Female	Female	Female	Female				