

6. Front Speaker

A: REMOVAL

1. TWEETER

- 1) Disconnect the ground cable from battery.
- 2) Remove the speaker assembly - tweeter.
 - (1) Release the clips and claws, then detach the grille speaker side.

NOTE:


Remove the grille speaker side by using a plastic remover.

- (2) Remove the screws.

PREPARATION TOOL:

Stubby screwdriver

- (3) Disconnect the connector and remove the speaker assembly - tweeter.

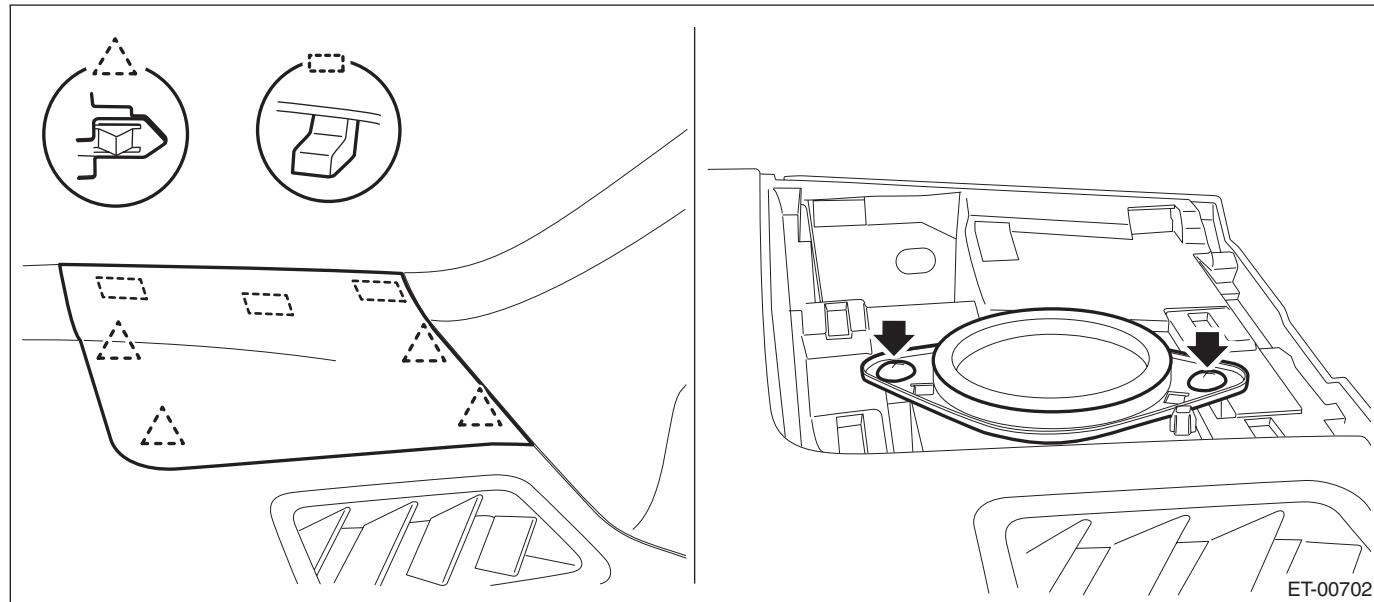


2. DOOR SPEAKER

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - front door. <Ref. to EI-55, FRONT DOOR, REMOVAL, Door Trim.>
- 3) Remove the front door speaker assembly.
 - (1) Disconnect the connector.
 - (2) Remove the screws to remove the front door speaker assembly.

CAUTION:

Be careful not to damage the claw for temporary retention.

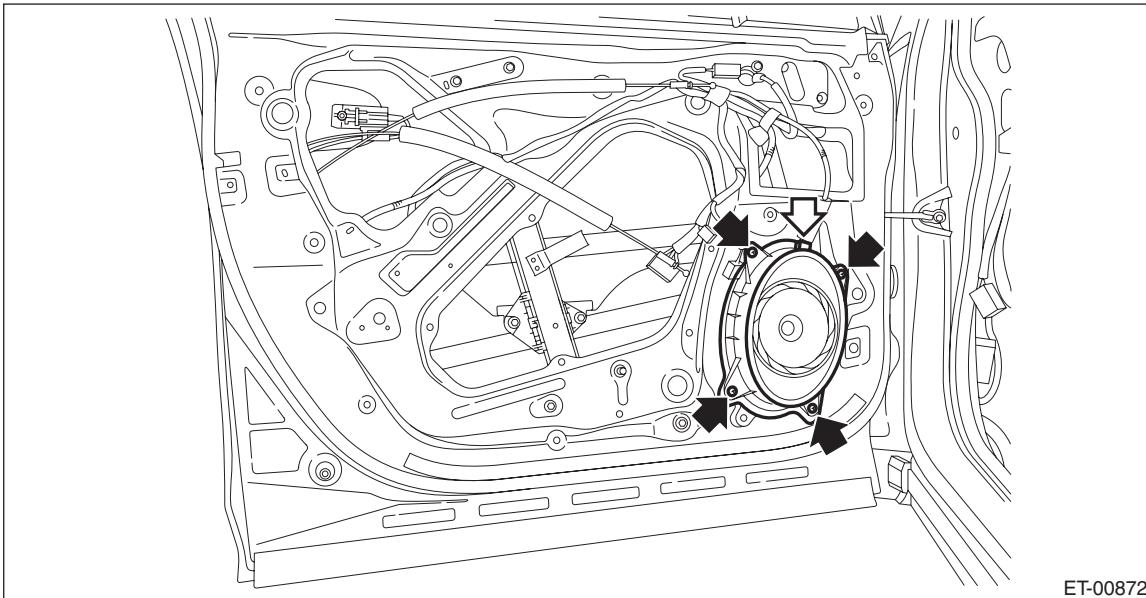

B: INSTALLATION

Install each part in the reverse order of removal.