

7. Rear Speaker


A: REMOVAL

1. TWEETER

NOTE:


harman/kardon® audio system only.

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear door. <Ref. to EI-56, REAR DOOR, REMOVAL, Door Trim.>
- 3) Remove the speaker assembly - tweeter.
 - (1) Disconnect the connector.
 - (2) Remove the screws and remove the speaker assembly - tweeter.

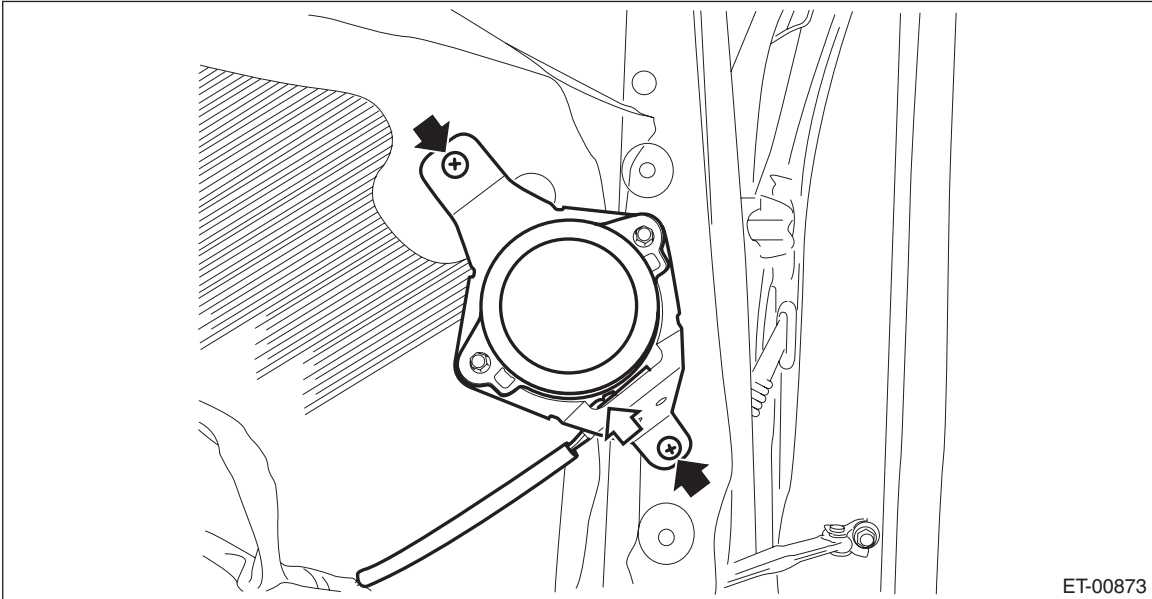

NOTE:

As necessary, remove the bracket from the speaker assembly - tweeter.

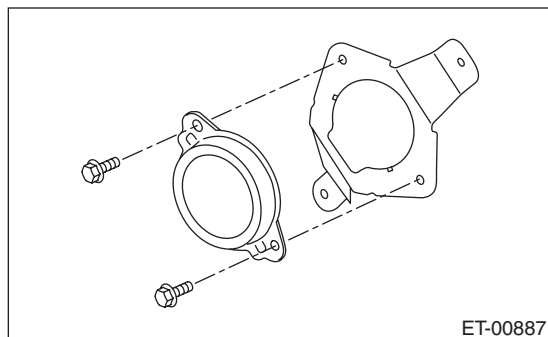


2. DOOR SPEAKER

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear door. <Ref. to EI-56, REAR DOOR, REMOVAL, Door Trim.>
- 3) Remove the rear speaker assembly.
 - (1) Disconnect the connector.
 - (2) Remove the screws to remove the rear speaker assembly.

CAUTION:

Be careful not to damage the claw for temporary retention. (Model without harman/kardon® audio system)

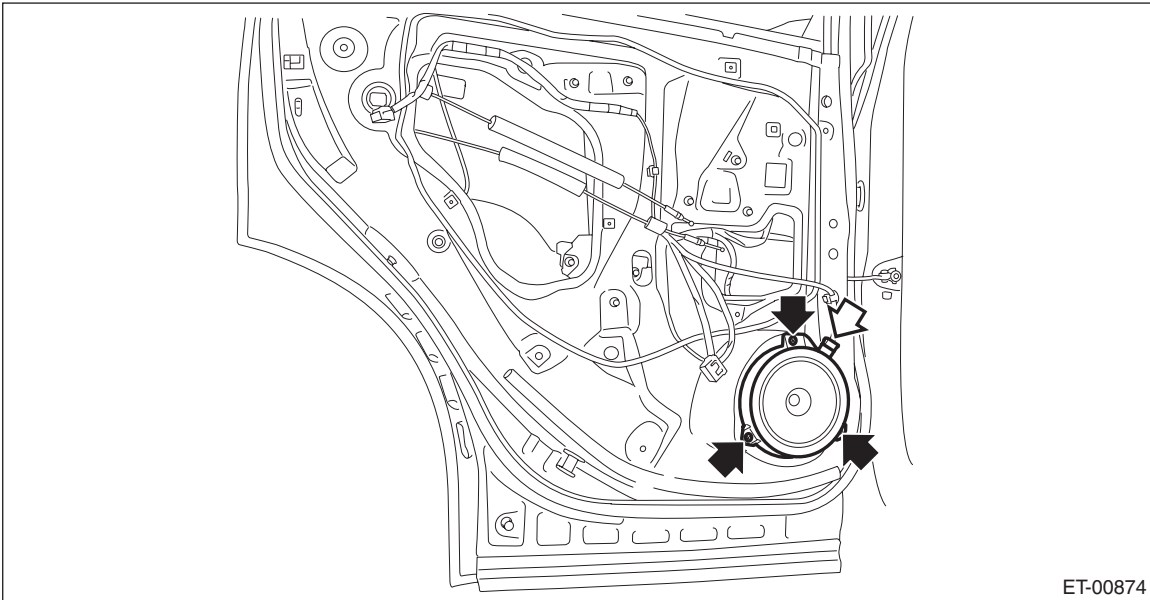

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

If the bracket is removed from the speaker assembly - tweeter, tighten it with the following torque.

Tightening torque:

4.5 N·m (0.46 kgf-m, 3.3 ft-lb)