

## 10. Weather Strip


### A: REPLACEMENT

#### 1. FLANGE

1) Remove the weather strip - body side flange while pulling the rubber. Be careful not to tear the rubber.

NOTE:

While removing, be careful not to damage the clips attached to the weather strip - body arch.

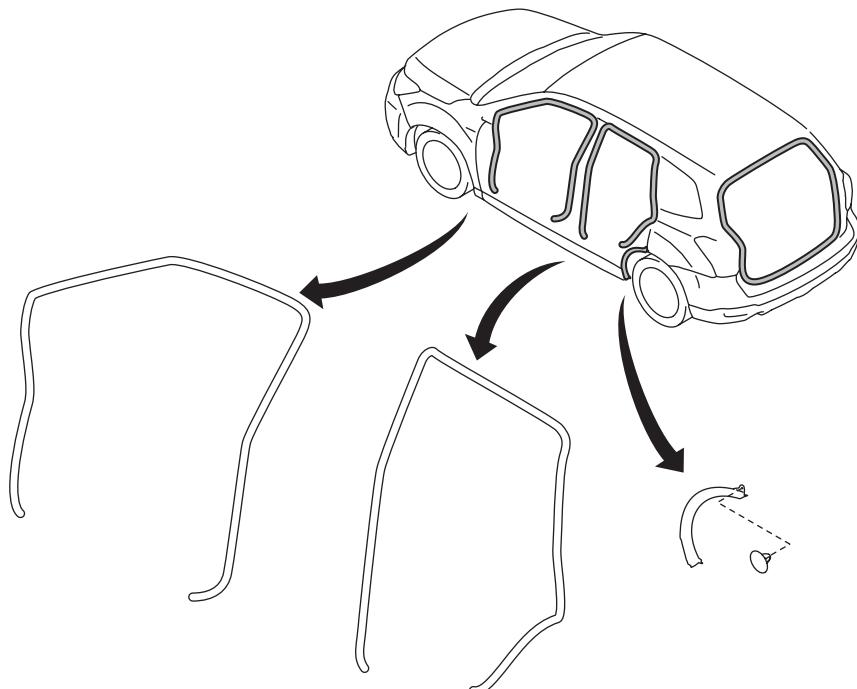

EB-00883


# Weather Strip

## EXTERIOR BODY PANELS

2) Replace the weather strip - rear gate while pulling the rubber. Be careful not to tear the rubber.

### NOTE:

While removing the weather strip - rear gate, be careful not to allow adhesive to contact the trim panel - roof assembly and trim panel - trunk side.

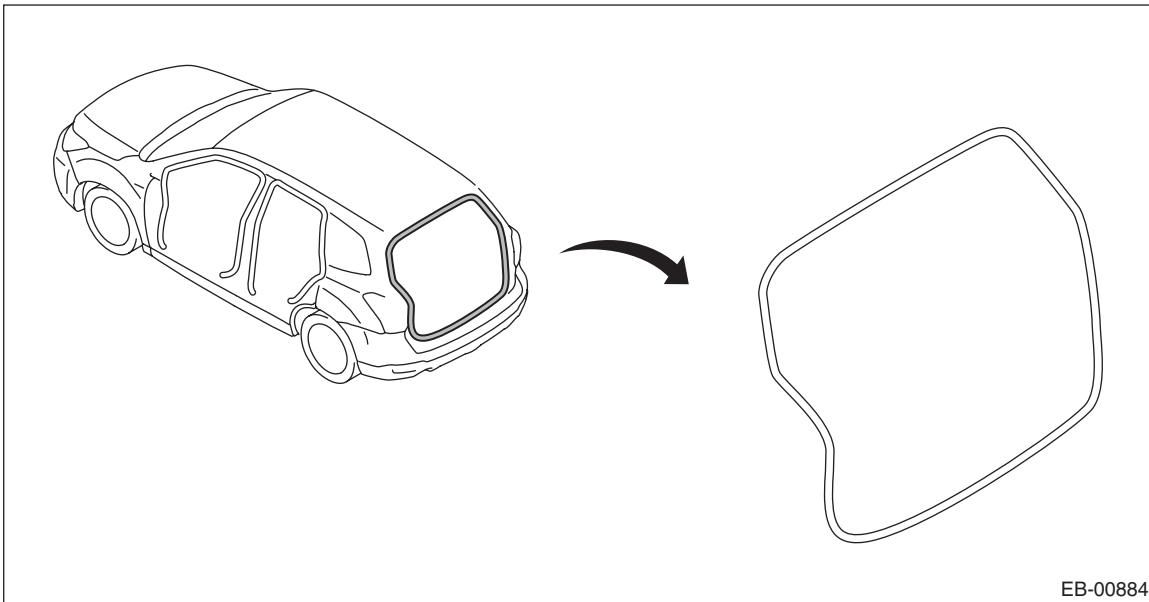


## 2. DOOR

1) Remove the weather strip after removing the clip. Be careful not to tear the rubber.


### CAUTION:

**If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.**

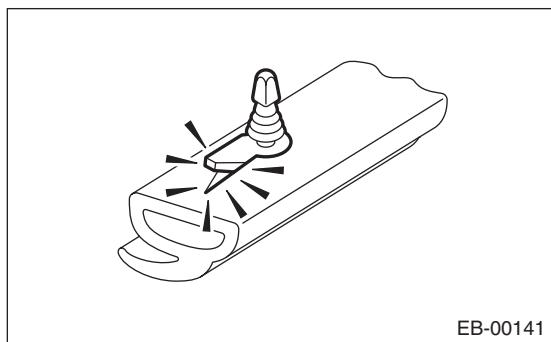

# Weather Strip

## EXTERIOR BODY PANELS

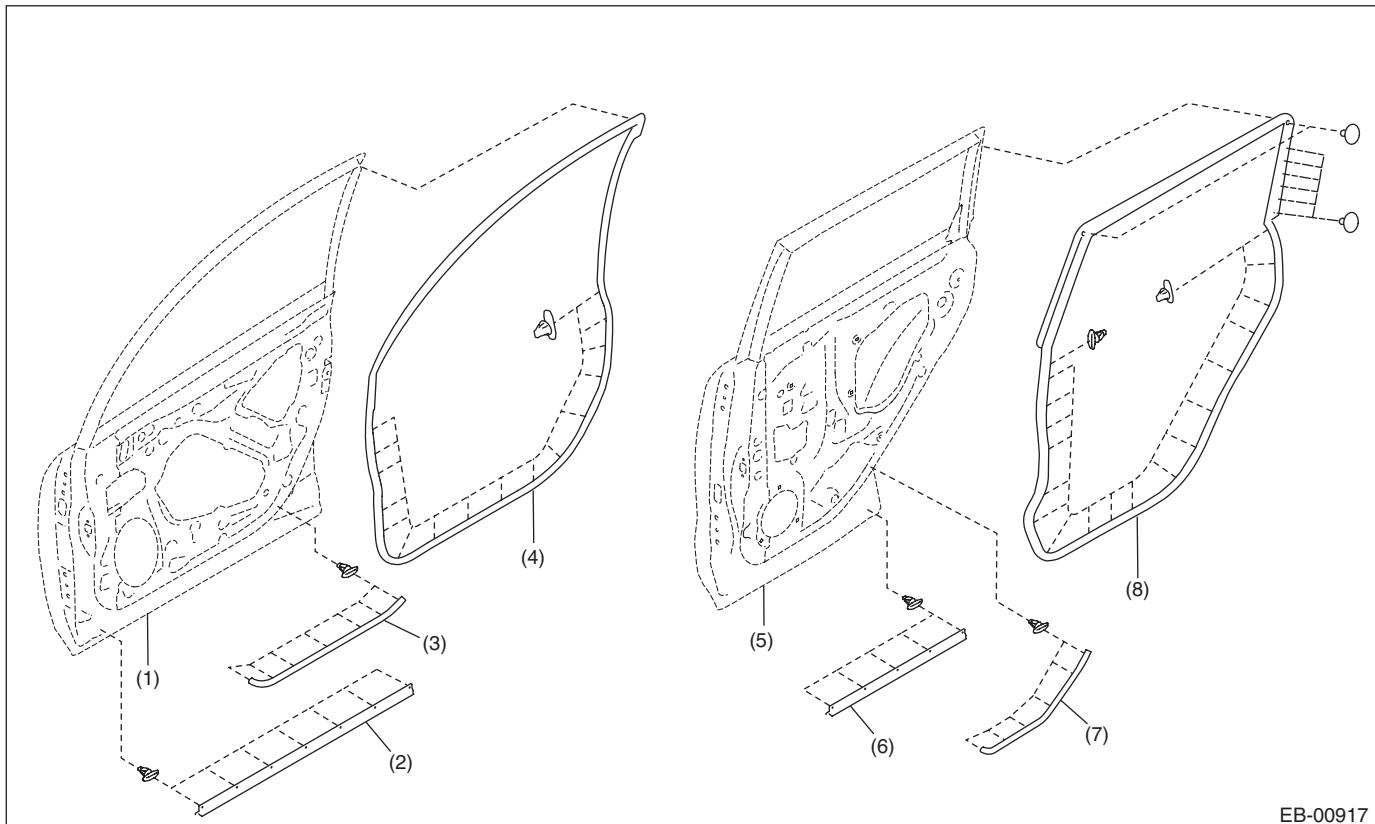

EB-00917

(1) Panel ASSY - front door	(4) Weather strip - front door	(7) Weather strip - rear door - lower
(2) Weather strip - front door - side sill	(5) Panel ASSY - rear door	(8) Weather strip - rear door
(3) Weather strip - front door - lower	(6) Weather strip - rear door - side sill	

## **Weather Strip**

EXTERIOR BODY PANELS

---

# POWER REAR GATE SYSTEM

**PRG**

---

	Page
1. General Description .....	2
2. Relay and Fuse .....	7
3. Power Rear Gate System .....	8
4. Power Rear Gate Control Module .....	9
5. Power Rear Gate Drive Unit .....	10
6. Power Rear Gate Rod .....	15
7. Power Rear Gate Auto Closer .....	17
8. Power Rear Gate Touch Sensor .....	21
9. Power Rear Gate Buzzer .....	22
10. Power Rear Gate Inner Switch .....	23
11. Power Rear Gate Driver's Switch .....	24
12. Memory Height Switch .....	25
13. Rear Gate Opener Button .....	27
14. Body Integrated Unit .....	28
15. Turn Signal Light & Hazard Light Unit .....	29
16. Diagnostics with Phenomenon .....	30