


### 3. Front Fender

#### A: REMOVAL

1) Disconnect the ground cable from battery.

2) Remove the bumper face - front.

(1) Remove the screws and clips, and turn over the mud guard - front, and then disconnect the connectors of the fog light assembly - front on the LH and RH sides. (Model with fog light)

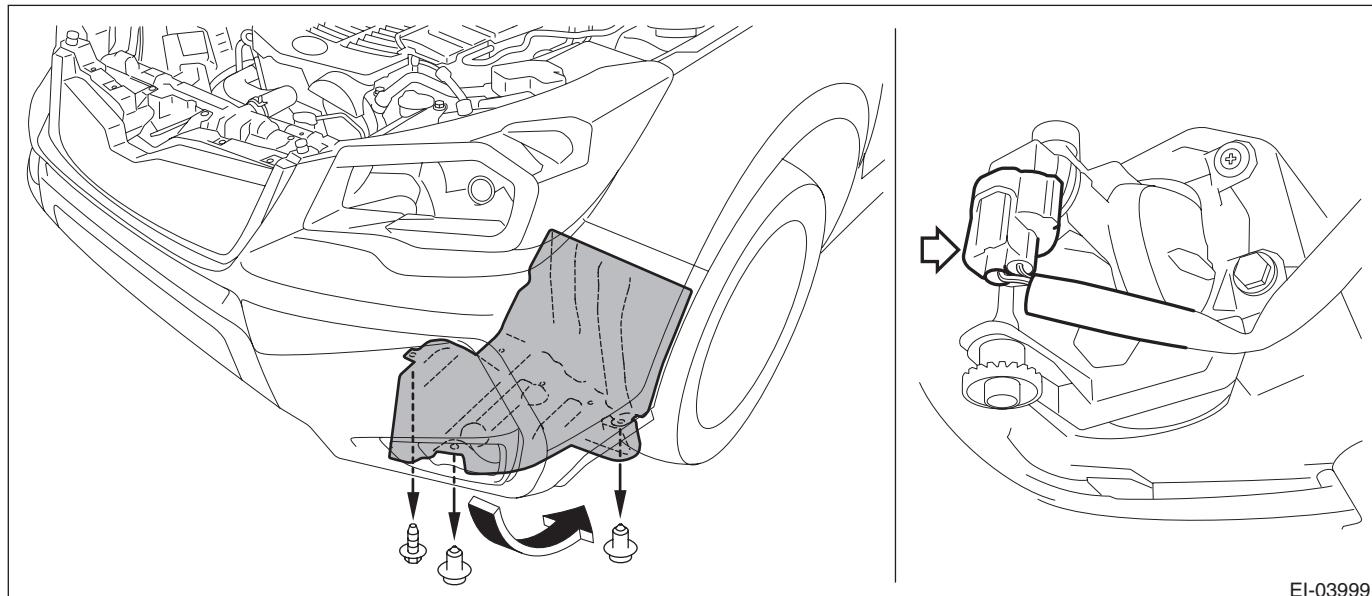


EI-03999

(2) Remove the clips at the upper side of the bumper face - front.

(3) Remove the clips from the fender.

(4) Remove the clips at the lower side of the bumper face - front.

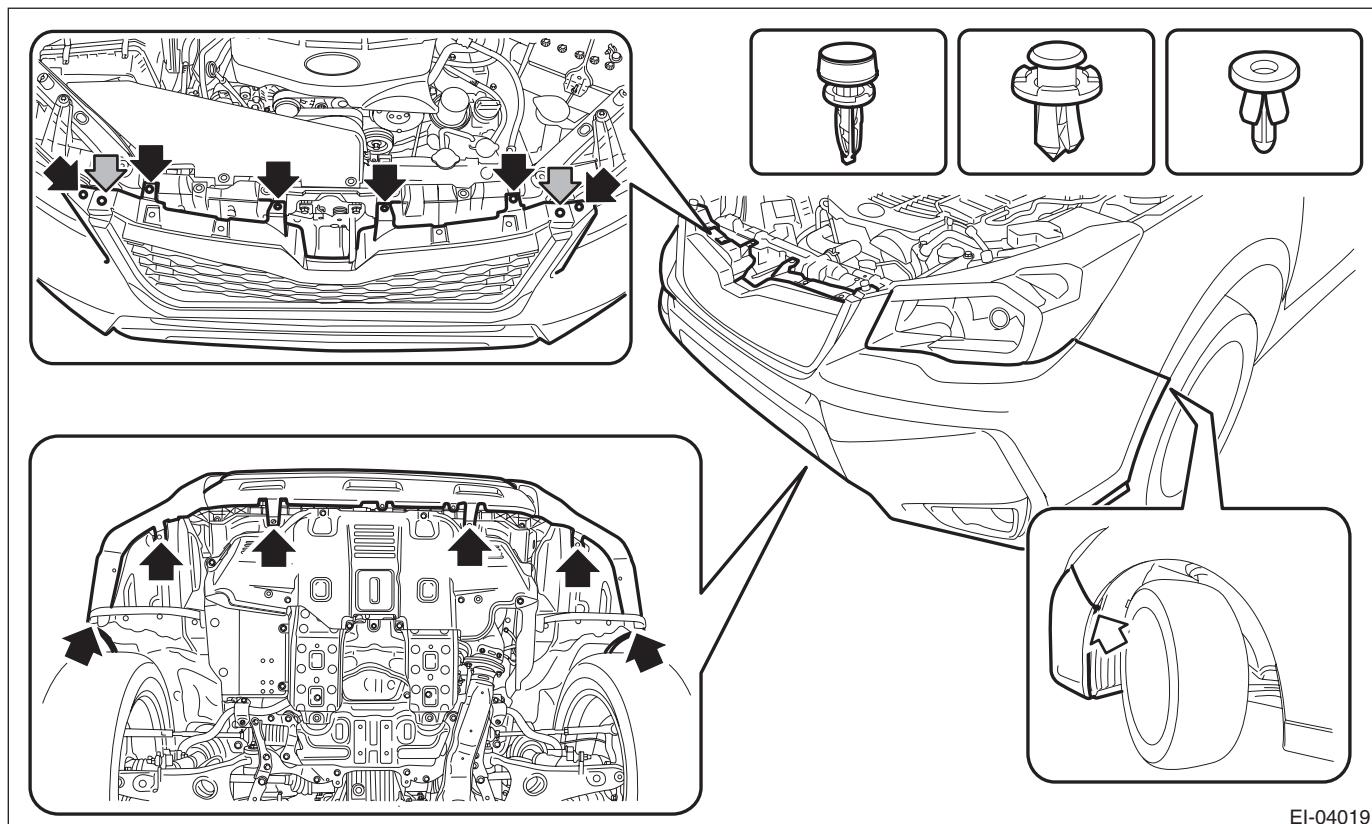

EI-04019

(5) Apply protective tape (A) to the light assembly - head.


## Front Fender

### EXTERIOR BODY PANELS

(6) Release the clips, and while pushing up the lower side (a) of the bumper face - front, remove in the order from (b) to (e).

#### CAUTION:

**Do not pull forcibly. It may damage the flange sections of the bumper face - front.**

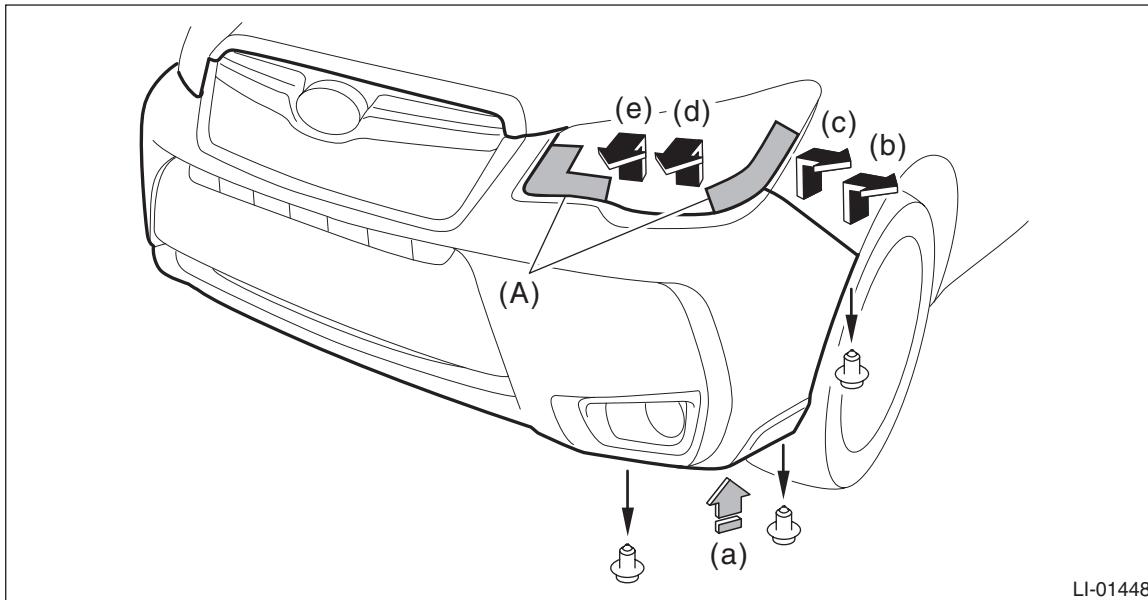


#### NOTE:

Detach the opposite side in the same manner.

3) Remove the cover - front fender.


(1) Remove the clip.

(2) Release the claws by pulling them forward, and remove the cover - front fender.

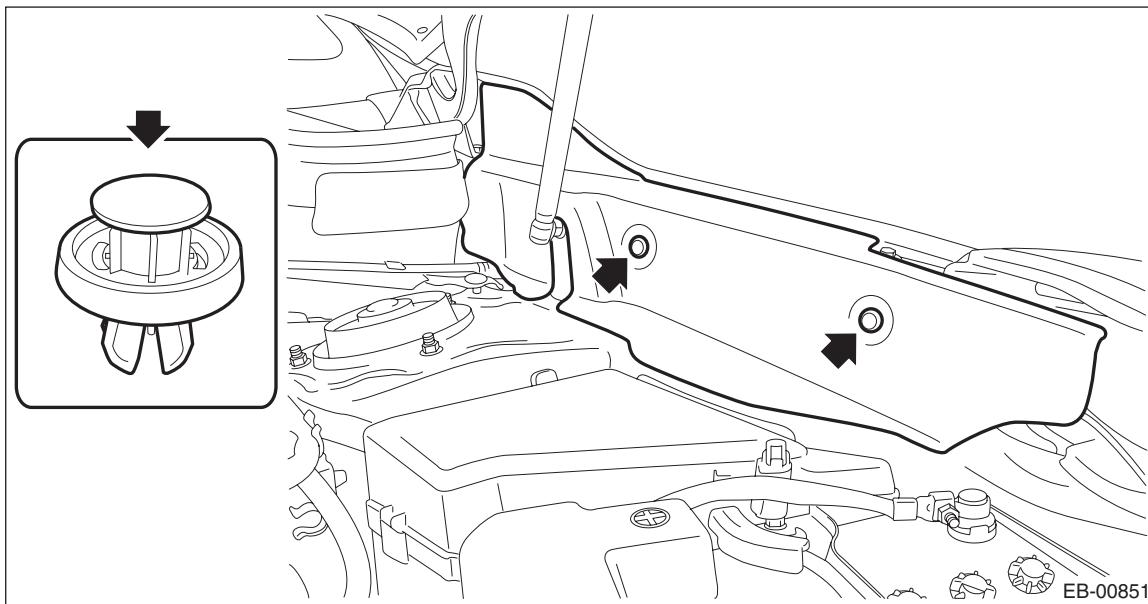

(3) Remove the light assembly - head. <Ref. to LI-26, WHEN REMOVING RH SIDE, REMOVAL, Head-light Assembly.>

4) Remove the clips, and turn over the mud guard - front (a).

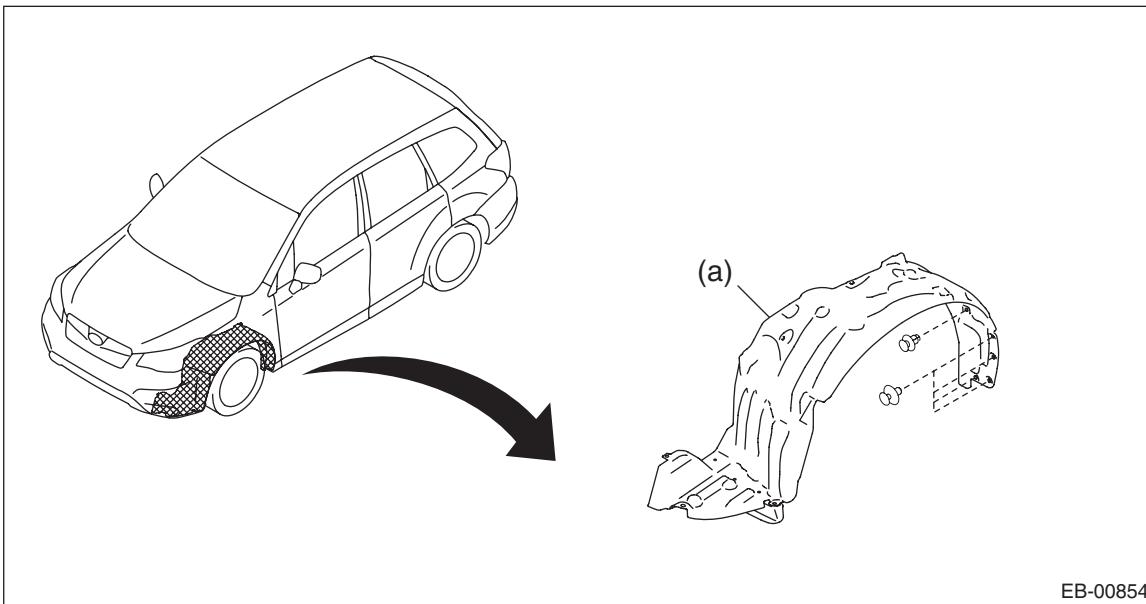


EB-00854

5) Remove the clips and remove the garnish assembly - fender.

NOTE:

- Forcibly removing the garnish assembly - fender may damage the clips.
- For easy removal of the clips, pinch the claw from the backside of fender COMPL - front with pliers, etc.

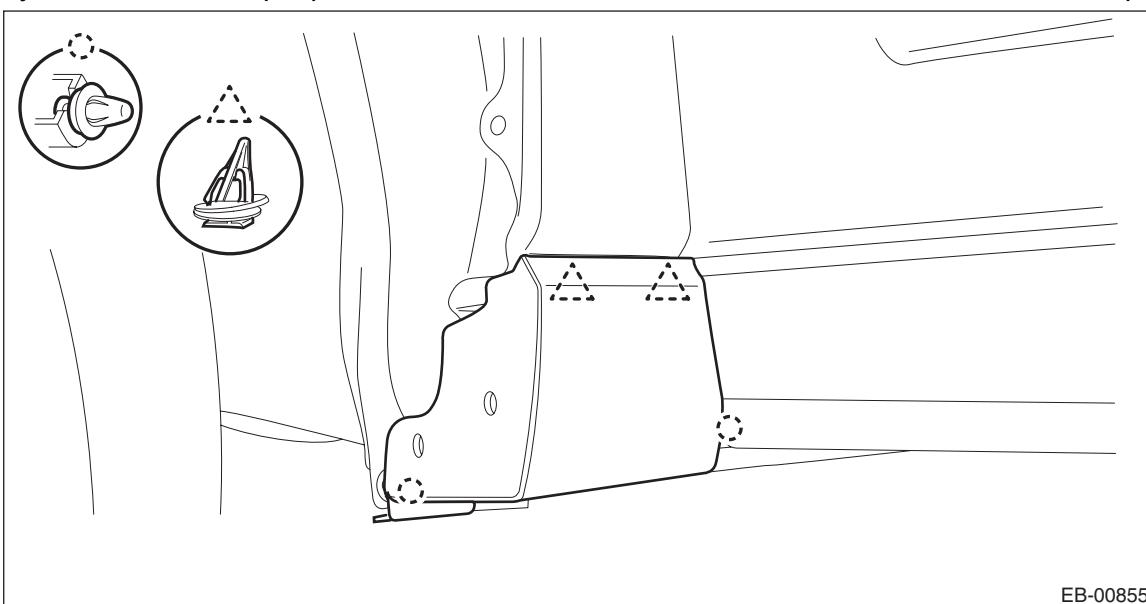


EB-00855

## Front Fender


### EXTERIOR BODY PANELS

6) Remove the clips, and remove the cover - front pillar assembly.

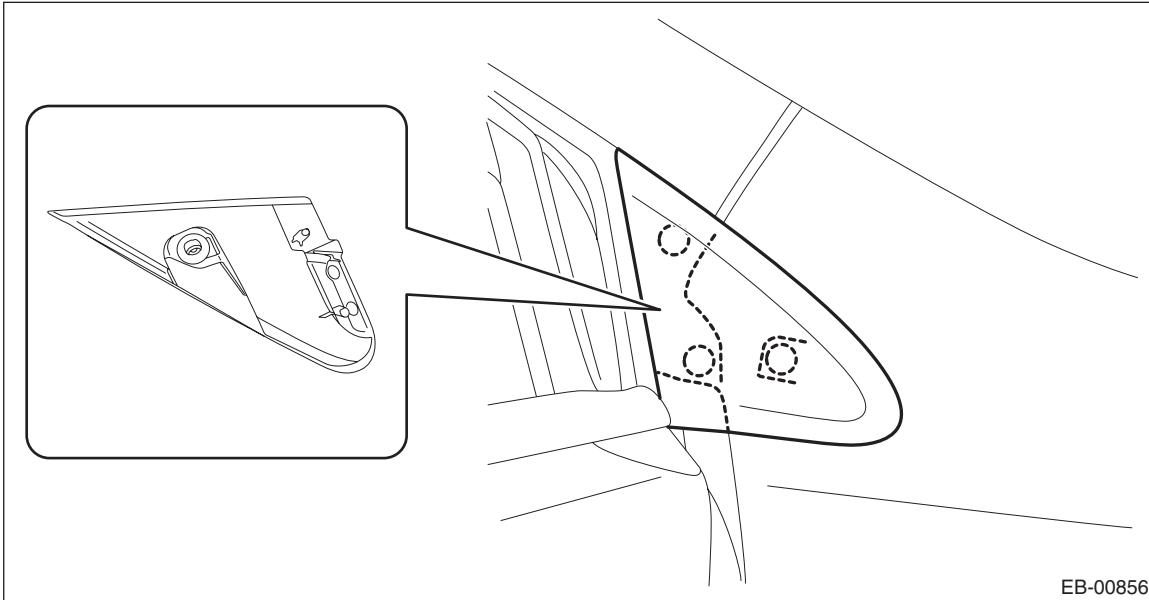

7) Remove the fender COMPL - front.

(1) Remove the bolts and nuts, and remove the fender COMPL - front.

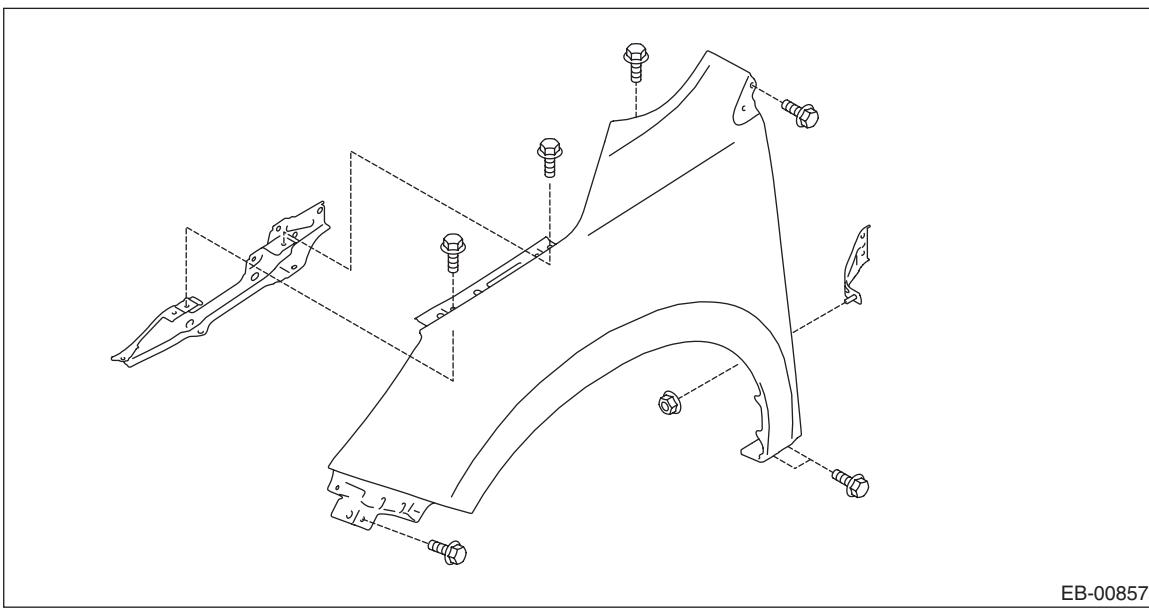

### B: INSTALLATION

1) Install each part in the reverse order of removal.

**CAUTION:**

**After installing the fender COMPL - front, be sure to perform headlight beam adjustment.**

**Tightening torque:**

**Fender COMPL - front: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

**Light assembly - head: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

**NOTE:**

When installing the fender COMPL - front, make sure that a uniform clearance is created around it.

- Fender COMPL - front to Hood COMPL - front: <Ref. to EB-19, ADJUSTMENT, Front Hood.>
- Fender COMPL - front to Panel assembly - front door: <Ref. to EB-33, ADJUSTMENT, Front Door.>

2) Adjust the headlight beam and fog light beam.

- Adjust the headlight beam. <Ref. to LI-31, HEADLIGHT BEAM ADJUSTMENT, ADJUSTMENT, Headlight Assembly.>
- Adjust the fog light beam. (Model with fog light) <Ref. to LI-47, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>