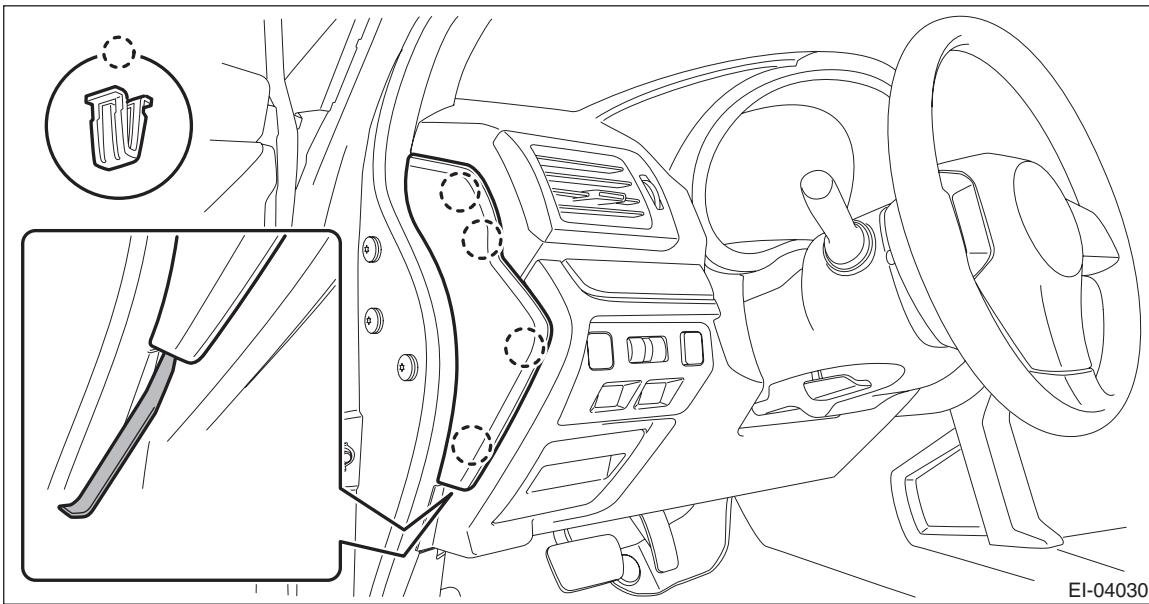


16. Instrument Panel Lower Cover

A: REMOVAL

- 1) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 2) Remove the clips, and remove the cover - instrument panel side LH.


**NOTE:**

Using a plastic remover, open the cover - instrument panel side LH.

- 3) Remove the cover assembly - instrument panel LWR driver INN and OUT.

CAUTION:

When removing the cover assembly - instrument panel LWR driver, be sure to pull it toward you. If attempting to remove by turning it upward, the claws may be damaged.

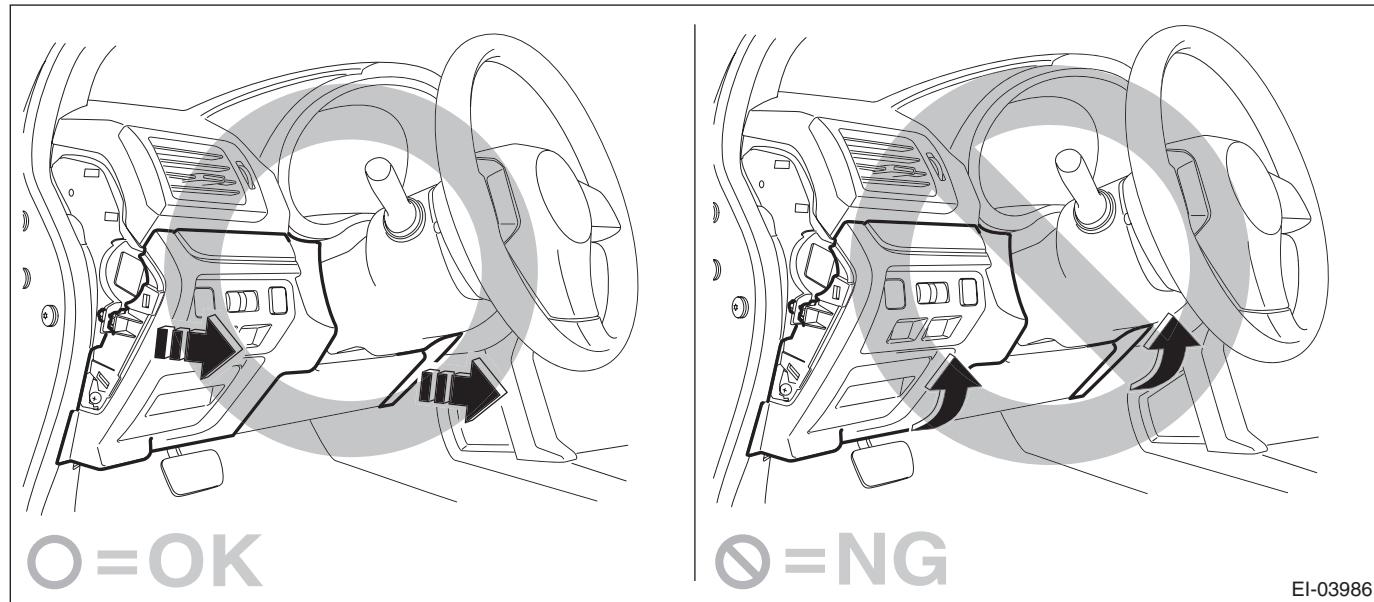


- (1) Remove the screws and release the clips and claws.

Instrument Panel Lower Cover

EXTERIOR/INTERIOR TRIM

(2) Disconnect the harness connectors, and remove the cover assembly - instrument panel LWR driver INN and OUT.

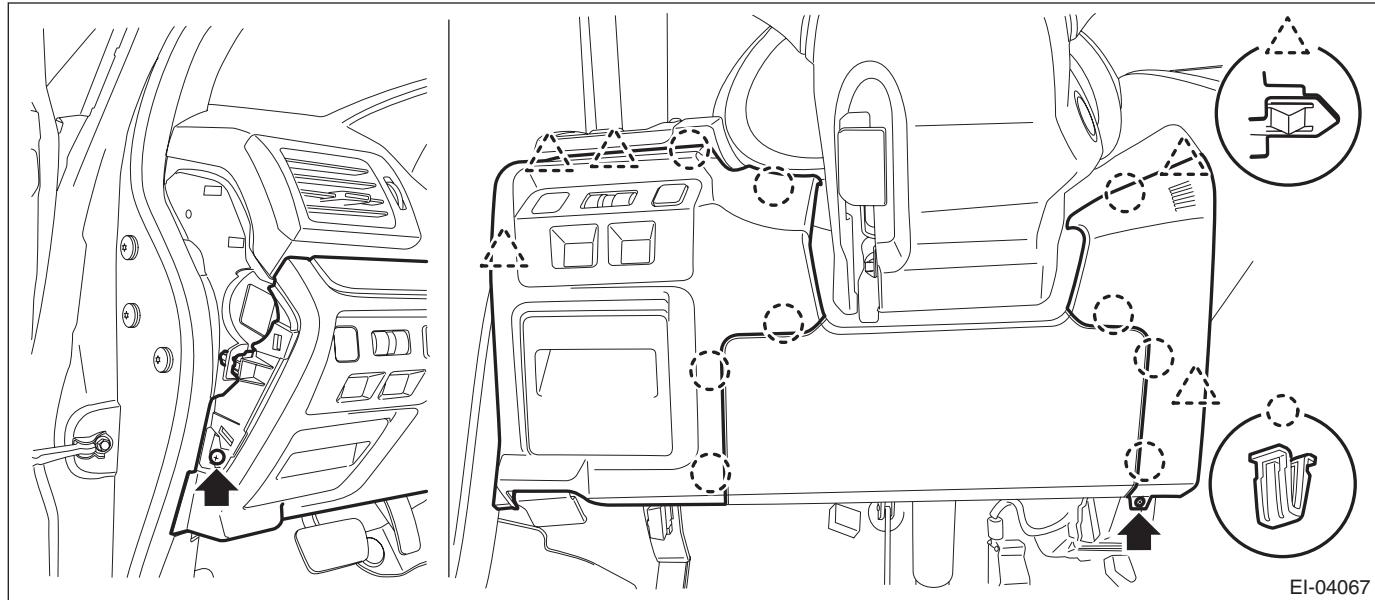

B: INSTALLATION

Install each part in the reverse order of removal.