


17. Glove Box

A: REMOVAL

- 1) Remove the pocket assembly.
 - (1) Attach the protective tape (a) to the panel center LWR.
 - (2) Remove the damper complete - pocket.
 - (3) Release the stoppers and remove the pocket assembly by pulling it toward you.

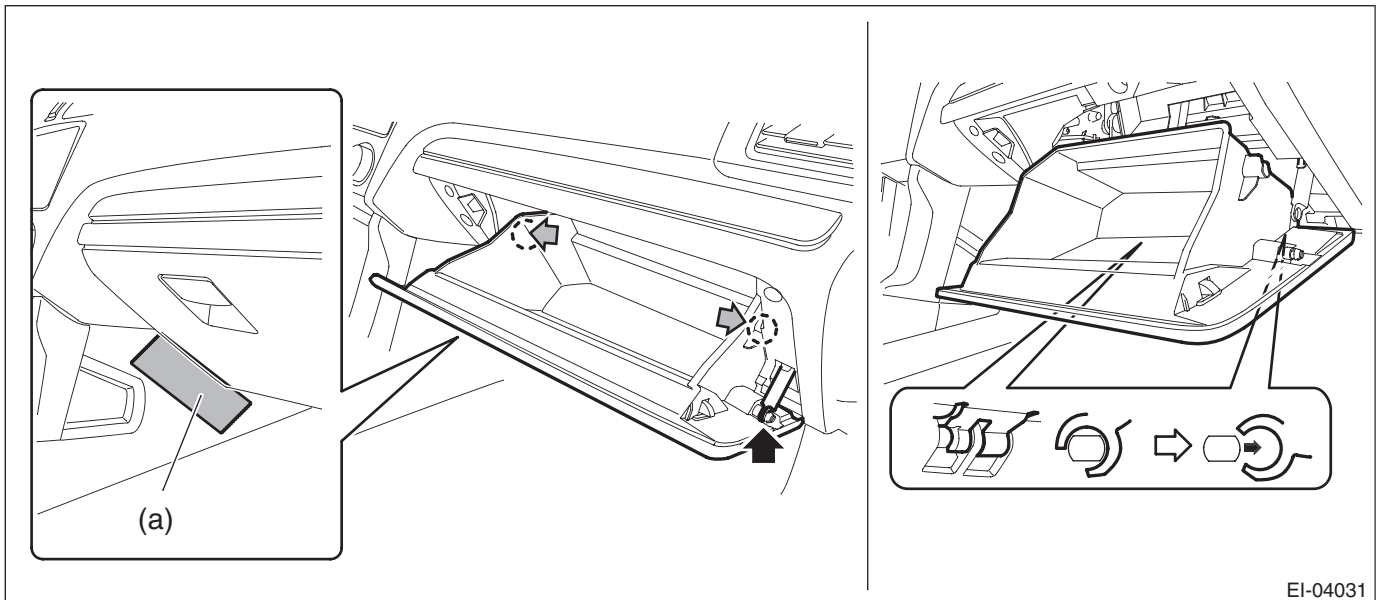


EI-04031

- 2) Remove the back panel - pocket.
 - (1) Remove the clips, and remove the cover - instrument panel side RH.

NOTE:

Remove the cover - instrument panel side RH by using a plastic remover.

- (2) Release the clips, and remove the ornament - panel assembly passenger.

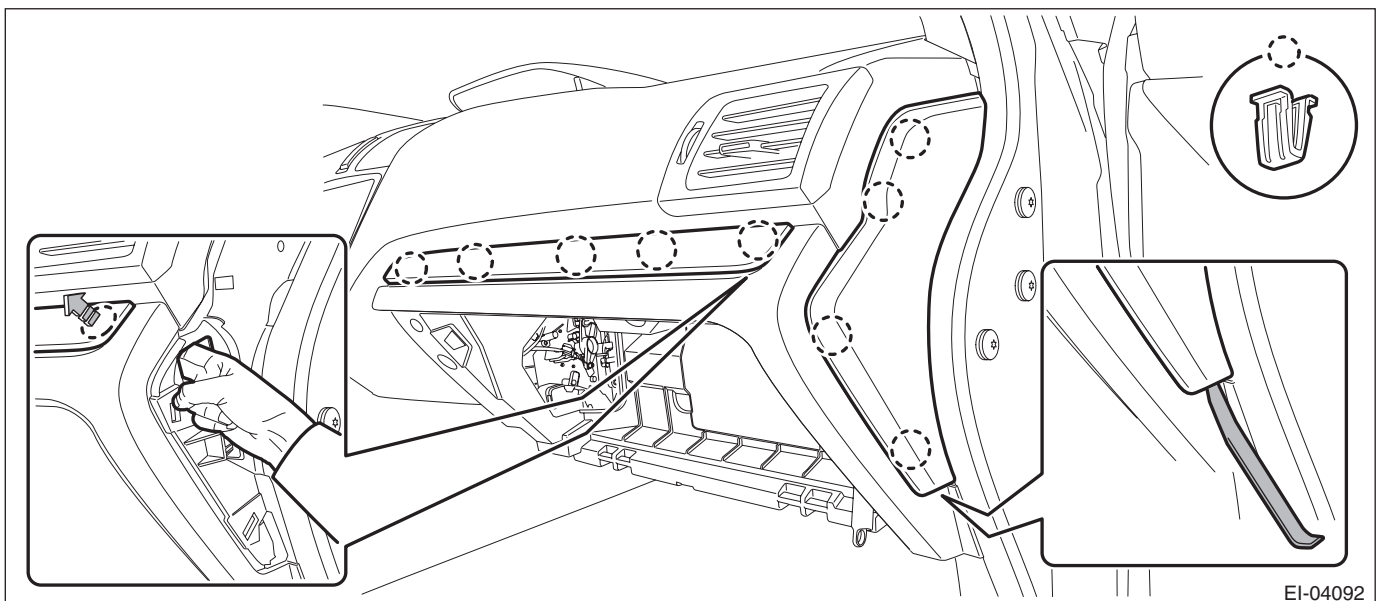

EI-04092


NOTE:

To facilitate the removal, push the clip of the ornament - panel assembly passenger from the backside.


Glove Box

EXTERIOR/INTERIOR TRIM

- (3) Release the clips, and remove the glove box under cover.

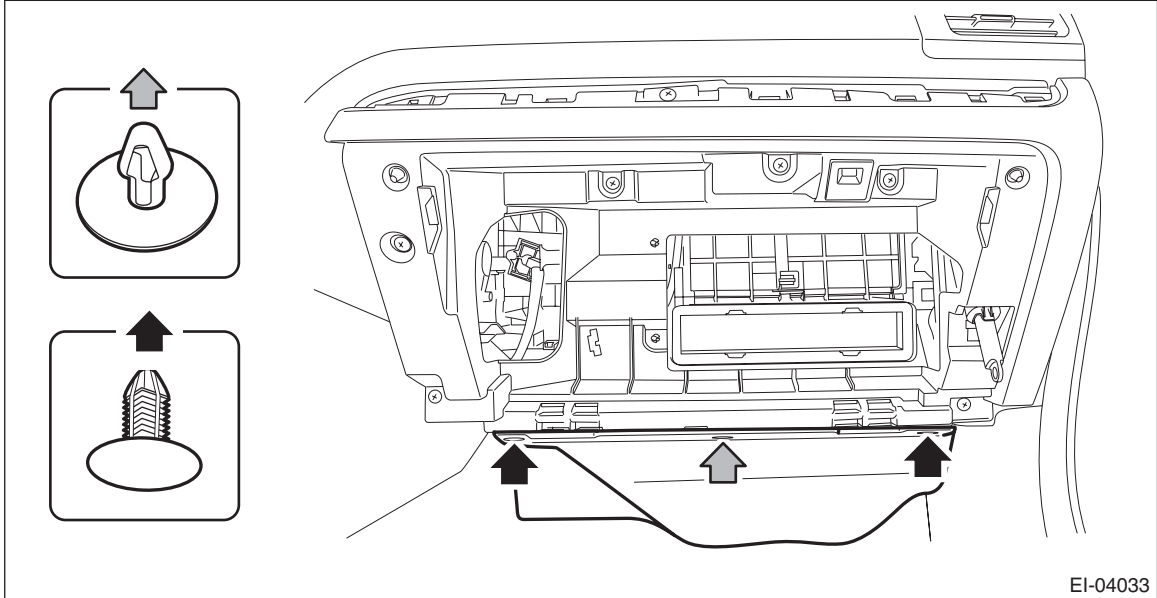

- (4) Remove the screws, claws and harness clamp, then remove the back panel - pocket.

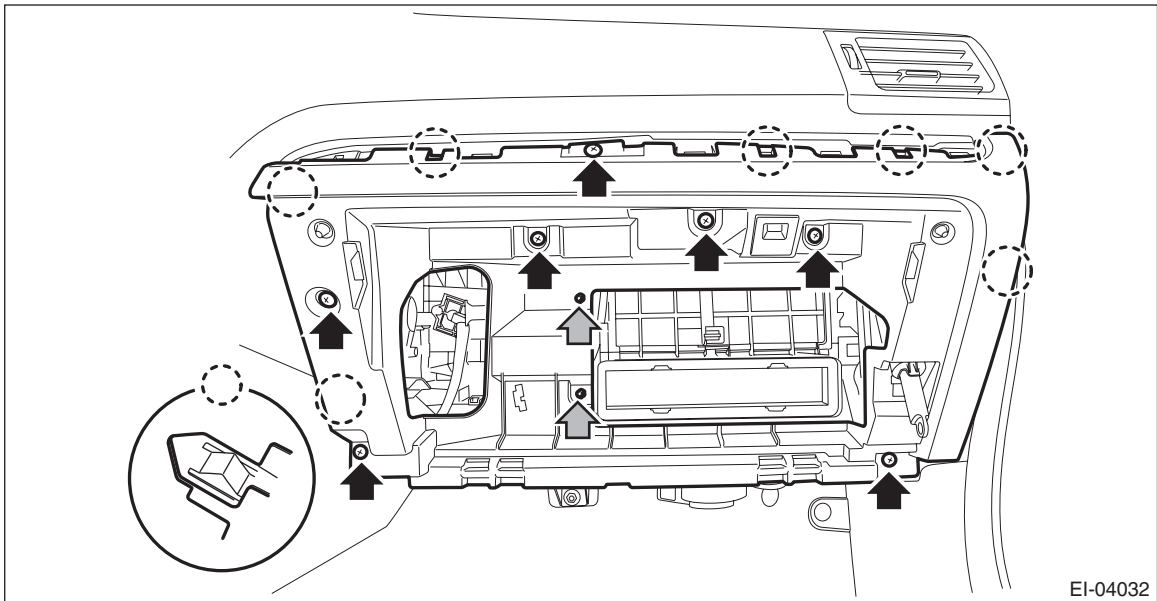

B: INSTALLATION

Install each part in the reverse order of removal.