


2. Front Under Cover

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolts and clips, and remove the under cover - front.

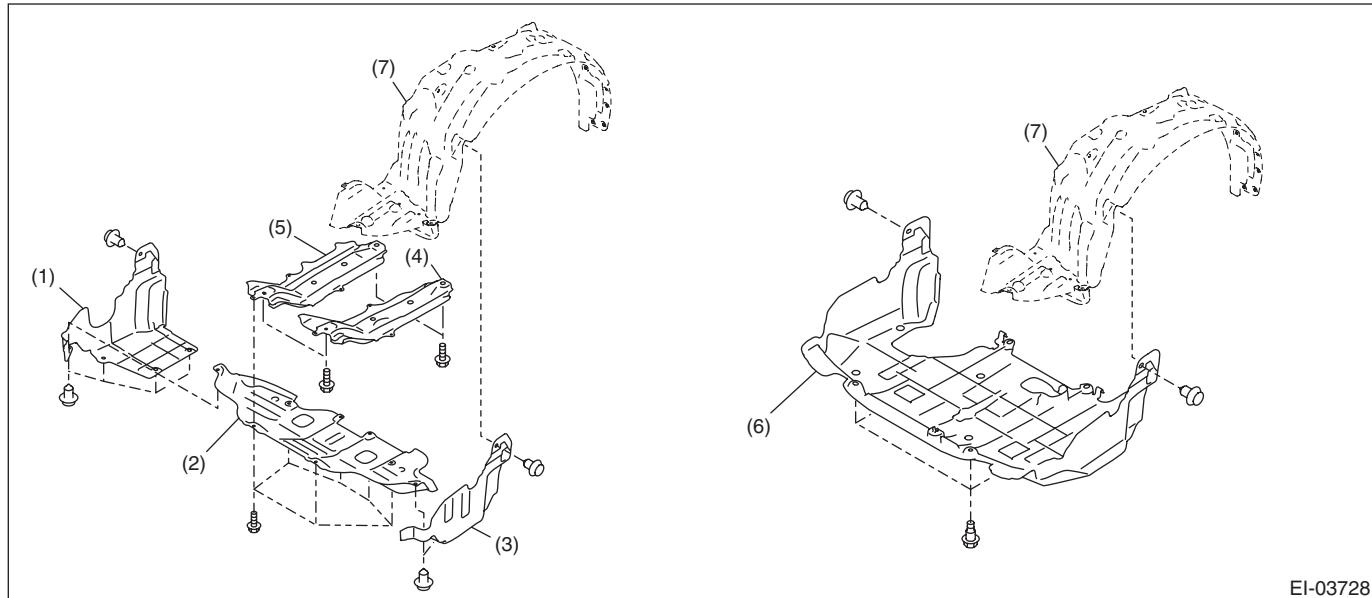

EI-03728

(1) Under cover COMPL - front RH (turbo model)	(4) Under cover - front guard LH (turbo model)	(7) Mud guard - front
(2) Plate CTR - aluminum (turbo model)	(5) Under cover - front guard RH (turbo model)	
(3) Under cover COMPL - front LH (turbo model)	(6) Under cover - front (non-turbo model)	

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

17.5 N·m (1.78 kgf-m, 12.9 ft-lb)