


## 24.Sun Visor

### A: REMOVAL

- 1) Remove the screws and remove the sun visor assembly.
- 2) Remove the hook - sun visor.
  - (1) Press both sides using a flat tip screwdriver.
  - (2) Remove the hook - sun visor by pulling it toward you.

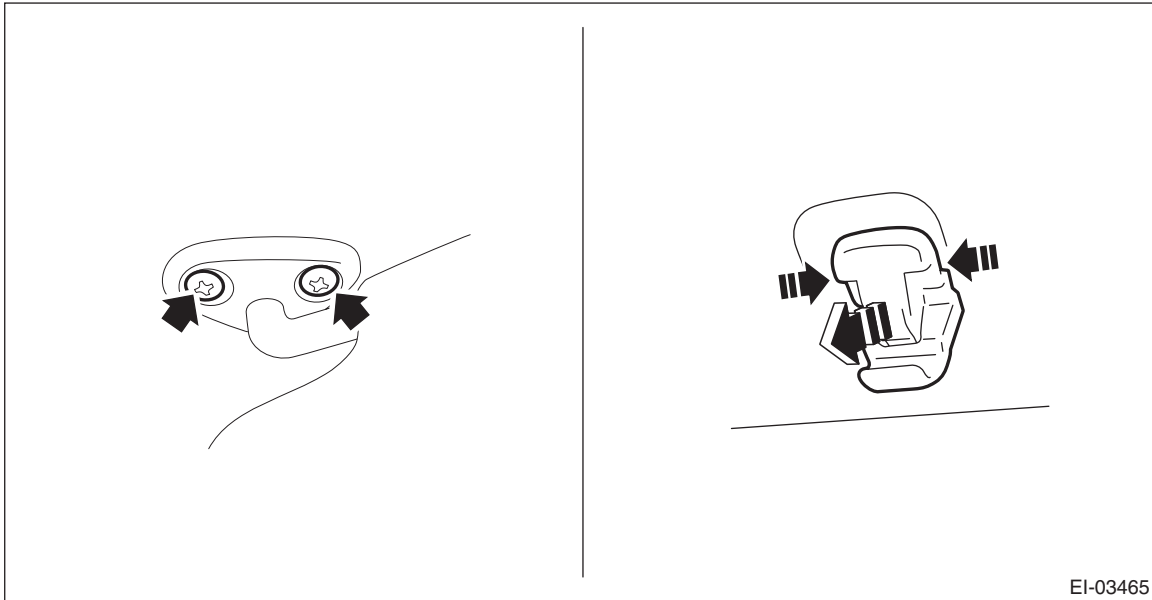

EI-03465

### B: INSTALLATION

Install each part in the reverse order of removal.