


## 3. Mud Guard

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the wheels.
- 3) Remove the screws and clips to remove the mud guard.

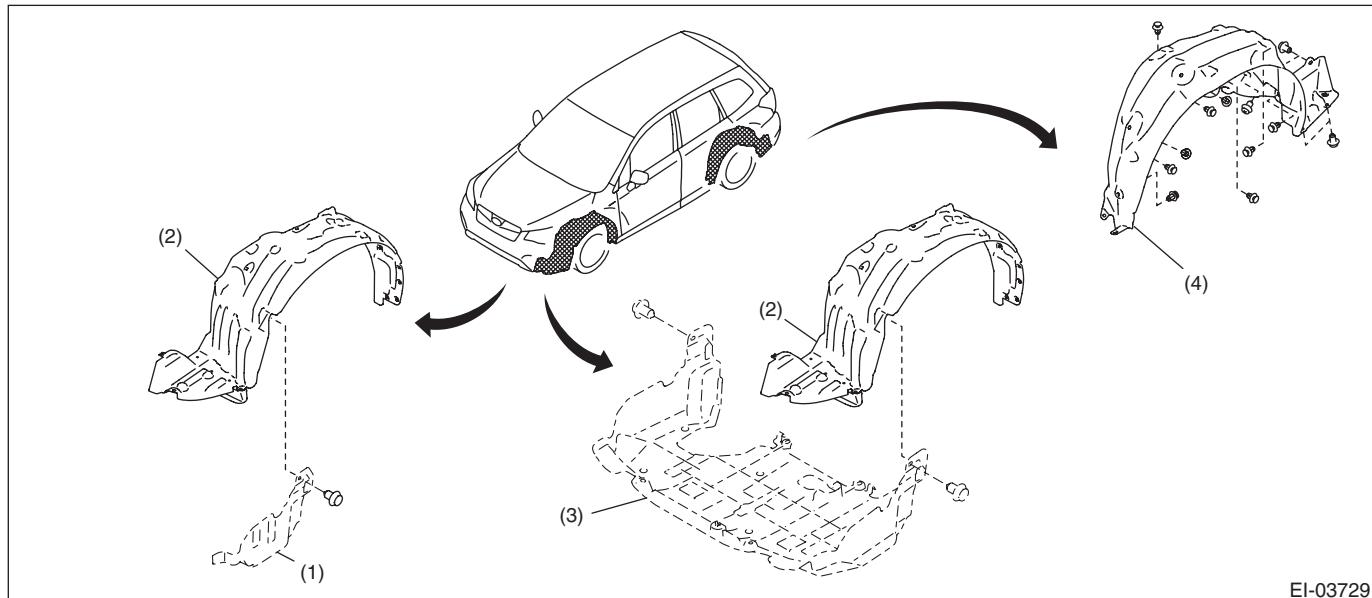

(1) Under cover COMPL - front LH  
(turbo model)

(3) Under cover - front (non-turbo  
model)

(4) Mud guard - rear

(2) Mud guard - front

### B: INSTALLATION

Install each part in the reverse order of removal.

**Tightening torque:**

**Wheel nut: 120 N·m (12.24 kgf·m, 88.5 ft-lb)**