

## 9. Rear Bumper


### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the light assembly - rear combination.

#### CAUTION:


**Be careful not to damage the clips.**

- (1) Release the bolts and clips, then pull out the light assembly - rear combination to the vehicle rear.
- (2) Disconnect the connector and remove the light assembly - rear combination.

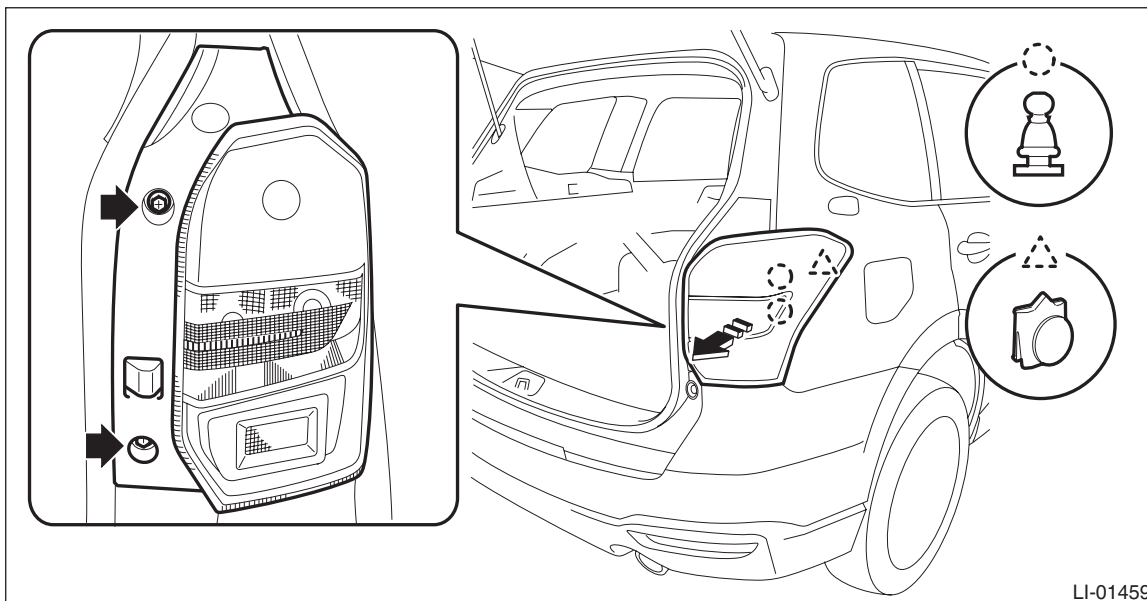

- 3) Remove the bumper face - rear.

- (1) Remove the clips inside the wheel housing.
- (2) Remove the clips at the lower side of the bumper face - rear.

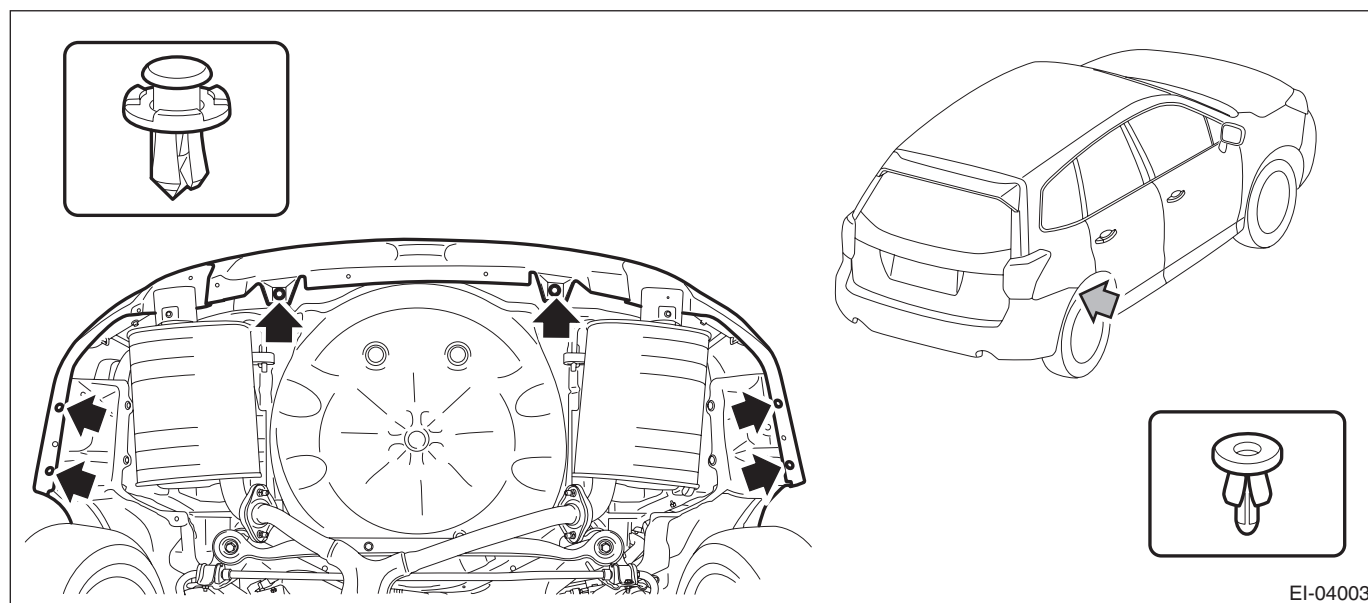


- (3) Detach (b) and (c) while pulling up (a) of the bumper face - rear.
- (4) Detach (e) while pulling up (d) of the bumper face - rear.
- (5) Detach the opposite side in the same manner.


(6) Detach in order from (f) to (h) while pulling up the center part of the bumper face - rear.

**CAUTION:**

Pulling with excessive force may damage the bracket.

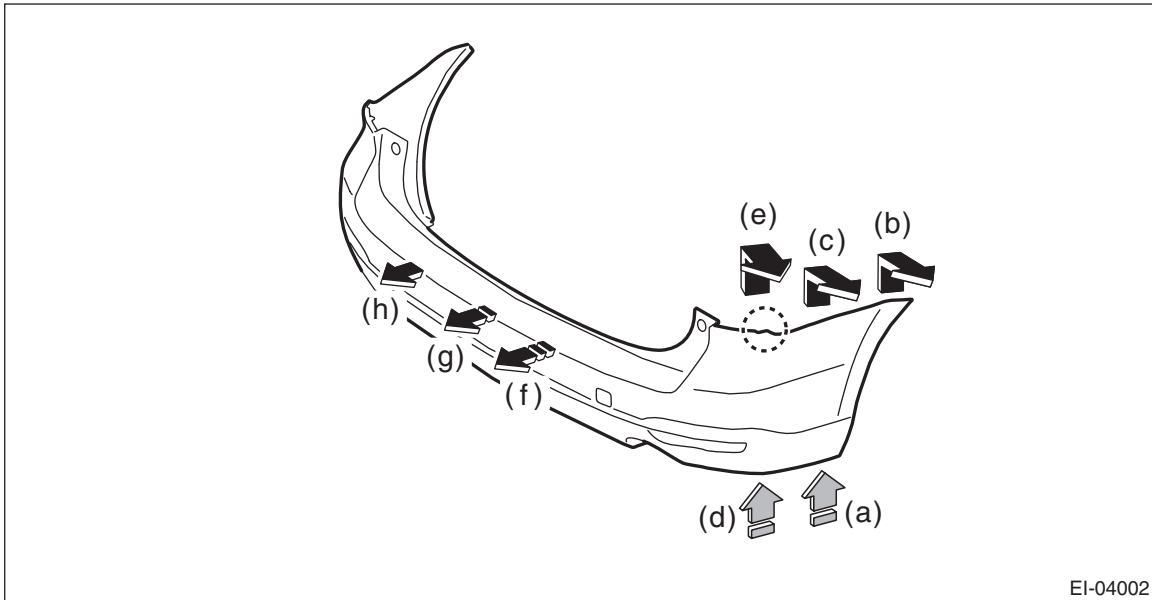

4) Remove the bolts and nuts, and remove the bumper beam COMPL - rear.

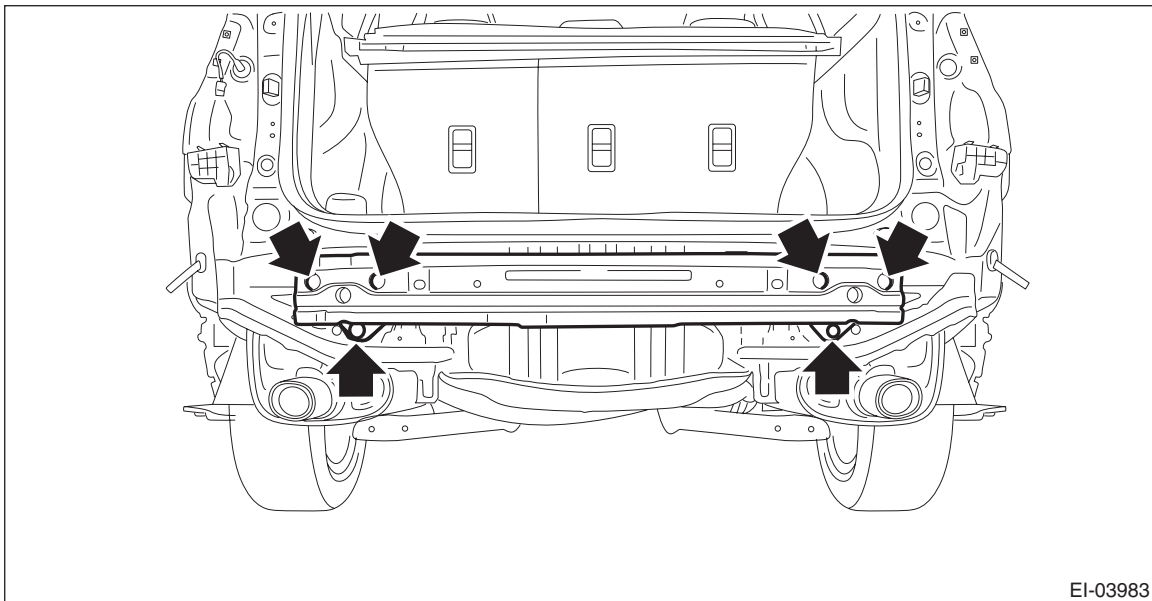

**NOTE:**

After all nuts are removed, raise the bumper beam COMPL - rear a little to remove it from vehicle body.

## EXTERIOR/INTERIOR TRIM

**CAUTION:**

(1) Remove the screws.

EI-03991

LI-01468

LI-01468

## B: INSTALLATION

Install each part in the reverse order of removal.

### CAUTION:

**Do not reuse the removed bracket - rear bumper side. This may cause water leakage on the body panel.**

### NOTE:

If the bumper face - rear comes off too easily, adjust the hook of the bracket side.

### *Tightening torque:*

*Refer to “COMPONENT” of “General Description”. <Ref. to EI-5, REAR BUMPER, COMPONENT, General Description.>*

## C: REPAIR

Refer to the description for front bumper repair. <Ref. to EI-37, REPAIR, Front Bumper.>