


Electrical Component Location

EyeSight (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

1. EyeSight SYSTEM

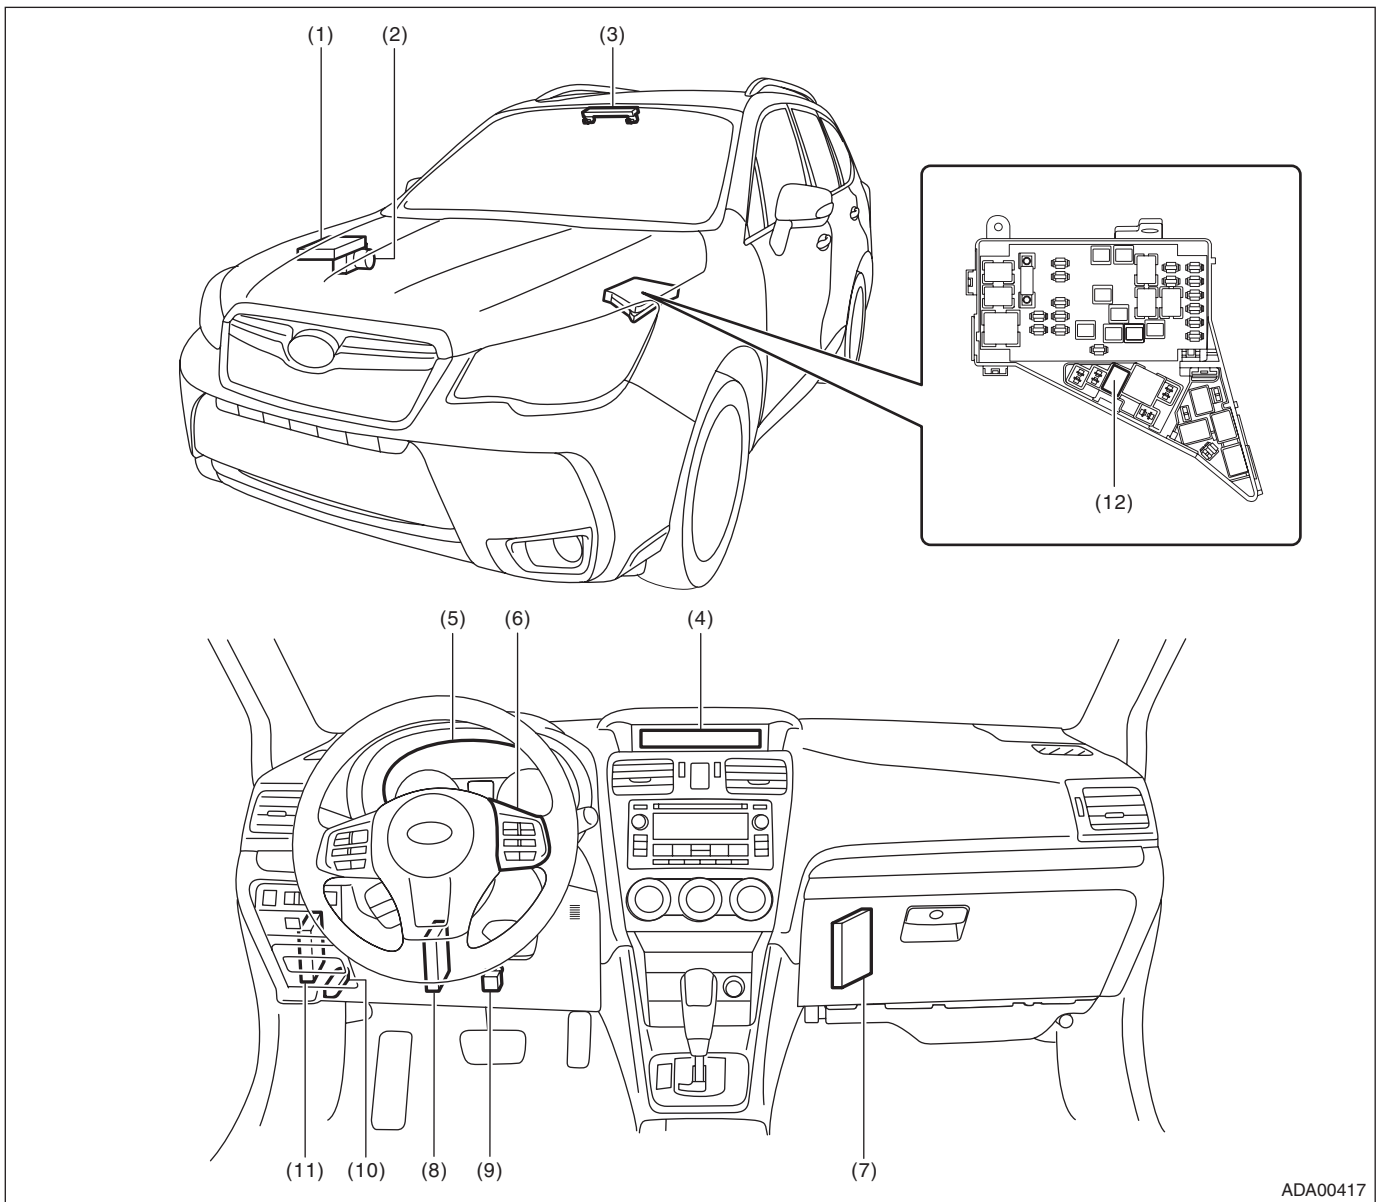


ADA00417

- | | | |
|---|---|---------------------------------|
| (1) Engine control module (ECM) (turbo model) | (5) Combination meter | (9) Stop light and brake switch |
| (2) VDC control module (VDCCM) | (6) Cruise control command switch | (10) Data link connector |
| (3) Stereo camera | (7) Engine control module (ECM) (non-turbo model) | (11) Body integrated unit |
| (4) MFD (Multi-function display) | (8) Transmission control module (TCM) | (12) Brake light relay |

2. COMBINATION METER


• C0 model

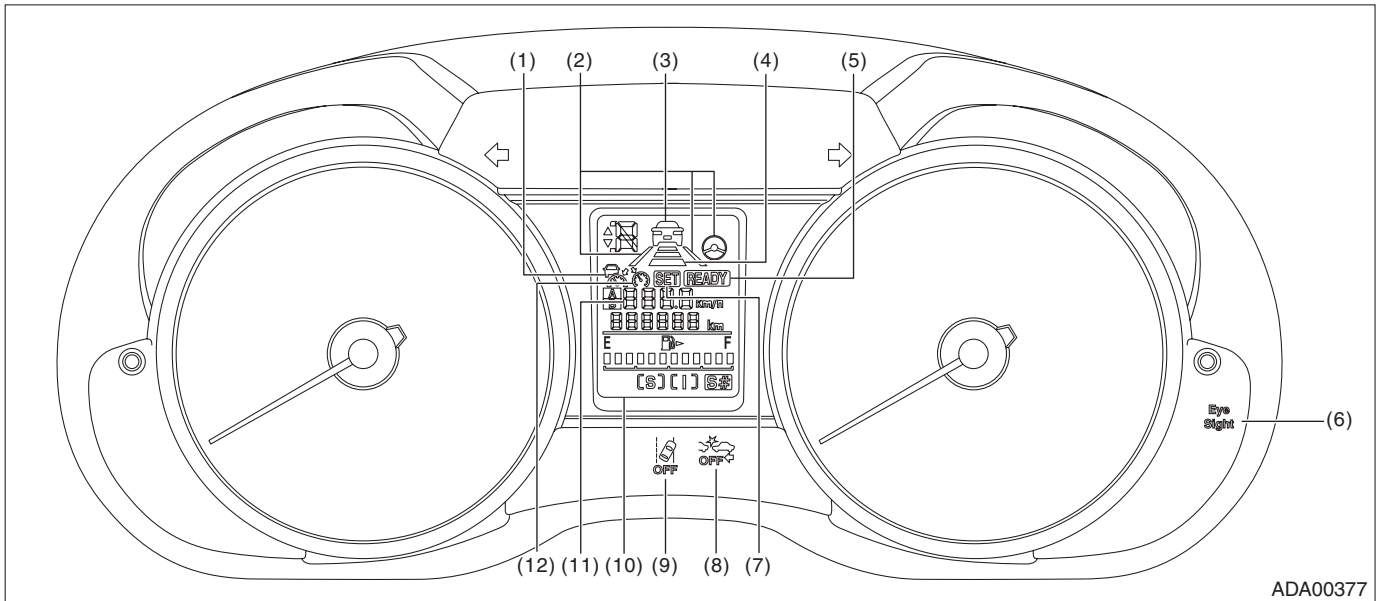

ADA00377

- | | | |
|---|---|--|
| (1) Adaptive cruise display | (5) READY indicator | (9) Lane departure warning OFF indicator light |
| (2) Lane indicator/Steering wheel indicator | (6) EyeSight warning light | (10) Multi-information display |
| (3) Preceding vehicle indicator | (7) SET indicator | (11) Set vehicle speed display |
| (4) Following distance setting indicator | (8) Pre-collision brake OFF indicator light | (12) Conventional cruise display |

• Except for C0 model

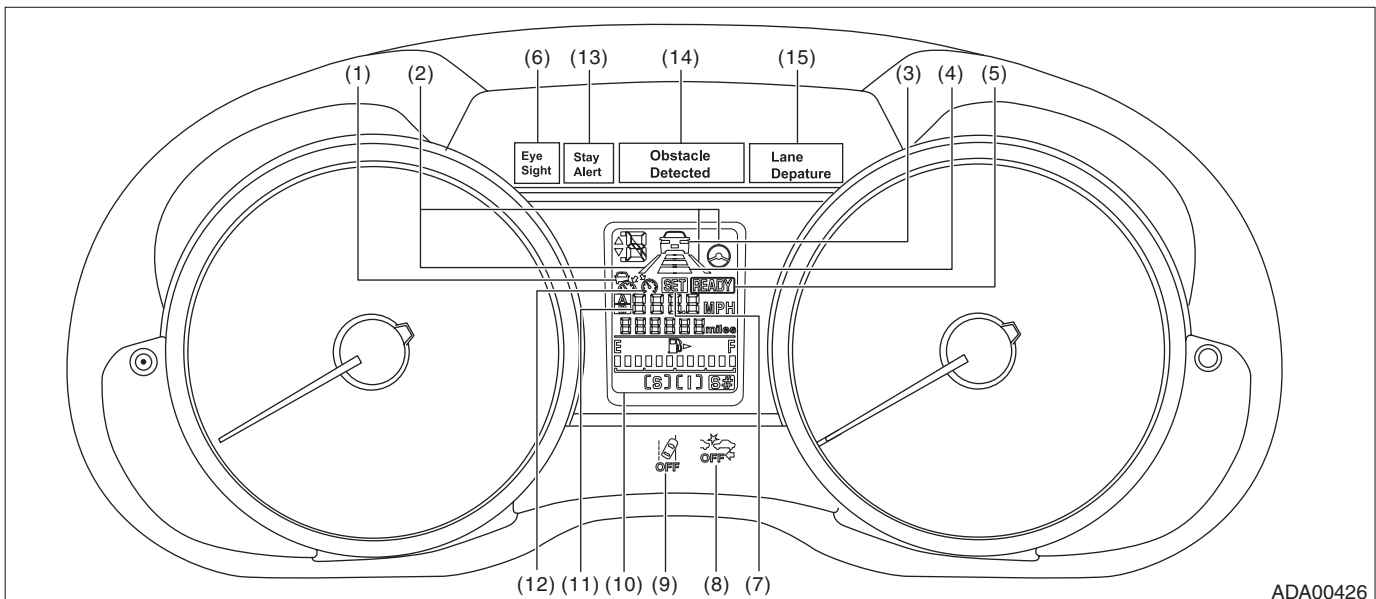


ADA00426

- | | | |
|---|--|------------------------------------|
| (1) Adaptive cruise display | (6) EyeSight warning light | (11) Set vehicle speed display |
| (2) Lane indicator/Steering wheel indicator | (7) SET indicator | (12) Conventional cruise display |
| (3) Preceding vehicle indicator | (8) Pre-collision brake OFF indicator light | (13) "Stay Alert" indicator |
| (4) Following distance setting indicator | (9) Lane departure warning OFF indicator light | (14) "Obstacle Detected" indicator |
| (5) READY indicator | (10) Multi-information display | (15) "Lane Departure" indicator |

Electrical Component Location

EyeSight (DIAGNOSTICS)


3. SWITCH

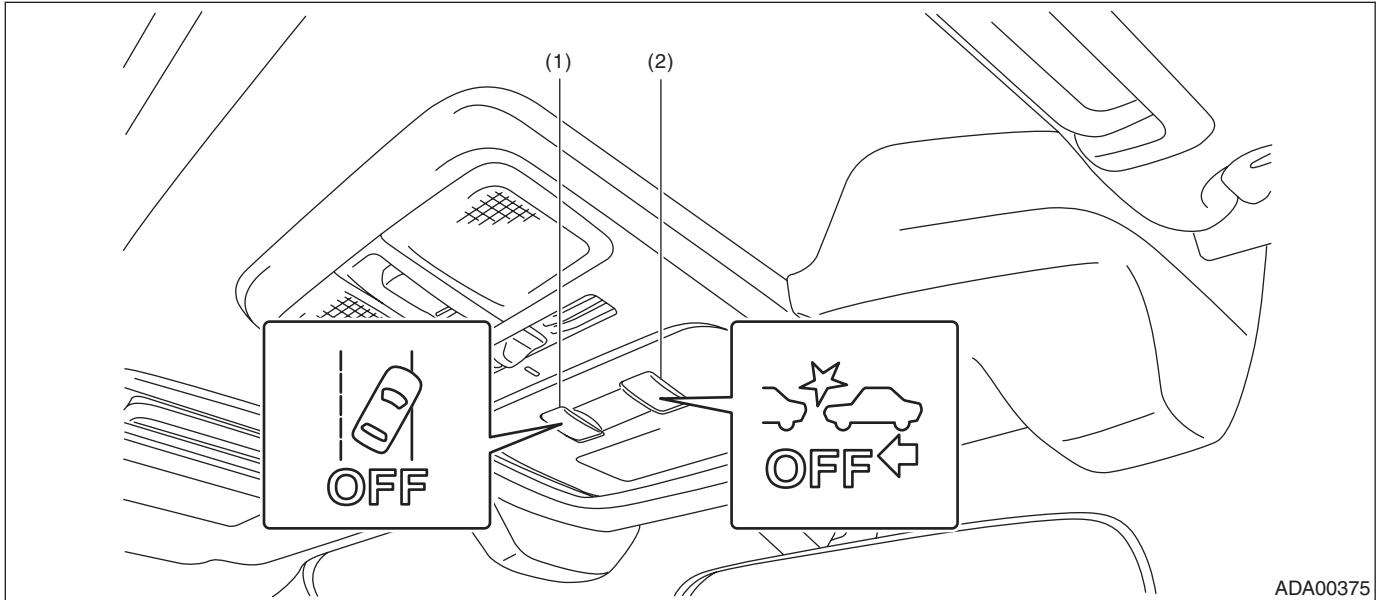

ADA00375

(1) Lane departure warning OFF switch

(2) Pre-collision brake OFF switch

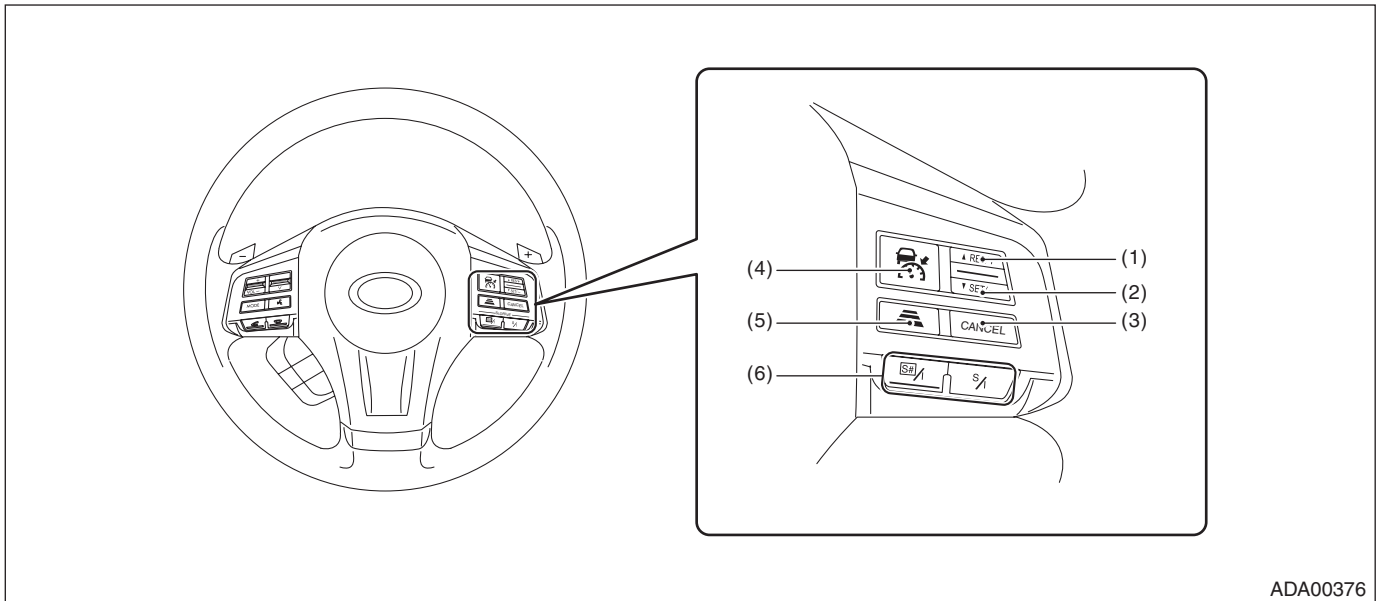

ADA00376

(1) RES/+ (Resume/+) switch

(3) CANCEL switch

(5) Following distance setting switch

(2) SET/- (Set/-) switch

(4) CRUISE switch

(6) SI-DRIVE switch