


2. Relay and Fuse

A: LOCATION

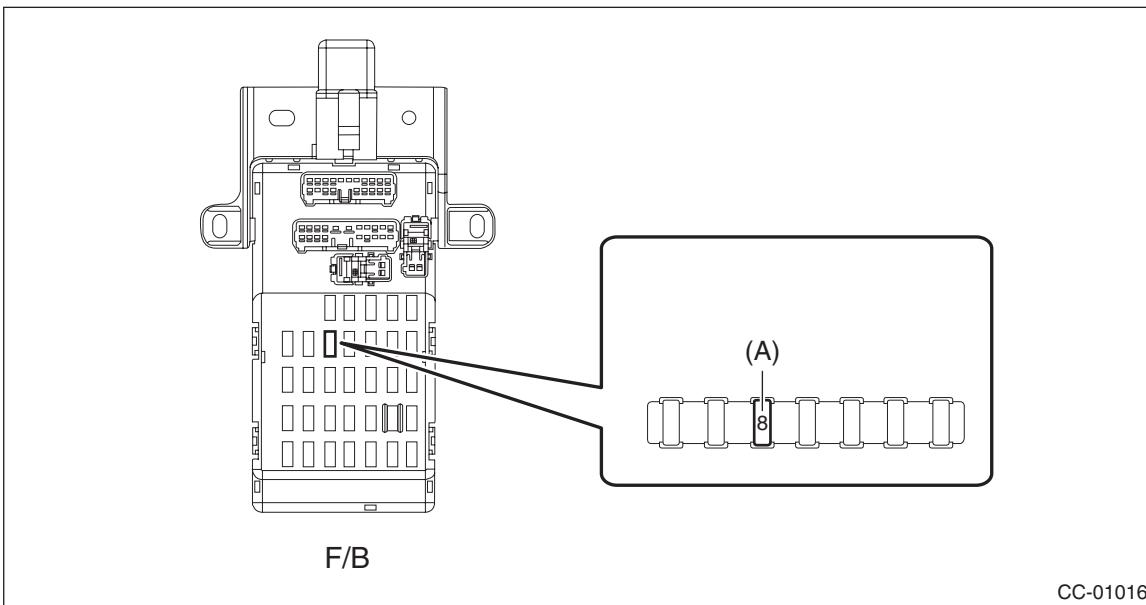

Relay & fuse box	Fuse 15A (stop light and brake switch, brake light relay)	(A)
------------------	---	-----

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-24, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.