

## 3. EyeSight System

### A: WIRING DIAGRAM

Refer to "EyeSight System" in the wiring diagram.

- Non-turbo model: <Ref. to WI-238, NON-TURBO MODEL, WIRING DIAGRAM, EyeSight System.>
- Turbo model: <Ref. to WI-244, TURBO MODEL, WIRING DIAGRAM, EyeSight System.>

### B: INSPECTION

Refer to "Basic Diagnostic Procedure" of "EyeSight (DIAGNOSTICS)" section. <Ref. to ES(diag)-2, Basic Diagnostic Procedure.>

### C: NOTE

For procedure of each component in the EyeSight system, refer to the respective section.

- Control module: <Ref. to ES-10, Control Unit.>
- Stereo camera: <Ref. to ES-11, Stereo Camera.>
- Cruise control command switch: <Ref. to ES-19, Cruise Control Command Switch.>
- Combination meter: <Ref. to ES-24, Combination Meter.>
- Transmission control module (TCM): <Ref. to ES-25, Transmission Control Module (TCM).>
- Stop light and brake switch: <Ref. to ES-26, Stop Light & Brake Switch.>
- VDC control module & hydraulic control unit (VDCCM&H/U): <Ref. to ES-27, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>
- Multi-function display (MFD): <Ref. to ES-28, Multi-function Display (MFD).>
- Switches and harness: <Ref. to ES-18, Switches and Harness.>