

## 4. Control Unit

### A: NOTE

System control of the EyeSight is performed by the following modules.

- Engine control module (ECM)
- Transmission control module (TCM)
- VDC control module (VDCCM)
- Stereo camera

### B: REMOVAL

For removal, refer to the removal procedure of each module.

- Engine control module (ECM)

Non-turbo model: <Ref. to FU(H4DO)-94, REMOVAL, Engine Control Module (ECM).>

Turbo model: <Ref. to FU(H4DOTC)-134, REMOVAL, Engine Control Module (ECM).>

- Transmission control module (TCM)

Non-turbo model: <Ref. to CVT(TR580)-144, REMOVAL, Transmission Control Module (TCM).>

Turbo model: <Ref. to CVT(TR690)-123, REMOVAL, Transmission Control Module (TCM).>

- VDC control module (VDCCM): <Ref. to VDC-10, REMOVAL, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>

- Stereo camera: <Ref. to ES-11, REMOVAL, Stereo Camera.>

### C: INSTALLATION

For installation, refer to the installation procedure of each module.

- Engine control module (ECM)

Non-turbo model: <Ref. to FU(H4DO)-95, INSTALLATION, Engine Control Module (ECM).>

Turbo model: <Ref. to FU(H4DOTC)-136, INSTALLATION, Engine Control Module (ECM).>

- Transmission control module (TCM)

Non-turbo model: <Ref. to CVT(TR580)-145, INSTALLATION, Transmission Control Module (TCM).>

Turbo model: <Ref. to CVT(TR690)-123, INSTALLATION, Transmission Control Module (TCM).>

- VDC control module (VDCCM): <Ref. to VDC-14, INSTALLATION, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>

- Stereo camera: <Ref. to ES-15, INSTALLATION, Stereo Camera.>