



10. Blower Motor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Release the clips, and remove the back panel - under cover.

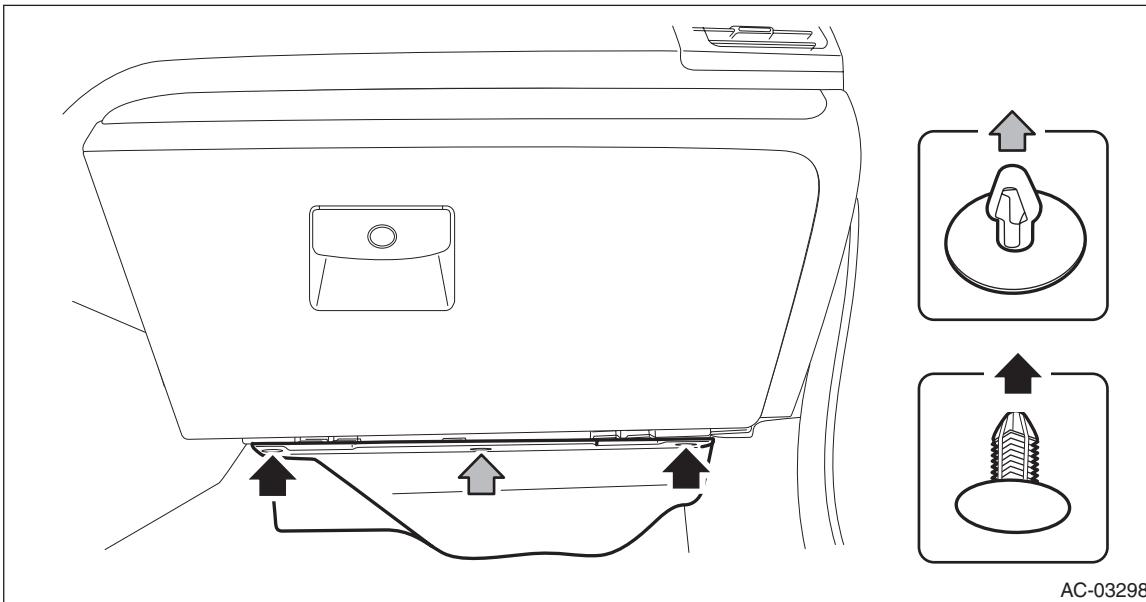

- 3) Remove the blower - motor.
 - (1) Disconnect the connector.
 - (2) Remove the screws and detach the blower - motor.

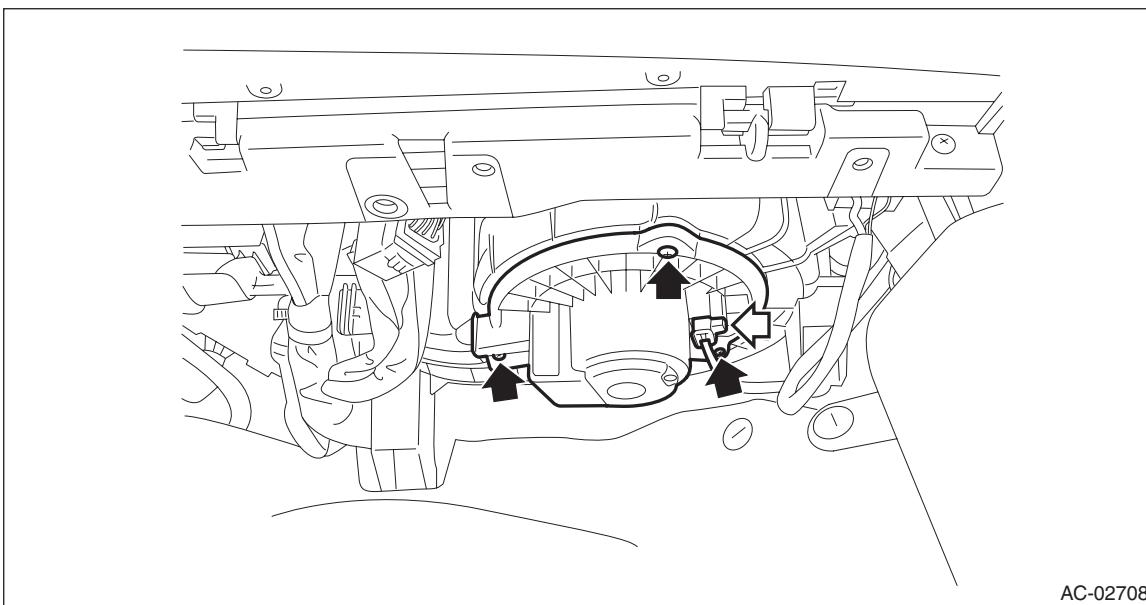

B: INSTALLATION

Install each part in the reverse order of removal.


Blower Motor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

C: INSPECTION

UNIT INSPECTION

1) Check the motor operation when battery voltage is applied between the terminals of motor.
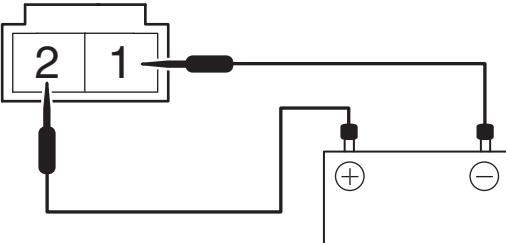
| Terminal No. | Inspection conditions | Specification | Connection diagram |
|---------------|----------------------------------|---------------|--|
| 2 (+) — 1 (-) | Connect battery to the terminals | Speed |  AC-02797 |

2) If it does not operate normally, replace the blower - motor.