


Blower Resistor (Manual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


12. Blower Resistor (Manual A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-61, REMOVAL, Glove Box.>
- 3) Remove the engine control module (ECM). (Non-turbo model)
 - (1) Release the lock and remove the relay holder.
 - (2) Remove the nuts (a).
 - (3) Loosen the bolt (b), and remove the engine control module (ECM).

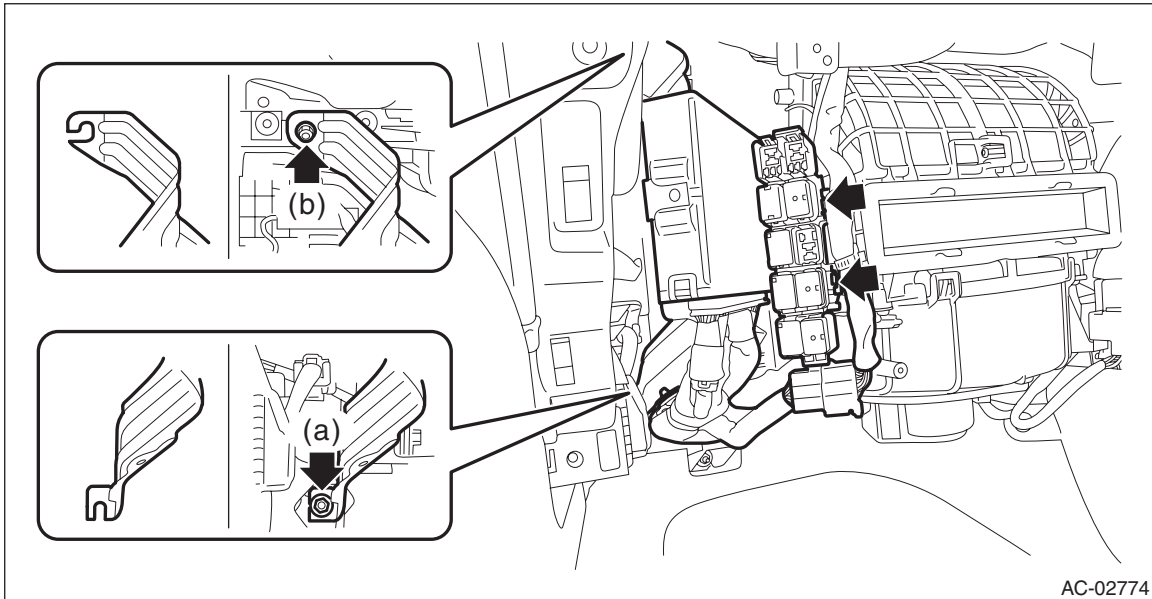

- 4) Remove the resistor.
 - (1) Disconnect the connector.
 - (2) Remove the screw and remove the resistor.

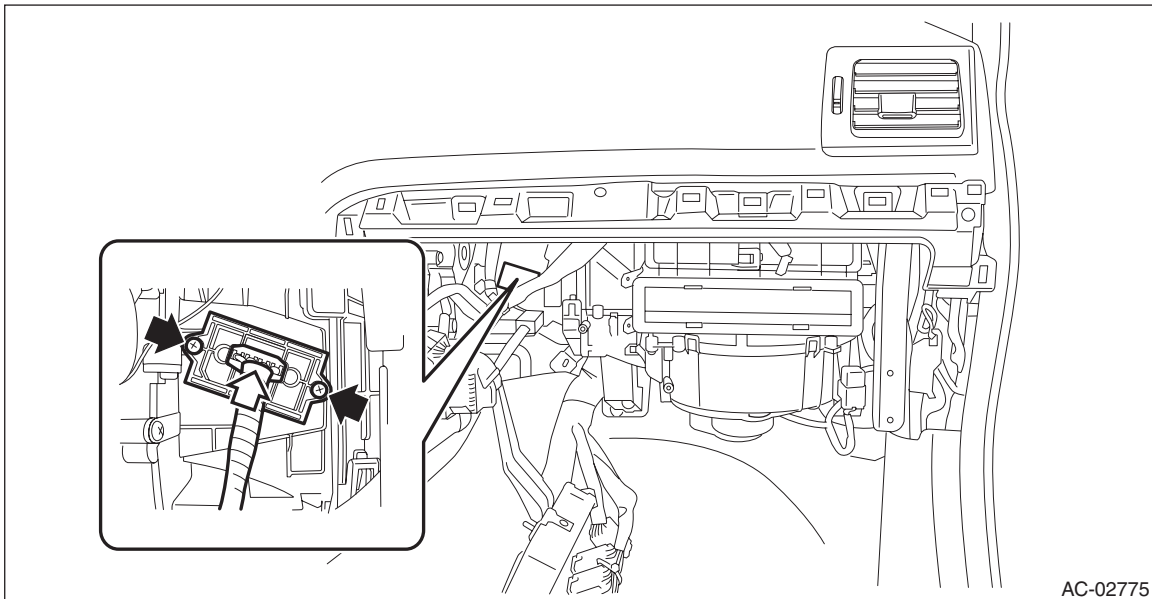

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Engine control module (ECM): 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

Blower Resistor (Manual A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


C: INSPECTION

UNIT INSPECTION

PREPARATION TOOL:

Circuit tester

1) Check the resistance between resistor terminals.

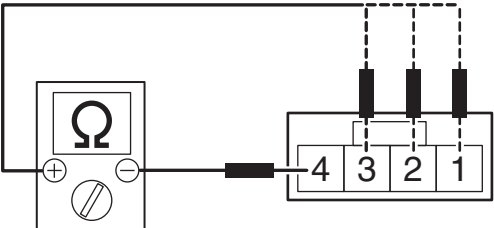Terminal No.	Standard	Connection diagram
4 — 3	Approx. 0.43 Ω	 AC-02897
4 — 2	Approx. 1.03 Ω	
4 — 1	Approx. 3 Ω	

2) Replace the resistor if the inspection result is not within the standard.