


Ambient Sensor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

22.Ambient Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the ambient sensor.
 - (1) Disconnect the connector.
 - (2) Release the claws, and then remove the ambient sensor from the bracket.

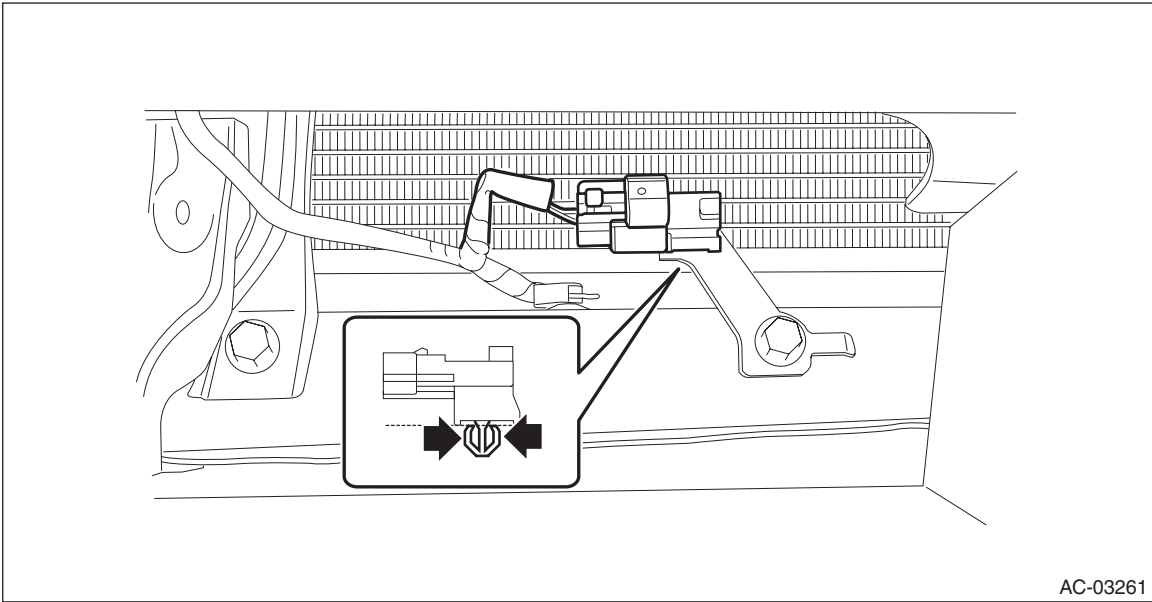

AC-03261

B: INSTALLATION

Install each part in the reverse order of removal.

Ambient Sensor

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

C: INSPECTION

UNIT INSPECTION


Preparation tool:

Circuit tester

- 1) Visually check the ambient sensor for dirt or damage, and clean or replace as necessary.
- 2) Check the resistance between ambient sensor terminals.

CAUTION:

During inspection, be careful not to touch the sensor end in order to avoid misjudgment due to body temperature.

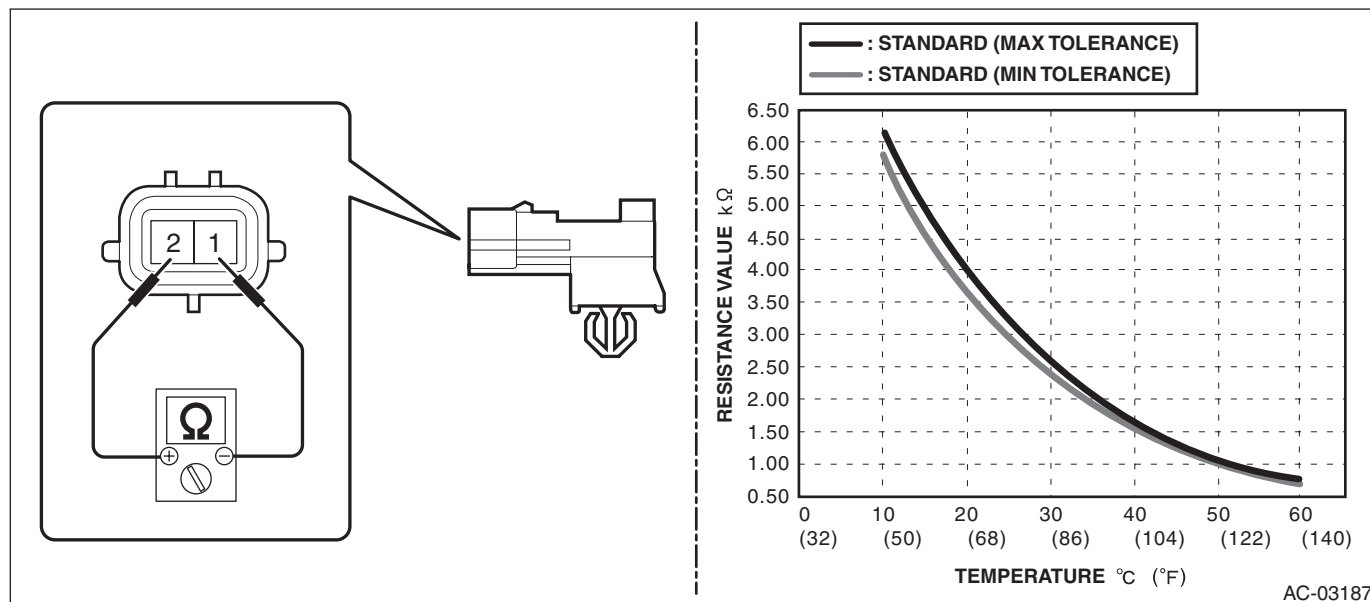

Terminal No.	Inspection conditions	Standard
1 — 2	10°C	5.82 — 6.18 k Ω
	15°C	4.58 — 4.87 k Ω
	20°C	3.64 — 3.86 k Ω
	25°C	2.91 — 3.09 k Ω
	30°C	2.35 — 2.49 k Ω
	35°C	1.9 — 2.02 k Ω
	40°C	1.56 — 1.65 k Ω
	45°C	1.28 — 1.36 k Ω
	50°C	1.06 — 1.12 k Ω
	55°C	0.88 — 0.93 k Ω
	60°C	0.74 — 0.78 k Ω

- 3) Replace the ambient sensor if the inspection result is not within the standard value.