

## 10. Interior Light System

### A: WIRING DIAGRAM

Refer to "Interior Light System" in the wiring diagram. <Ref. to WI-275, WIRING DIAGRAM, Interior Light System.>

### B: INSPECTION

#### 1. CHECK DOOR SWITCH

Refer to the "INSPECTION" of the "Door Switch". <Ref. to LI-78, INSPECTION, Door Switch.>

#### 2. CHECK REAR GATE LATCH SWITCH

- Except for model with power rear gate: refer to "INSPECTION" of the "Rear Gate Latch and Actuator Assembly" in "SECURITY AND LOCKS" section. <Ref. to SL-51, ACTUATOR, INSPECTION, Rear Gate Latch and Actuator Assembly.>
- Model with power rear gate: Refer to "INSPECTION" of the "Power Rear Gate Auto Closer" in "POWER REAR GATE SYSTEM" section. <Ref. to PRG-18, INSPECTION, Power Rear Gate Auto Closer.>

### C: NOTE

For operation procedures of each component of the interior light system, refer to the respective section.

- Spot map light: <Ref. to LI-62, Spot Map Light.>
- Room light: <Ref. to LI-65, Room Light.>
- Luggage room light: <Ref. to LI-67, Luggage Room Light.>
- Door step light: <Ref. to LI-69, Door Step Light.>
- Door switch: <Ref. to LI-78, Door Switch.>