



36. Auto Headlight Beam Leveler Control Module

A: REMOVAL


- 1) Remove the instrument panel lower cover and knee airbag module. <Ref. to AB-39, REMOVAL, Knee Air-bag Module.>
- 2) Release the lock and remove the fuse holder.

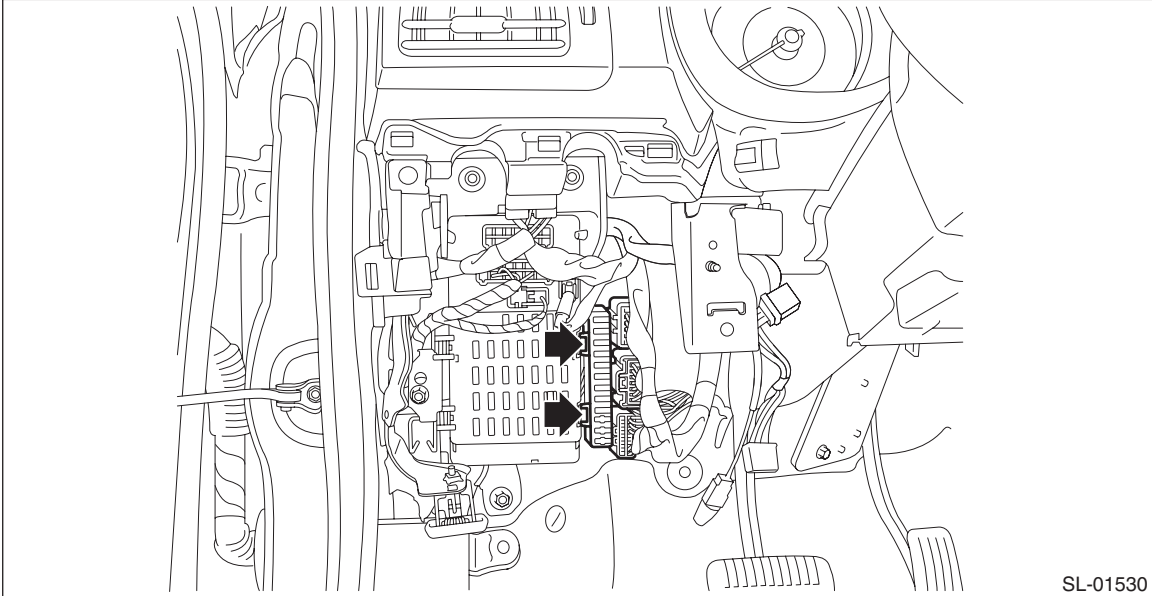

- 3) Remove the relay & fuse box.
 - (1) Disconnect the connector.
 - (2) Remove the bolts and nuts, and remove the relay & fuse box.

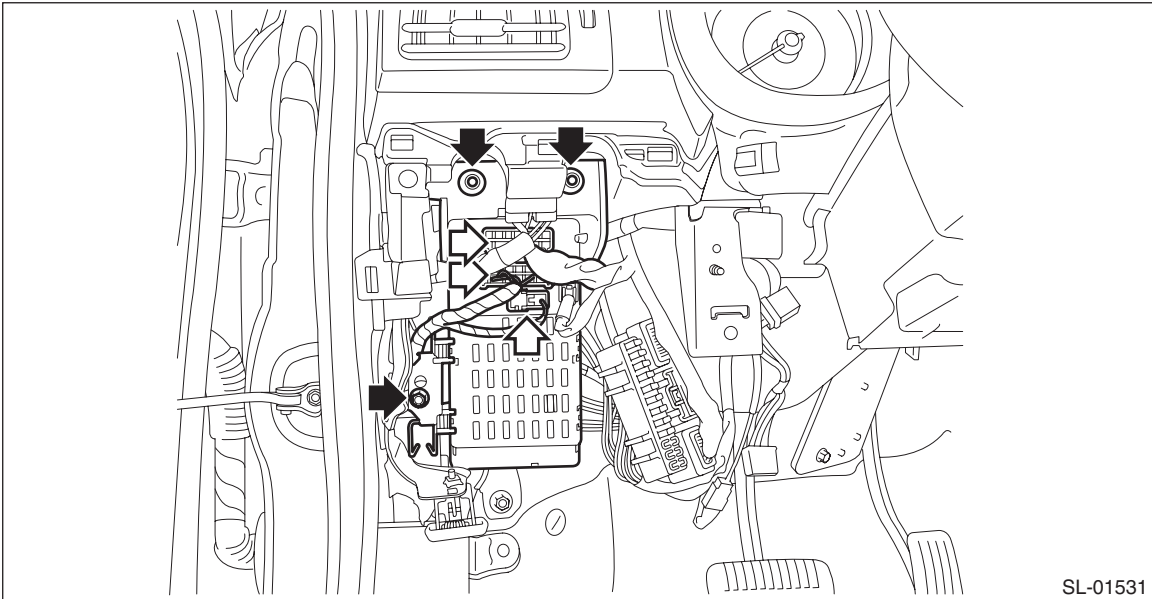


- 4) Disconnect the connector of body integrated unit.

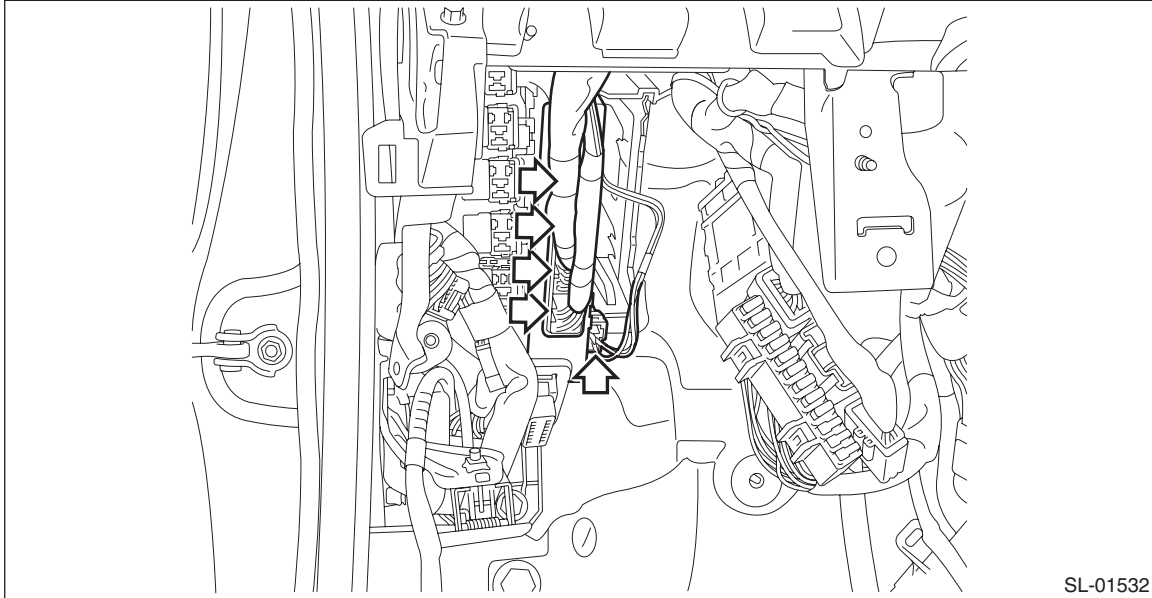

- 5) Remove the auto headlight beam leveler CM.

- (1) Disconnect the connector.
- (2) Release the claws and pull out the auto headlight beam leveler CM.

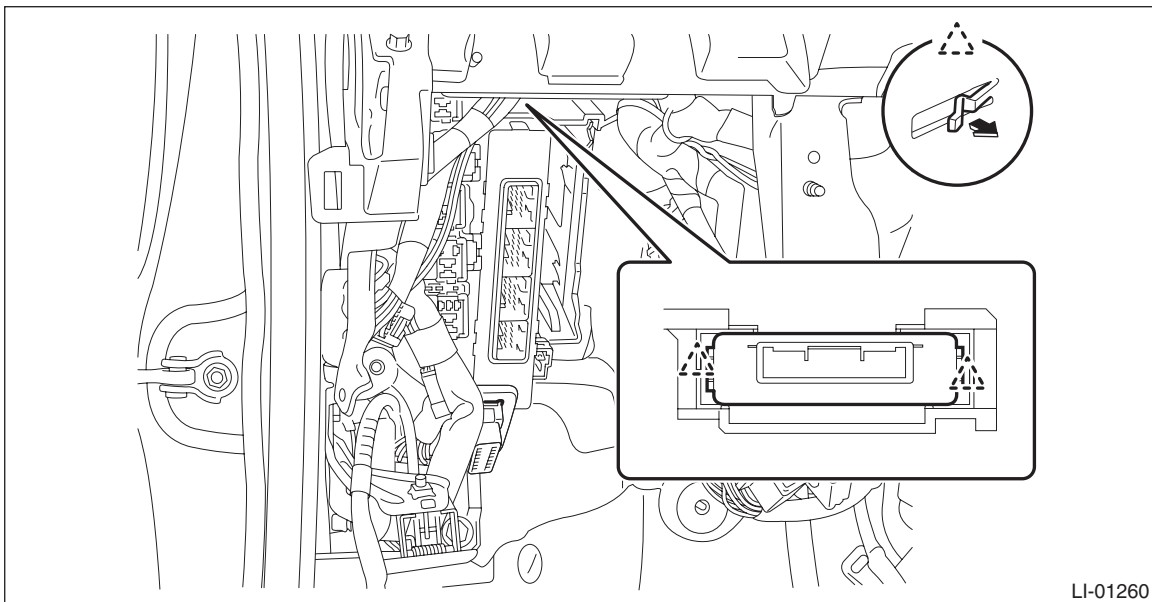

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Relay & fuse box: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

NOTE:

When the auto headlight beam leveler CM is removed, perform initialization or reinitialization. <Ref. to LI-16, PROCEDURE, Auto Headlight Beam Leveler System.>