

9. Stop Light System

A: WIRING DIAGRAM

Refer to "Stop Light System" in the wiring diagram.

- Non-turbo model without EyeSight: <Ref. to WI-401, NON-TURBO MODEL (WITHOUT EyeSight AND X MODE), WIRING DIAGRAM, Stop Light System.>
- Except for non-turbo model without EyeSight: <Ref. to WI-403, EXCEPT FOR NON-TURBO MODEL (WITHOUT EyeSight AND X MODE), WIRING DIAGRAM, Stop Light System.>

B: INSPECTION

1. CHECK STOP LIGHT SWITCH

Refer to "INSPECTION" of the "Stop Light Switch" in "BRAKE" section. <Ref. to BR-78, INSPECTION, Stop Light Switch.>

C: NOTE

For operation procedures of each component of the stop light system, refer to the respective section.

- Rear combination light assembly: <Ref. to LI-51, Rear Combination Light Assembly.>
- Tail light/stop light bulb: <Ref. to LI-52, Tail/Stop Light Bulb.>
- High-mounted stop light: <Ref. to LI-60, High-mounted Stop Light.>