

## 5. Airbag Connector

### A: PROCEDURE


#### 1. OCCUPANT DETECTION SYSTEM (BETWEEN AIRBAG REAR HARNESS AND SEAT HARNESS)

1) How to disconnect:

Press the lock arm (A) and disconnect the connector.

**CAUTION:**

**When pulling the slide lock or disconnecting connector, be sure to hold the connector, not the harness.**

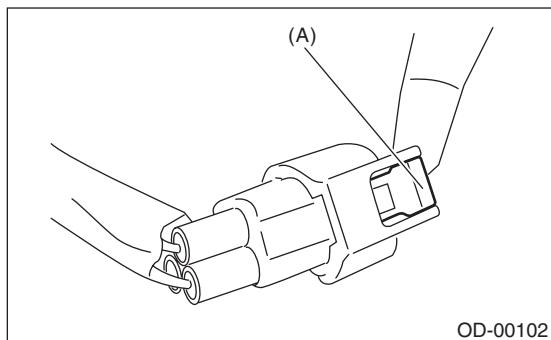

2) How to connect:

Holding the connector, push it in securely until a clicking sound is heard.

**CAUTION:**

**Be sure to insert the connector in until it is locked. Then pull it gently to make sure that it is locked.**

#### 2. AIRBAG CONTROL MODULE

Refer to Airbag System section. <Ref. to AB-19, AIRBAG CONTROL MODULE, PROCEDURE, Airbag Connector.>

#### 3. BUCKLE SWITCH (PASSENGER'S SEAT)

Refer to Airbag System section. <Ref. to AB-27, BUCKLE SWITCH RH, PROCEDURE, Airbag Connector.>