

4. Cruise Control Module

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

B: REMOVAL

For removal procedures of the control module, refer to “FUEL INJECTION (FUEL SYSTEMS)”.

- Non-turbo model: <Ref. to FU(H4DO)-94, REMOVAL, Engine Control Module (ECM).>
- Turbo model: <Ref. to FU(H4DOTC)-134, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

For installation procedures of the control module, refer to “FUEL INJECTION (FUEL SYSTEMS)”.

- Non-turbo model: <Ref. to FU(H4DO)-95, INSTALLATION, Engine Control Module (ECM).>
- Turbo model: <Ref. to FU(H4DOTC)-136, INSTALLATION, Engine Control Module (ECM).>