

## 10. Power Rear Gate Inner Switch


### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the power rear gate inner switch.
  - (1) Release the claws and pull out the power rear gate inner switch rearward.

NOTE:

Insert a flat tip screwdriver wrapped with protective tape into the slit on the left.

- (2) Disconnect the connector and remove the power rear gate inner switch.

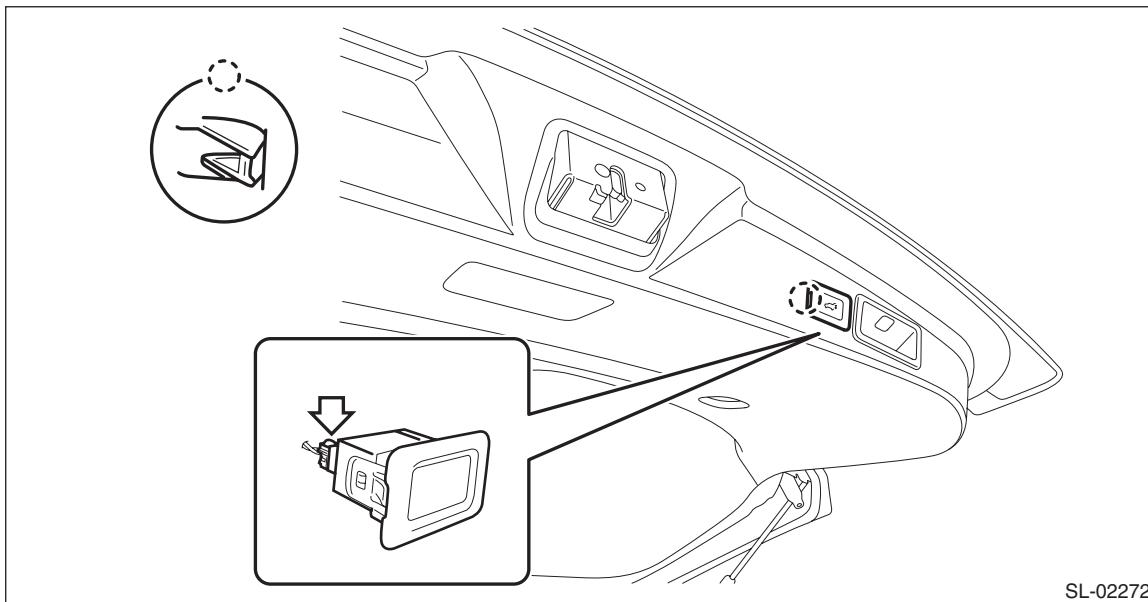

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

#### UNIT INSPECTION

**Preparation tool:**

**Circuit tester**

- 1) Check the resistance between switch terminals.

Terminal No.	Inspection conditions	Standard	Connection diagram
	Switch OFF	1 MΩ or more	
1 — 2	Switch ON	Less than 1 Ω	 SL-02277

- 2) Replace the power rear gate inner switch, if the inspection result is not within the standard value.