

Power Rear Gate Driver's Switch

POWER REAR GATE SYSTEM


11. Power Rear Gate Driver's Switch

A: REMOVAL

NOTE:

The power rear gate driver's switch is integrated with the VDC OFF switch.

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover assembly - instrument panel LWR driver. <Ref. to EI-59, REMOVAL, Instrument Panel Lower Cover.>
- 3) Remove the VDC OFF & power rear gate driver's switch.
 - (1) Release the claws and pull out each switch.
 - (2) Remove the connector from the panel - switch, and then remove the VDC OFF & power rear gate driver's switch.

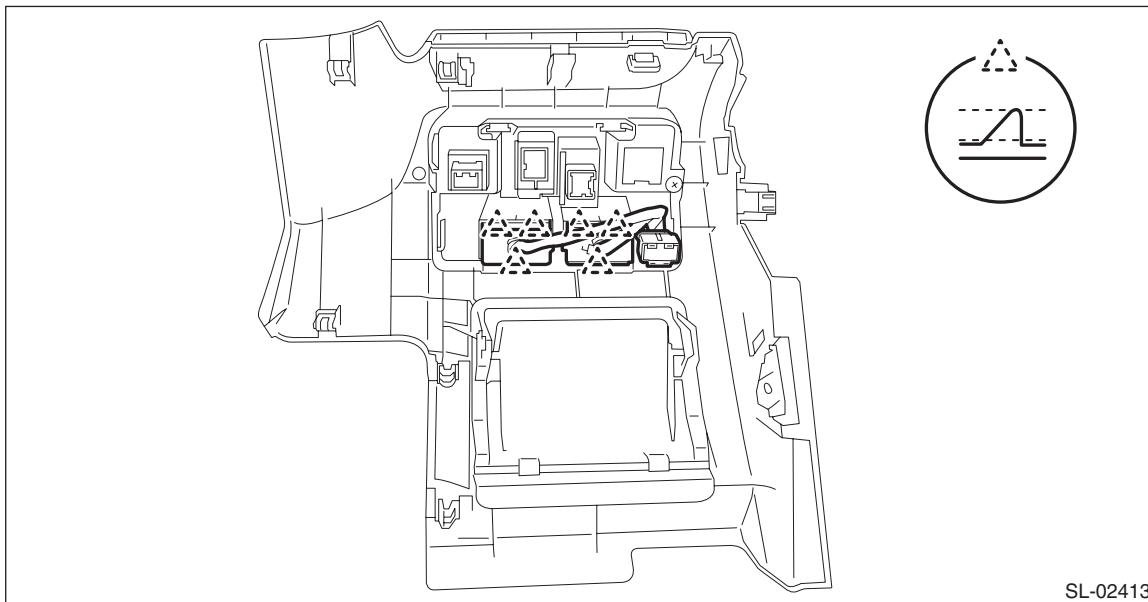

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

UNIT INSPECTION

Preparation tool:

Circuit tester

- 1) Check the resistance between switch terminals.

Terminal No.	Inspection conditions	Standard	Connection diagram
1 — 2	Switch OFF	1 MΩ or more	
	Switch ON	Less than 1 Ω	

- 2) Replace the VDC OFF & power rear gate driver's switch, if the inspection result is not within the standard value.