


1. General Description

A: COMPONENT

1. FRONT SEAT

- Manual seat LH

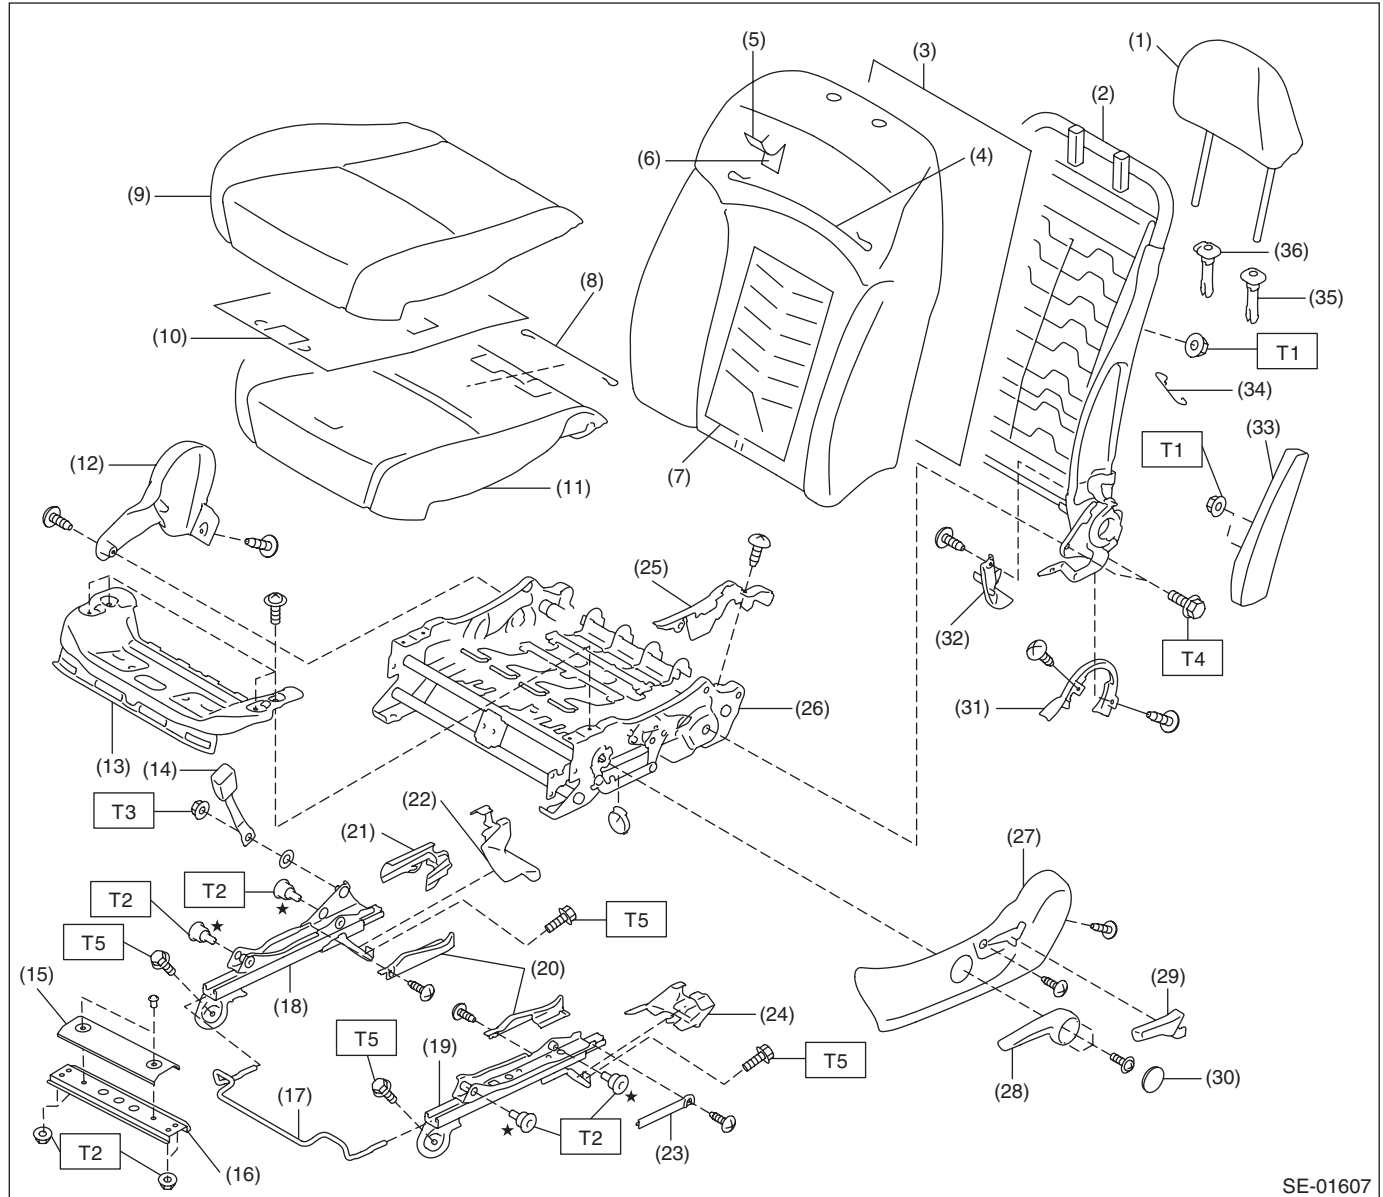

SE-01607

General Description

SEATS

(1) Headrest ASSY - front	(16) Member - bracket	(31) Cover - hinge base front seat
(2) Frame ASSY - front backrest	(17) Lever - towel bar	(32) Cover - inner front
(3) Cover - silencer front seat backrest	(18) Slide rail ASSY - INN	(33) Side airbag module
(4) Wire set - front seat backrest	(19) Slide rail ASSY - OUT	(34) Hook - backrest front
(5) Cover COMPL - front backrest	(20) Cover - slide rail INN	(35) Bushing - free headrest
(6) Pad ASSY - front seat backrest	(21) Leg cover UPR	(36) Bushing - lock headrest
(7) Heater unit - front seat backrest	(22) Cover - bolt rear INN	
(8) Wire set - front seat cushion	(23) Cover - slide rail OUT	
(9) Cover - front cushion	(24) Cover - bolt rear OUT	
(10) Heater unit - front seat cushion	(25) Cover - frame front cushion	
(11) Pad ASSY - front seat cushion	(26) Frame ASSY - front cushion	
(12) Cover - hinge front seat INN	(27) Cover - hinge front seat OUT	
(13) Panel - front seat	(28) Knob - lifter	
(14) Seat belt inner - front	(29) Lever - reclining	
(15) Member - cover	(30) Cap - lifter lever	

Tightening torque: N·m (kgf-m, ft-lb)

T1: 6 (0.61, 4.4)

T2: 18 (1.84, 13.3)

T3: 38 (3.87, 28.0)


T4: 52 (5.30, 38.4)

T5: 53 (5.40, 39.1)

General Description

SEATS

• Power seat LH

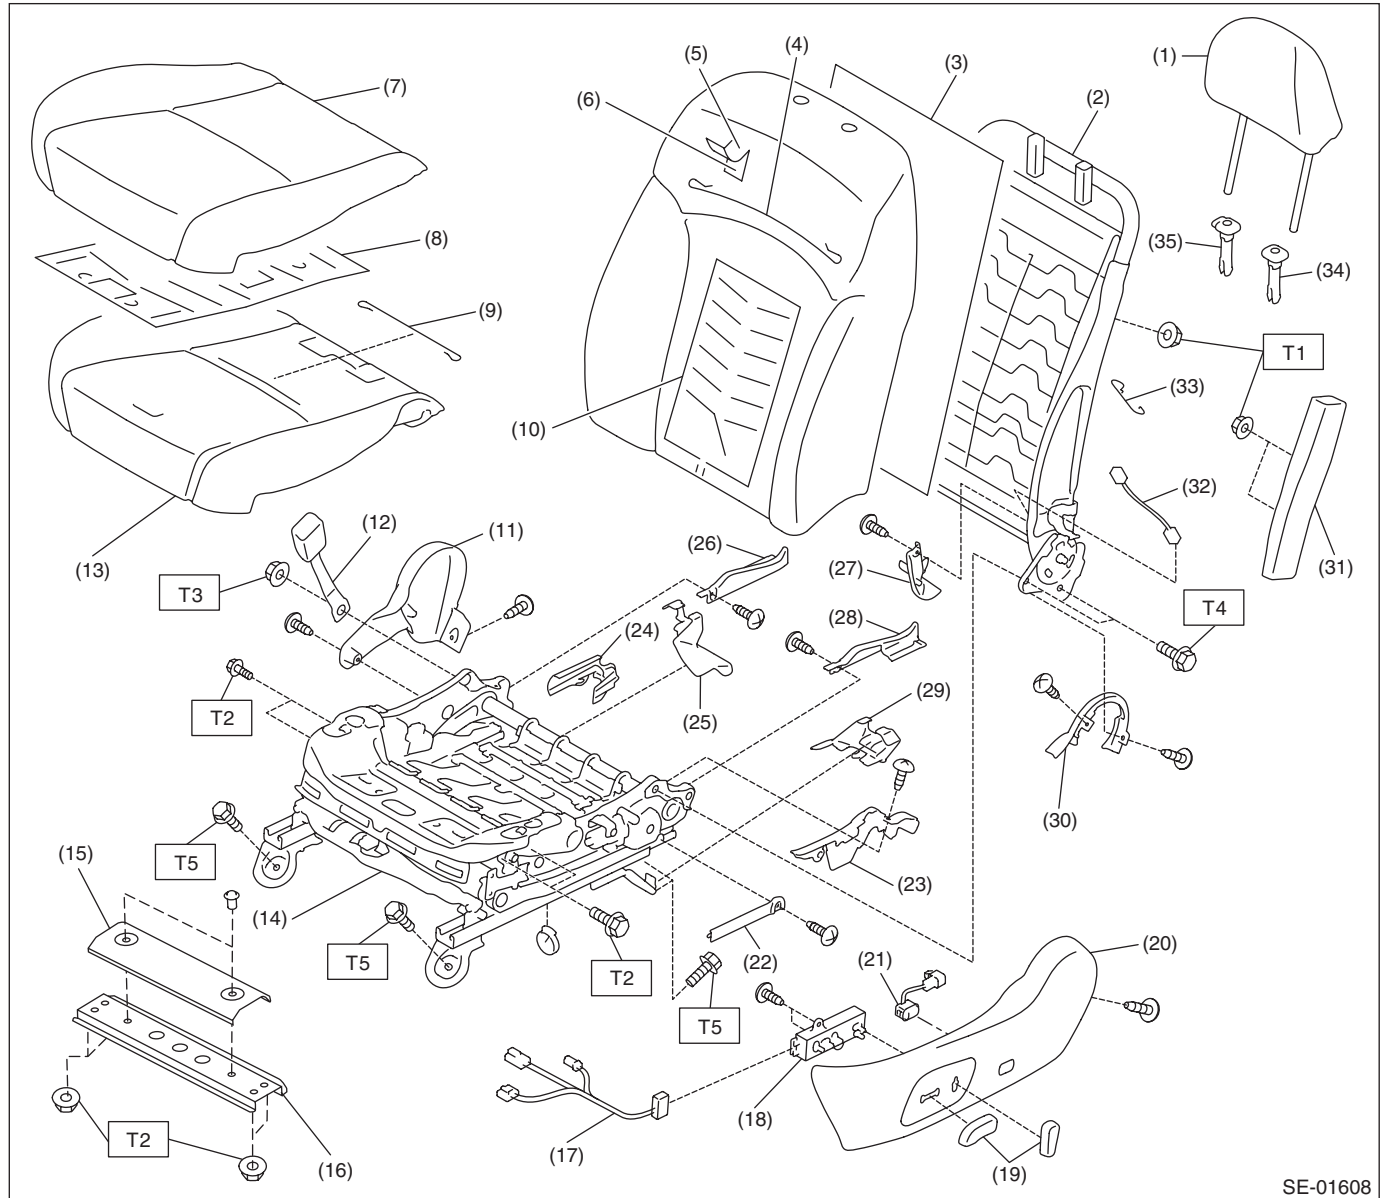

SE-01608

- | | | |
|--|---------------------------------------|--------------------------------|
| (1) Headrest ASSY - front | (16) Member - bracket | (31) Side airbag module |
| (2) Frame ASSY - front backrest | (17) Harness ASSY - power seat | (32) Harness ASSY - power seat |
| (3) Cover - silencer front seat backrest | (18) Switch ASSY - power seat | (33) Hook - backrest front |
| (4) Wire set - front seat backrest | (19) Knob - power seat | (34) Bushing - free headrest |
| (5) Cover COMPL - front backrest | (20) Switch ASSY - lumbar | (35) Bushing - lock headrest |
| (6) Pad ASSY - front seat backrest | (21) Cover - hinge front seat OUT | |
| (7) Cover - front cushion | (22) Cover - slide rail OUT | |
| (8) Heater unit - front cushion | (23) Cover - frame front seat cushion | |
| (9) Wire set - front seat cushion | (24) Leg cover UPR | |
| (10) Heater unit - front seat backrest | (25) Cover - bolt rear INN | |
| (11) Cover - hinge front seat INN | (26) Cover - slide rail INN | |
| (12) Seat belt inner - front | (27) Cover - inner front | |
| (13) Pad ASSY - front seat cushion | (28) Cover - slide rail OUT | |
| (14) Frame ASSY - front cushion | (29) Cover - bolt rear OUT | |
| (15) Member - cover | (30) Cover - hinge base front seat | |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 6 (0.61, 4.4)


T2: 18 (1.84, 13.3)

T3: 38 (3.87, 28.0)

T4: 52 (5.30, 38.4)

T5: 53 (5.40, 39.1)

• Manual seat RH

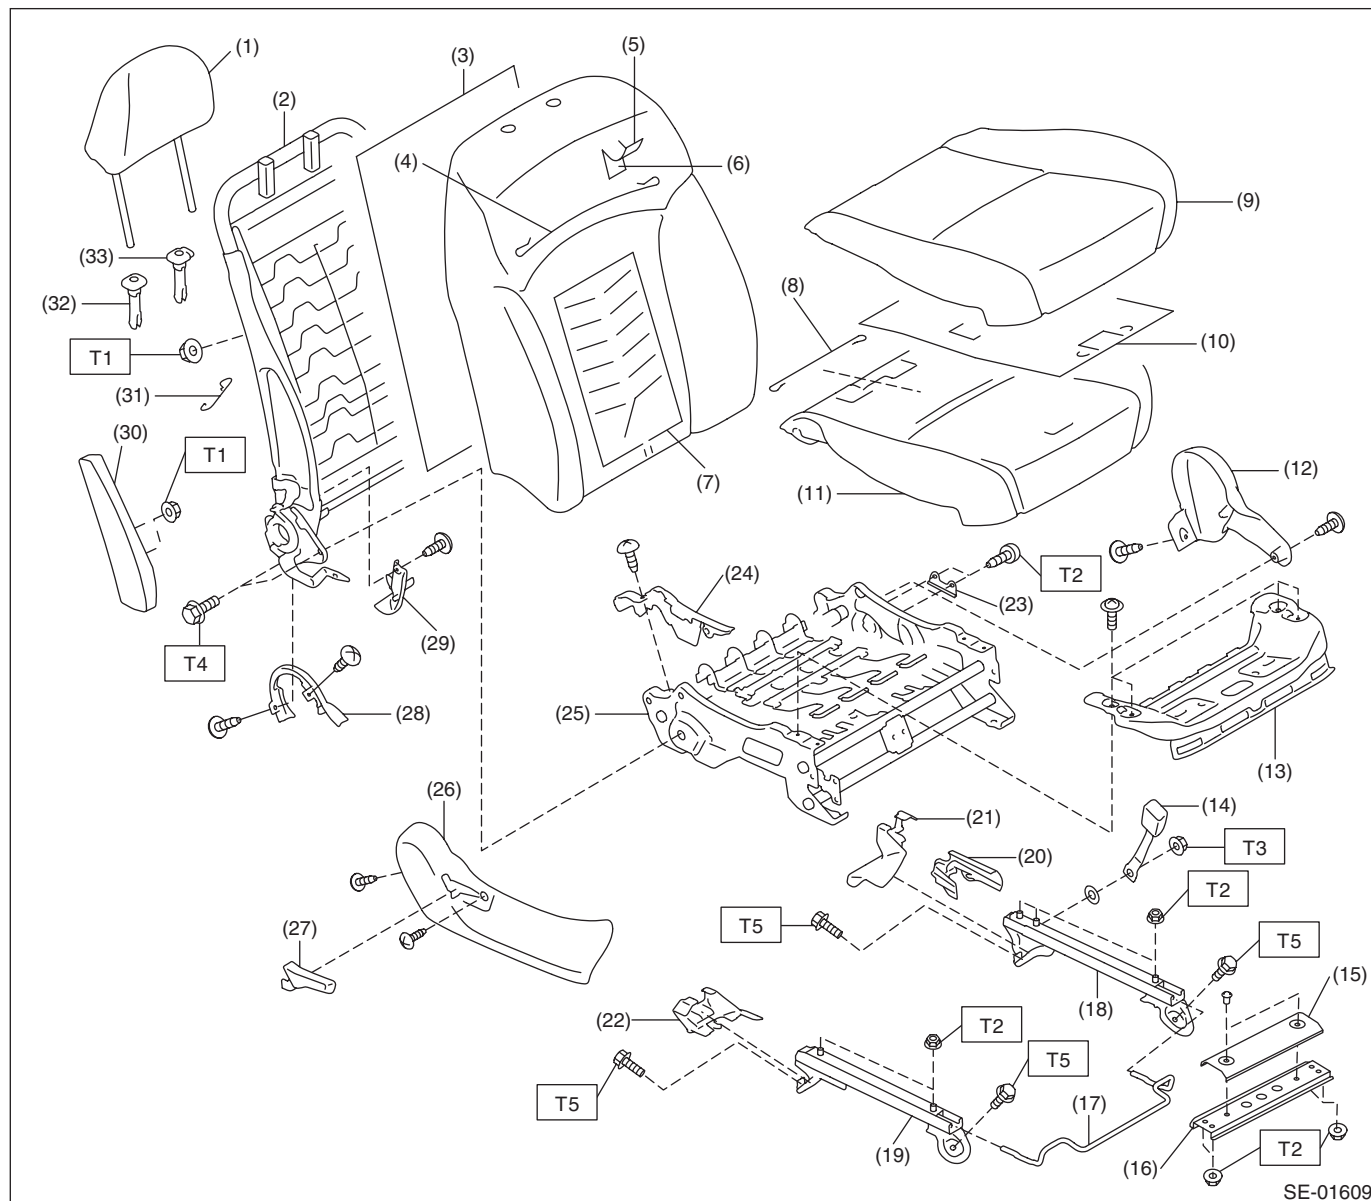

- (1) Headrest ASSY - front
- (2) Frame ASSY - front backrest
- (3) Cover - silencer front seat backrest
- (4) Wire set - front seat backrest
- (5) Cover COMPL - front backrest
- (6) Pad ASSY - front seat backrest
- (7) Heater unit - front seat backrest
- (8) Wire set - front seat cushion
- (9) Cover - front cushion
- (10) Heater unit - front seat cushion
- (11) Pad ASSY - front seat cushion
- (12) Cover - hinge front seat INN
- (13) Panel - front seat
- (14) Seat belt inner - front

- (15) Member - cover
- (16) Member - bracket
- (17) Lever - towel bar
- (18) Slide rail ASSY - INN
- (19) Slide rail ASSY - OUT
- (20) Leg cover UPR
- (21) Cover - bolt rear INN
- (22) Cover - bolt rear OUT
- (23) J hook
- (24) Cover - frame front cushion
- (25) Frame ASSY - front cushion
- (26) Cover - hinge front seat OUT
- (27) Lever - reclining
- (28) Cover - hinge base front seat

- (29) Cover - inner front
- (30) Side airbag module
- (31) Hook - backrest front
- (32) Bushing - free headrest
- (33) Bushing - lock headrest

Tightening torque: N-m (kgf-m, ft-lb)

T1: 6 (0.61, 4.4)

T2: 18 (1.84, 13.3)

T3: 38 (3.87, 28.0)


T4: 52 (5.30, 38.4)

T5: 53 (5.40, 39.1)

General Description

SEATS

2. REAR SEAT

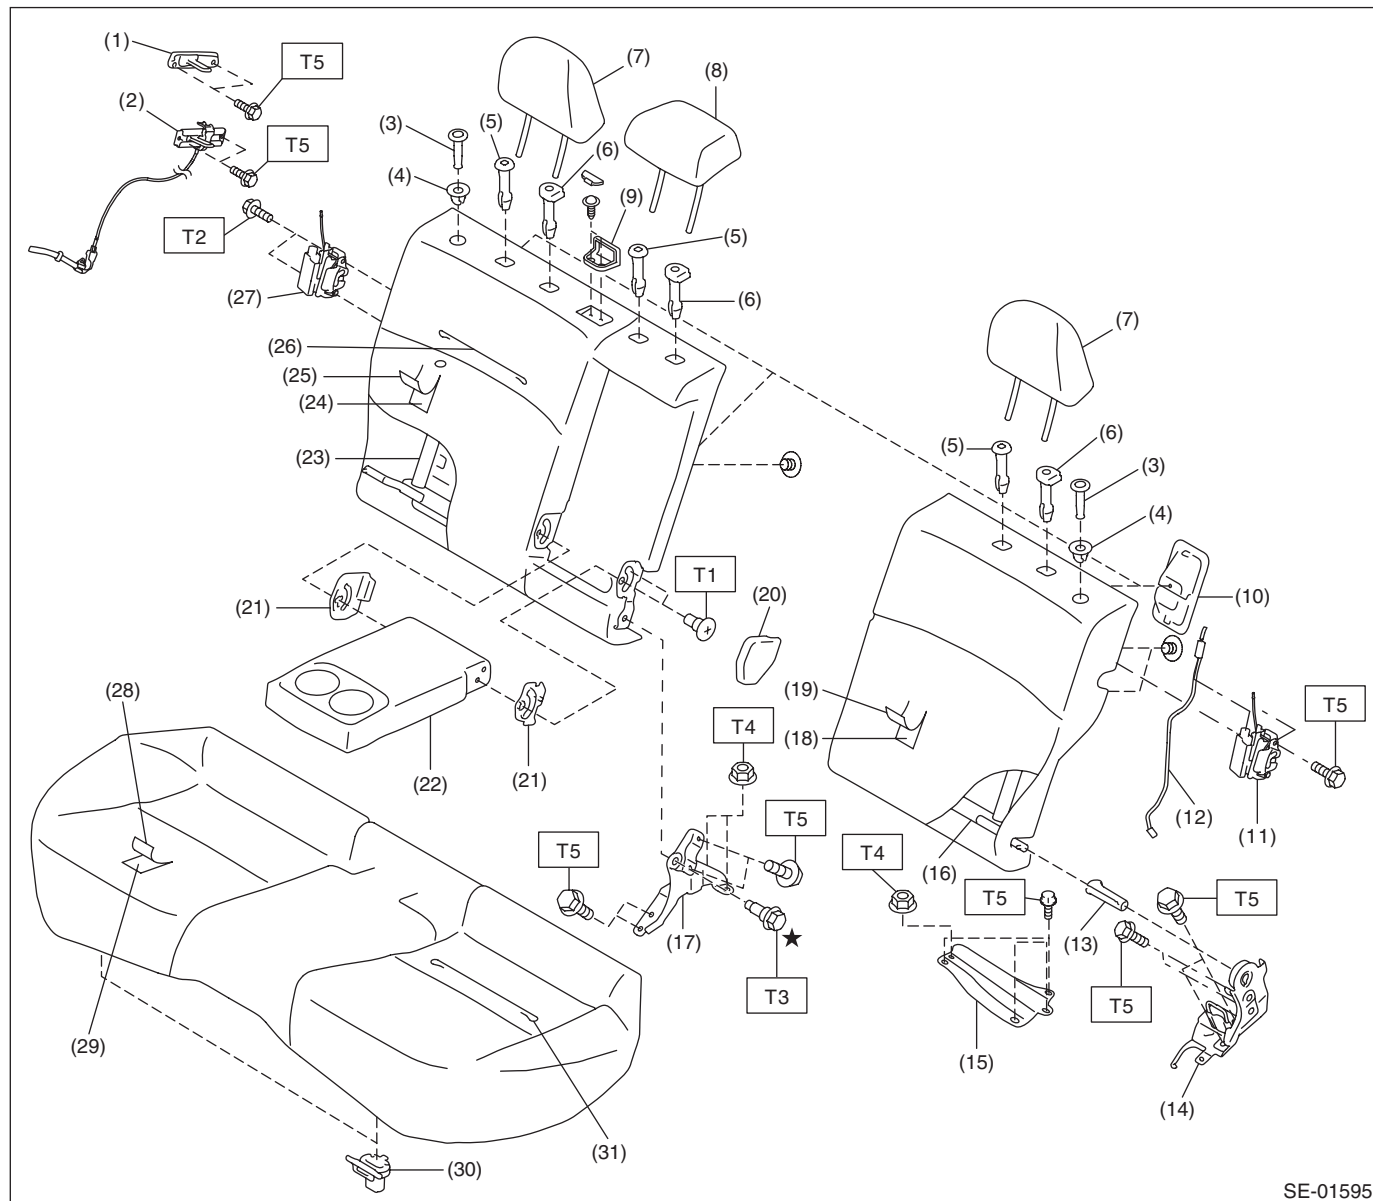

SE-01595

(1) Striker - backrest rear RH (except for reclining type)	(14) Hinge ASSY - rear backrest	(27) Lock ASSY - backrest rear RH
(2) Striker - backrest rear RH (reclining type)	(15) Hinge ASSY - rear backrest stay	(28) Cover - rear cushion
(3) Knob - backrest rear	(16) Frame ASSY - rear backrest LH	(29) Pad and frame ASSY - rear cushion
(4) Knob - guide	(17) Hinge ASSY - backrest center	(30) Hook - seat cushion rear
(5) Bushing - headrest	(18) Pad ASSY - rear seat backrest LH	(31) Wire set - rear cushion
(6) Bushing - lock ASSY	(19) Cover COMPL - rear backrest LH	
(7) Pillow ASSY - rear backrest	(20) Cover - armrest	
(8) Pillow ASSY - rear center	(21) Bushing - rear armrest	
(9) Belt guide - rear seat	(22) Armrest ASSY - rear center	
(10) Tether anchor cover	(23) Frame ASSY - rear backrest RH	
(11) Lock ASSY - backrest rear LH	(24) Pad ASSY - rear seat backrest RH	
(12) Remote control back rest actuator ASSY	(25) Cover COMPL - rear backrest RH	
(13) Bushing - backrest hinge	(26) Wire set - rear backrest	

Tightening torque: N·m (kgf·m, ft·lb)

T1: 9.8 (1.0, 7.2)

T2: 17.6 (1.79, 13.0)

T3: 22.5 (2.29, 16.6)

T4: 24.5 (2.50, 18.1)

T5: 33 (3.36, 24.3)

B: CAUTION

When removing the front seat from the vehicle, refer to “CAUTION” of “General Description” in “AIRBAG SYSTEM” section. <Ref. to AB-9, CAUTION, General Description.>

C: PREPARATION TOOL**1. GENERAL TOOL**

TOOL NAME	REMARKS
Long nose plier	Used for removing the hog ring.
Hog ring pliers	Used for installing the hog ring.
Circuit tester	Used for measuring resistance and voltage.