

3. Rear Seat


A: REMOVAL

1) Remove the rear seat cushion assembly.


(1) Push the corners of the rear seat cushion from above.

(2) While pushing the corners of the rear seat cushion from above, pull the knob of the hook - seat cushion rear towards yourself.

(3) While pulling the knob towards yourself, disconnect the hooks by lifting up the rear seat cushion.

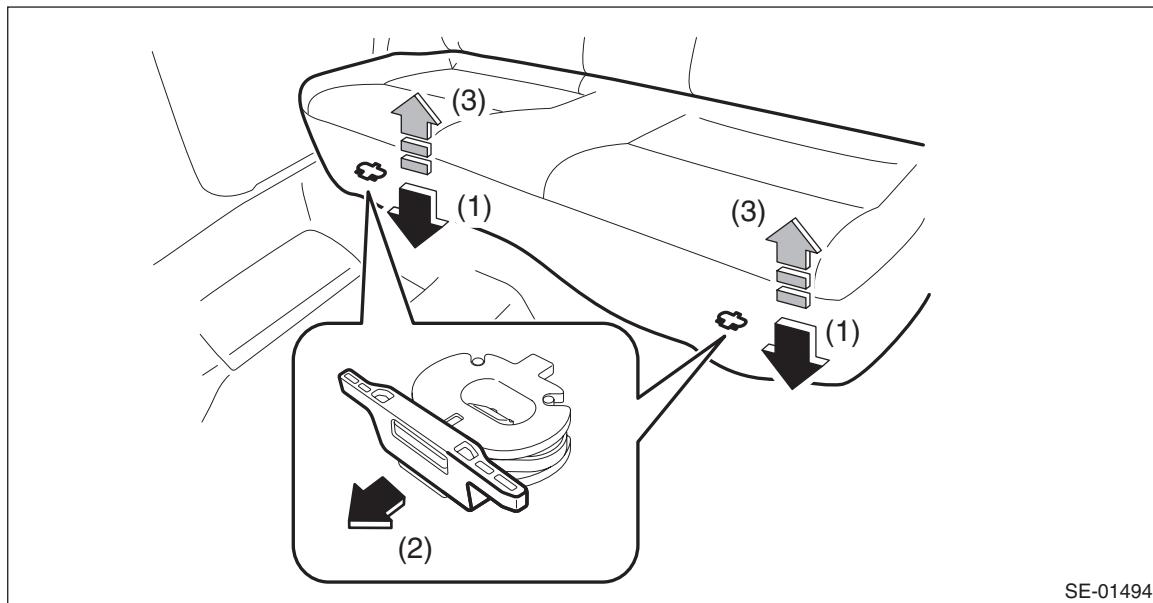


(4) Remove the hook (A) by pushing it back while lifting the front side of the rear seat cushion, and remove the rear seat cushion.

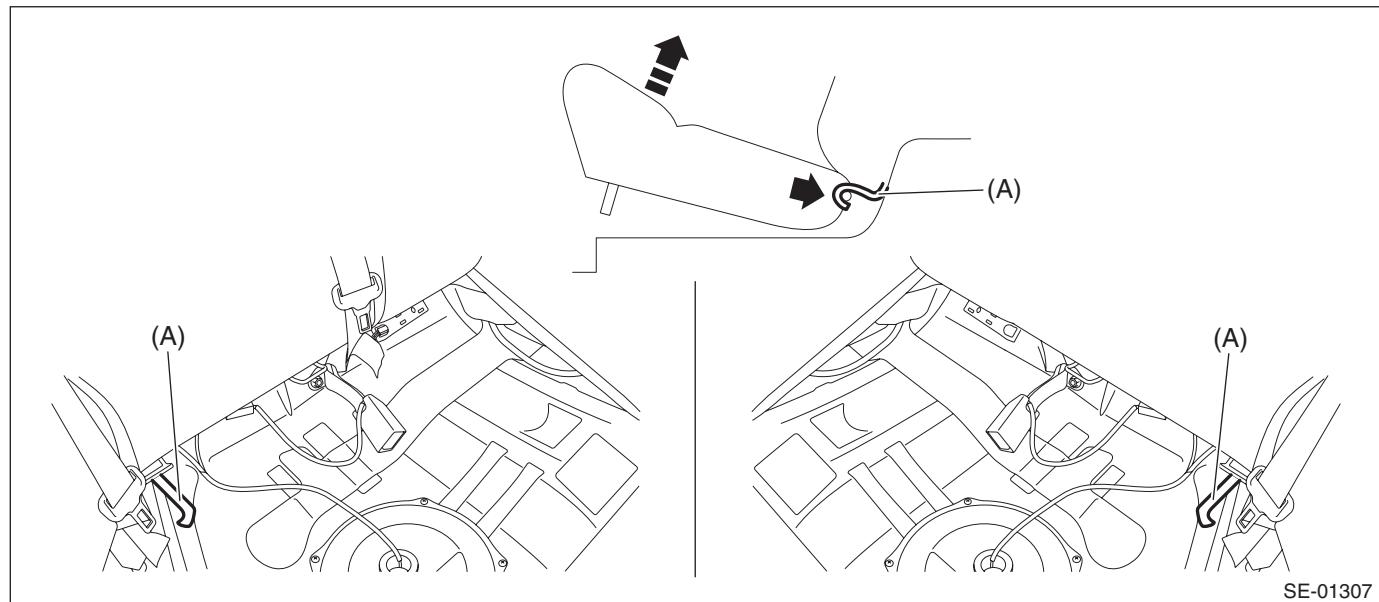


2) Remove the backrest assembly LH.

(1) Tilt the backrest assembly LH forward.

(2) Remove the clips located at the bottom of the cover COMPL - rear backrest LH and RH of the rear seat back.

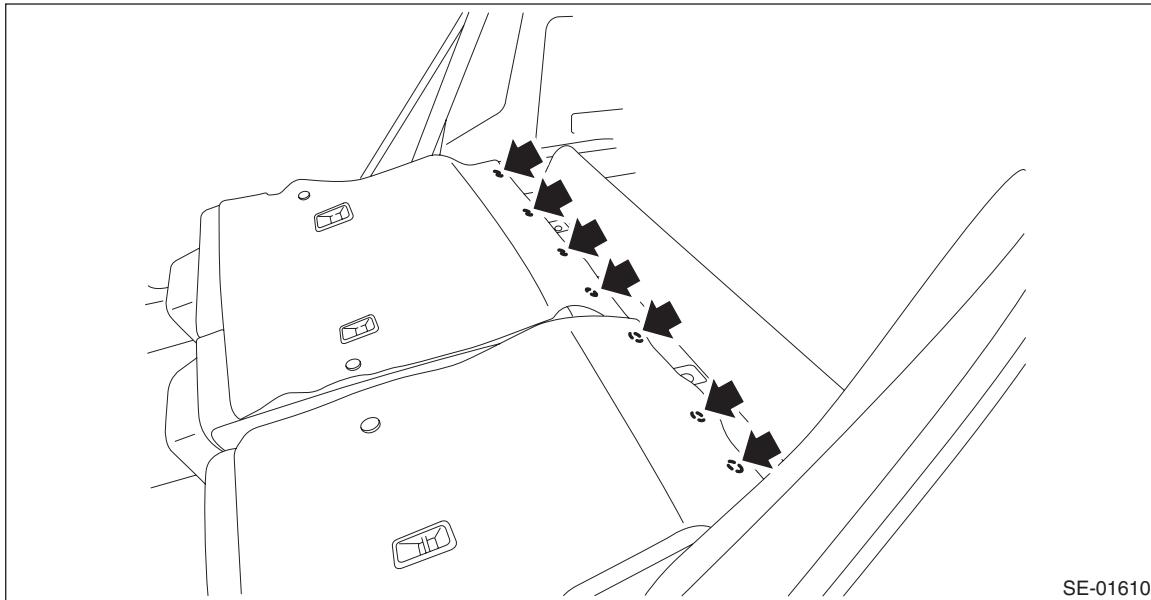

(3) Turn over the cover COMPL - rear backrest LH to remove the bolts.

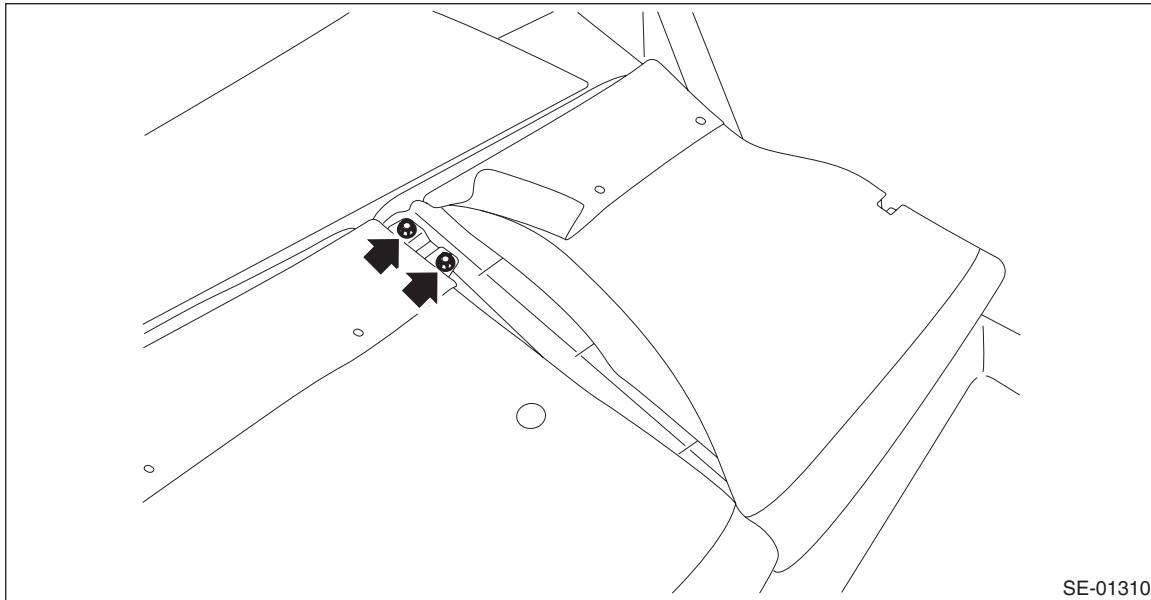


Rear Seat

SEATS

(4) Remove the backrest assembly LH from the hinge assembly.


NOTE:

The backrest assembly cannot be removed unless pin positions on the hinge assembly side and backrest assembly side are aligned.

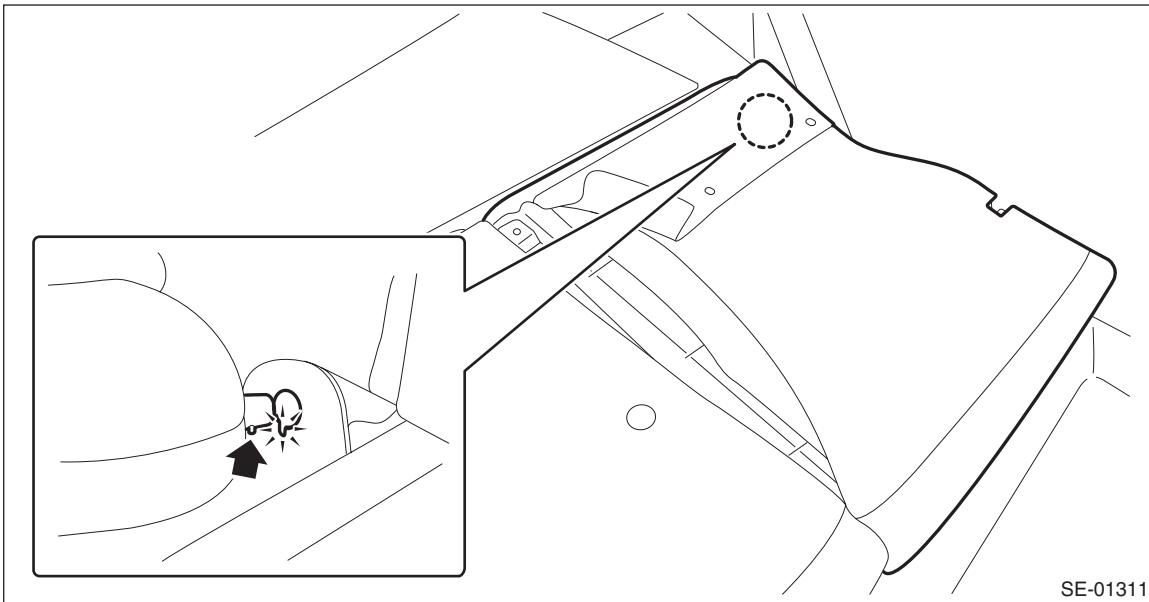

3) Remove the backrest assembly RH.


(1) Remove the bolts and nuts.

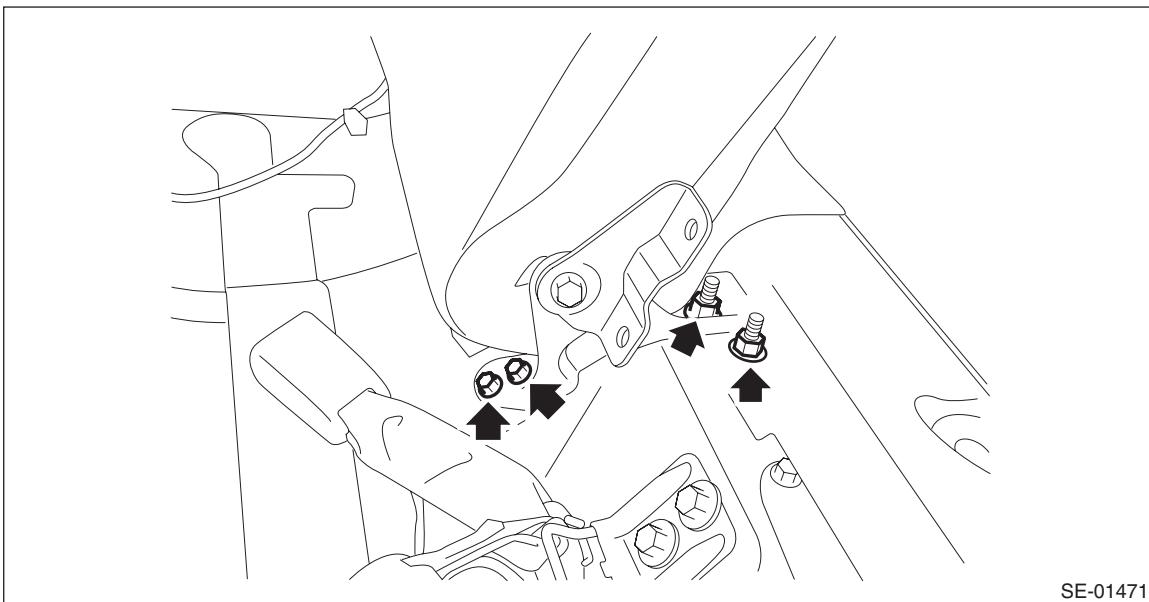

(2) Remove the backrest assembly RH from the hinge assembly.

NOTE:

The backrest assembly cannot be removed unless pin positions on the hinge assembly side and backrest assembly side are aligned.

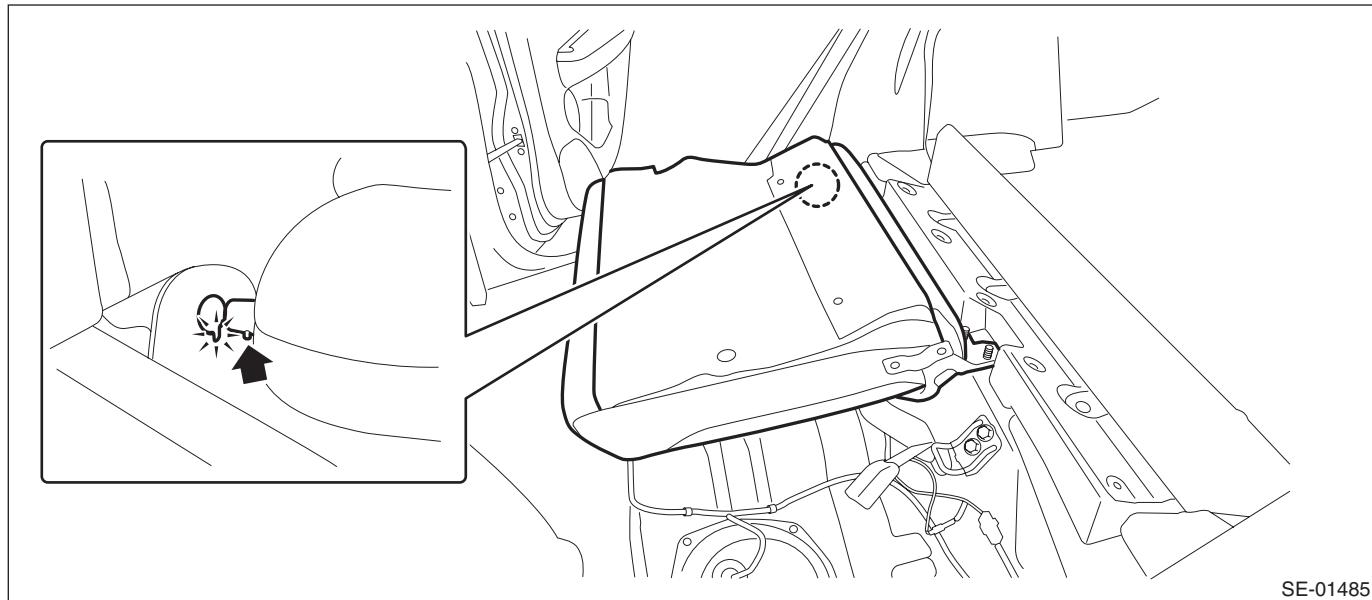

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:


- After installing the backrest assembly, make sure that each seat belt operates normally.
- Make sure that they are properly secured on each hook on the vehicle side.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SE-6, REAR SEAT, COMPONENT, General Description.>

C: DISASSEMBLY


- 1) Remove the rear seat. <Ref. to SE-32, REMOVAL, Rear Seat.>
- 2) Remove the pillow assembly - rear center.
- 3) Remove the caps and screws, then remove the belt guide - rear seat (a).

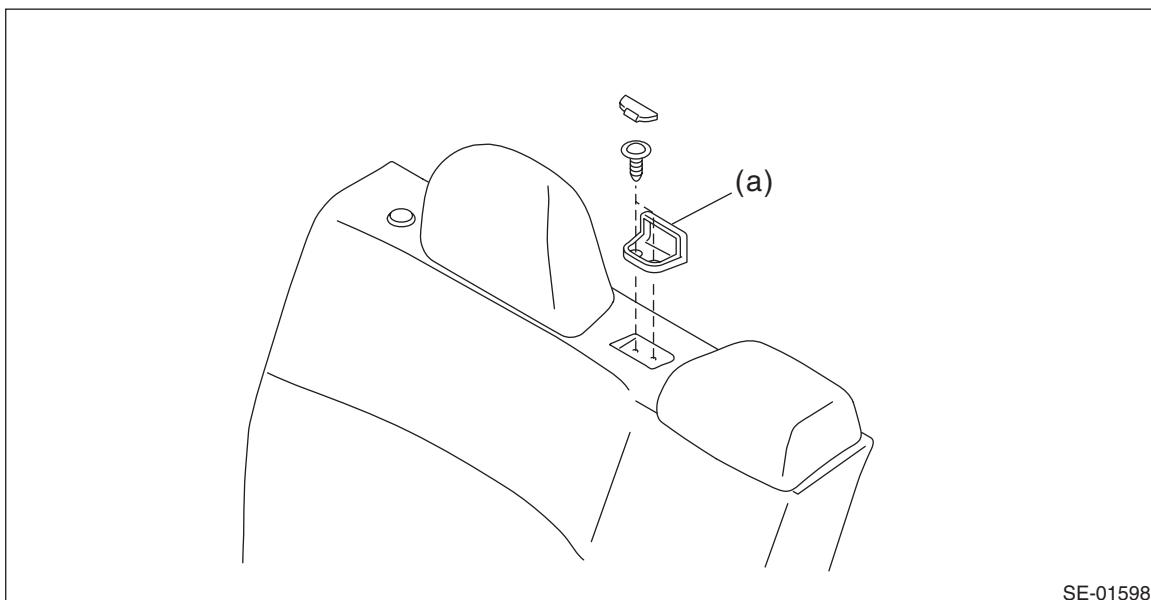

Rear Seat

SEATS


- 4) Remove the pillow assembly - rear backrest.
- 5) Remove the armrest assembly - rear center. (Models with armrest)
 - (1) Remove the cover - armrest by pulling it in the direction of the arrow (black).
 - (2) Remove the screws and remove the armrest assembly - rear center.

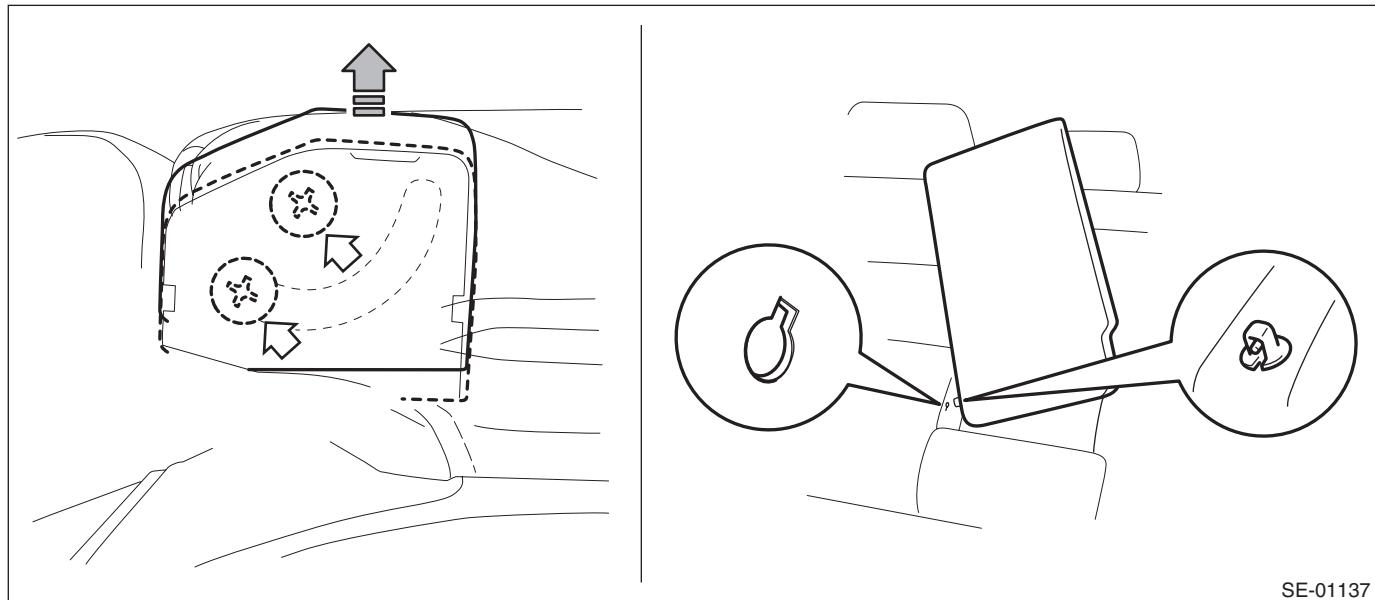


NOTE:

The armrest assembly - rear center cannot be detached unless pin positions on the RH side of the backrest assembly and on the center side of the armrest assembly - rear are aligned.


- 6) Remove the knob - backrest. (Screw-in type)

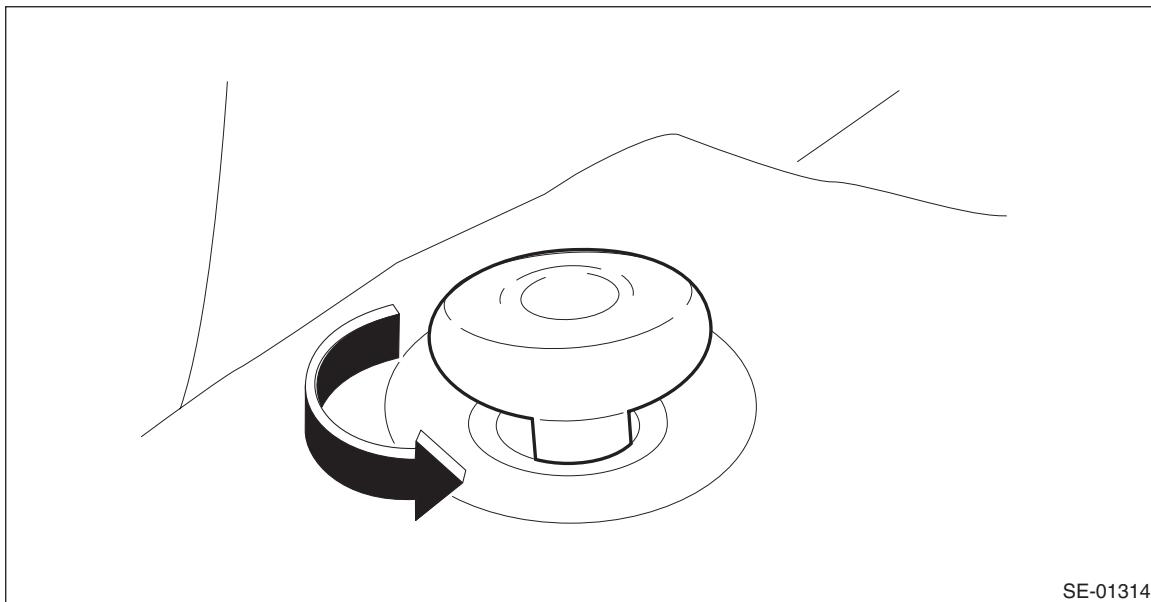

7) Remove the tether anchor cover.

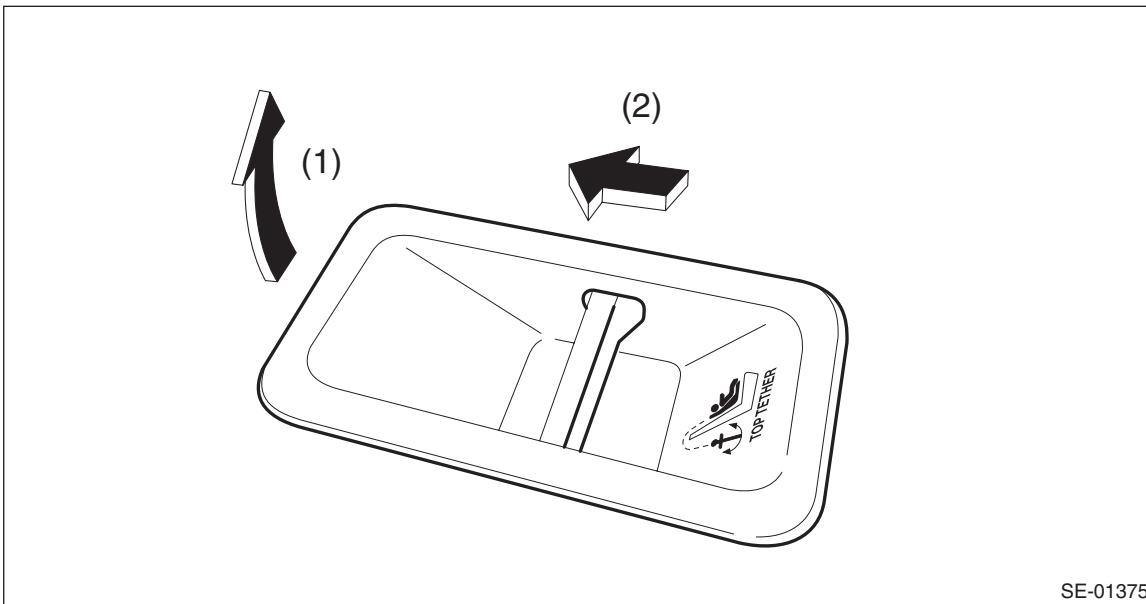


8) Detach the plastic fastener at the bottom of backrest assembly LH and turn over the cover COMPL - rear backrest LH.

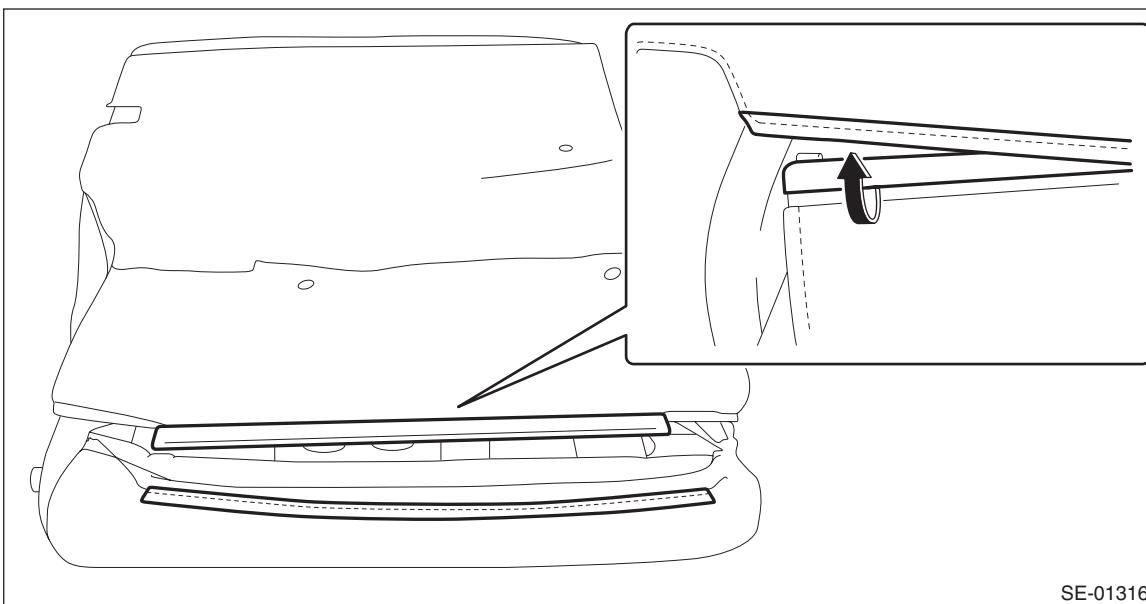


Rear Seat

SEATS


9) Remove the clips on the backside of the cover COMPL - rear backrest LH.

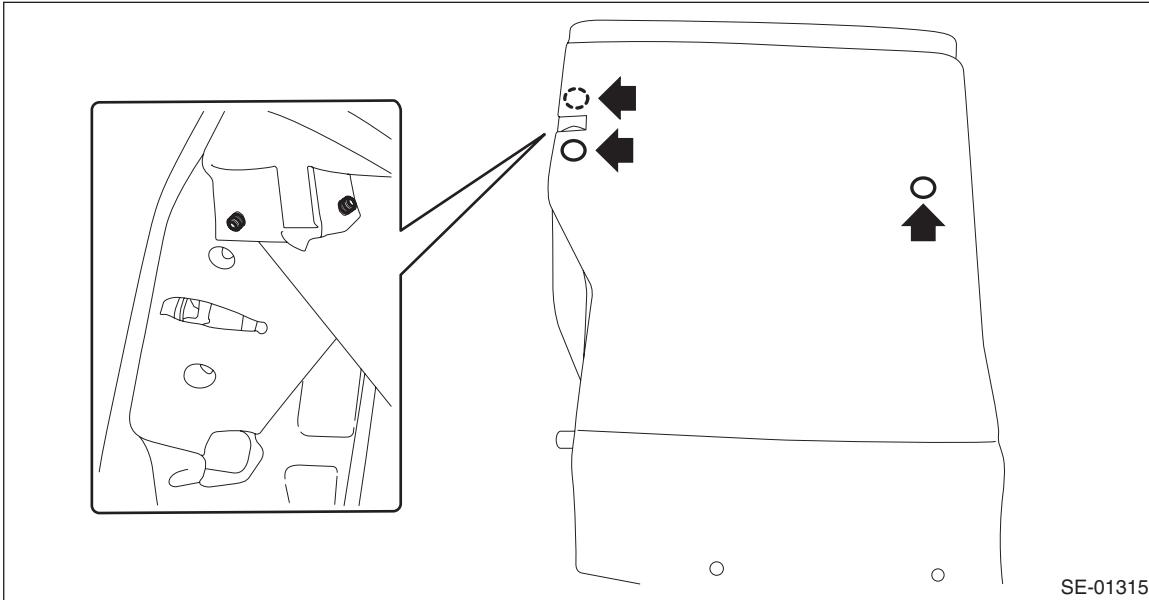


10) Remove the plastic hooks on the back side of the backrest assembly LH.

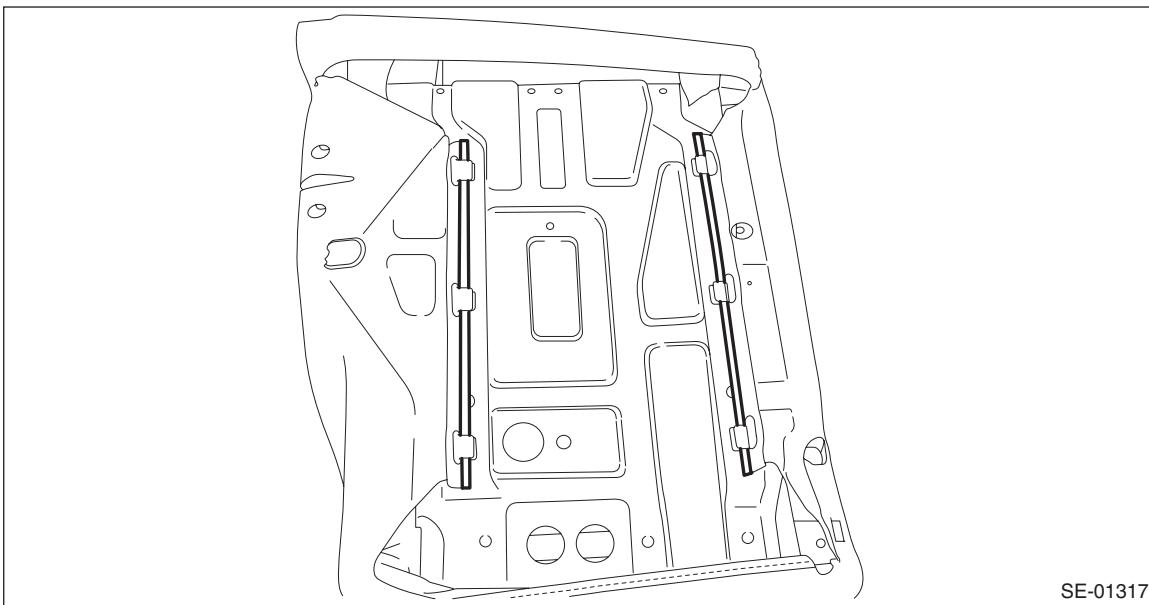

- 11) Detach the bushing - headrest and the bushing - lock assembly, and remove the frame assembly - rear backrest LH from the pad assembly - main LH.

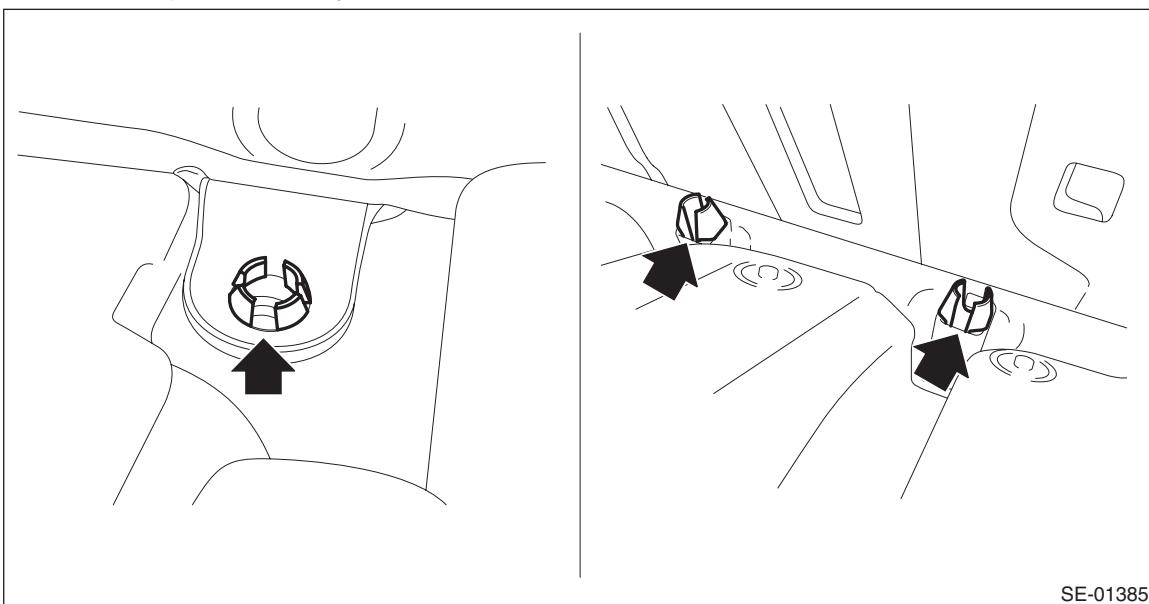


- 12) Remove the lock assembly - rear backrest rear LH.

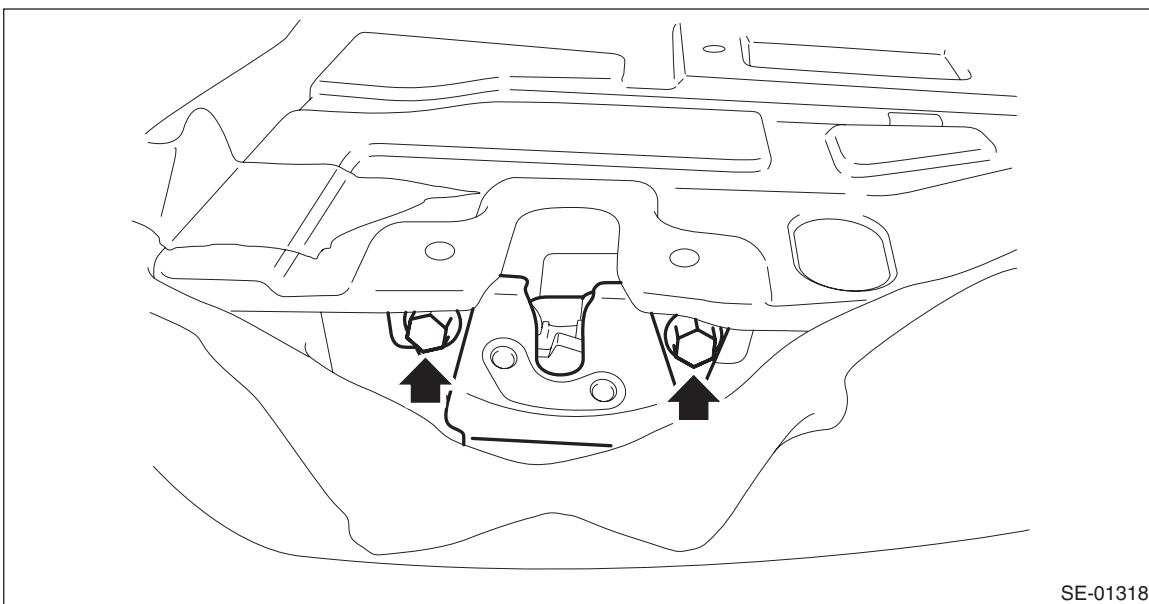

Rear Seat

SEATS


- 13) Remove the hog rings (A) and wire clip (B), then remove the cover COMPL - rear backrest.
• LH side

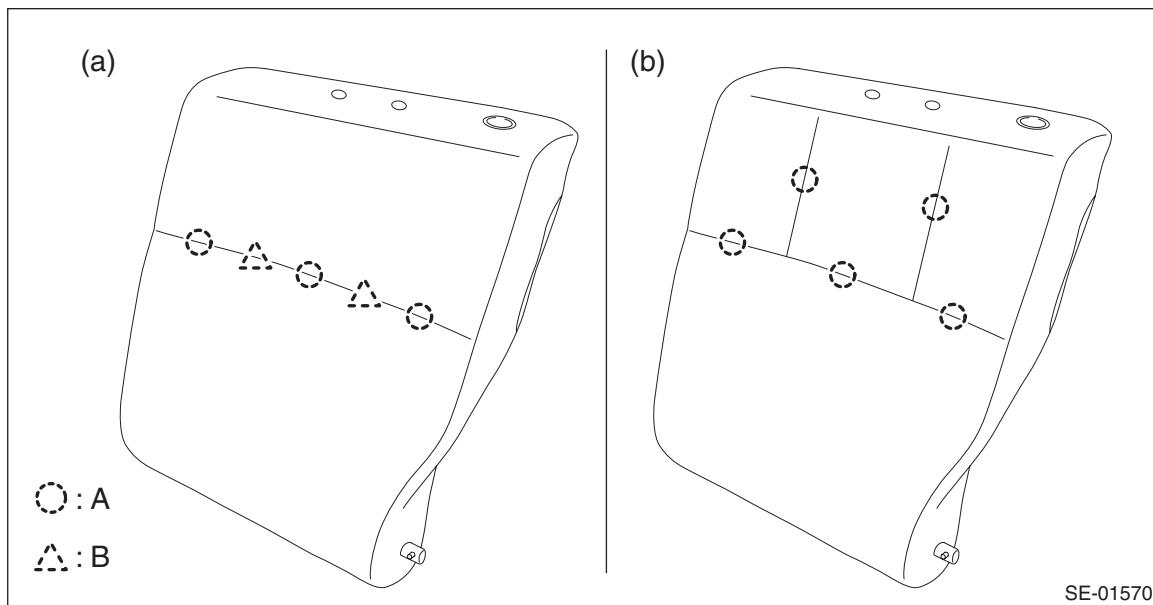

(a) Normal seat type

(b) Leather seat type

- RH side

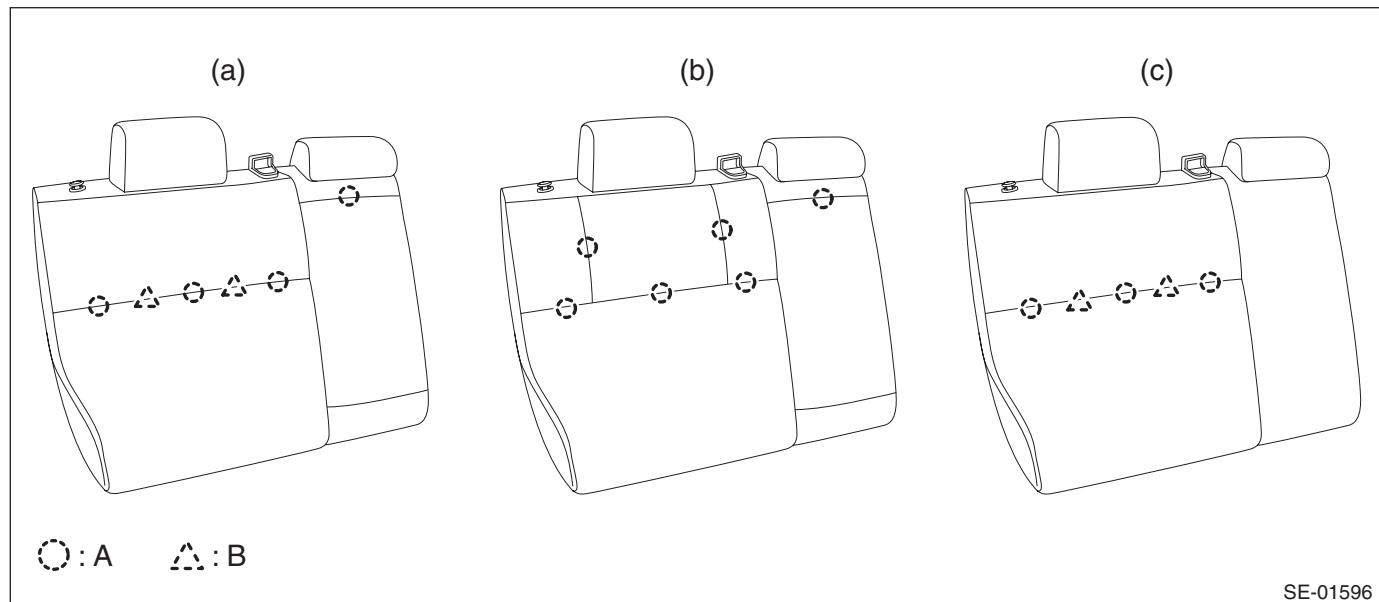

(a) Model with armrest ASSY - rear center (normal seat type)

(b) Model with armrest ASSY - rear center (leather seat type)


(c) Model without armrest ASSY - rear center

- 14) Referring to the procedures after step 2), disassemble the backrest assembly RH.

Rear Seat


SEATS

15) Remove the hog rings (A) on the back side of the seat cushion assembly.

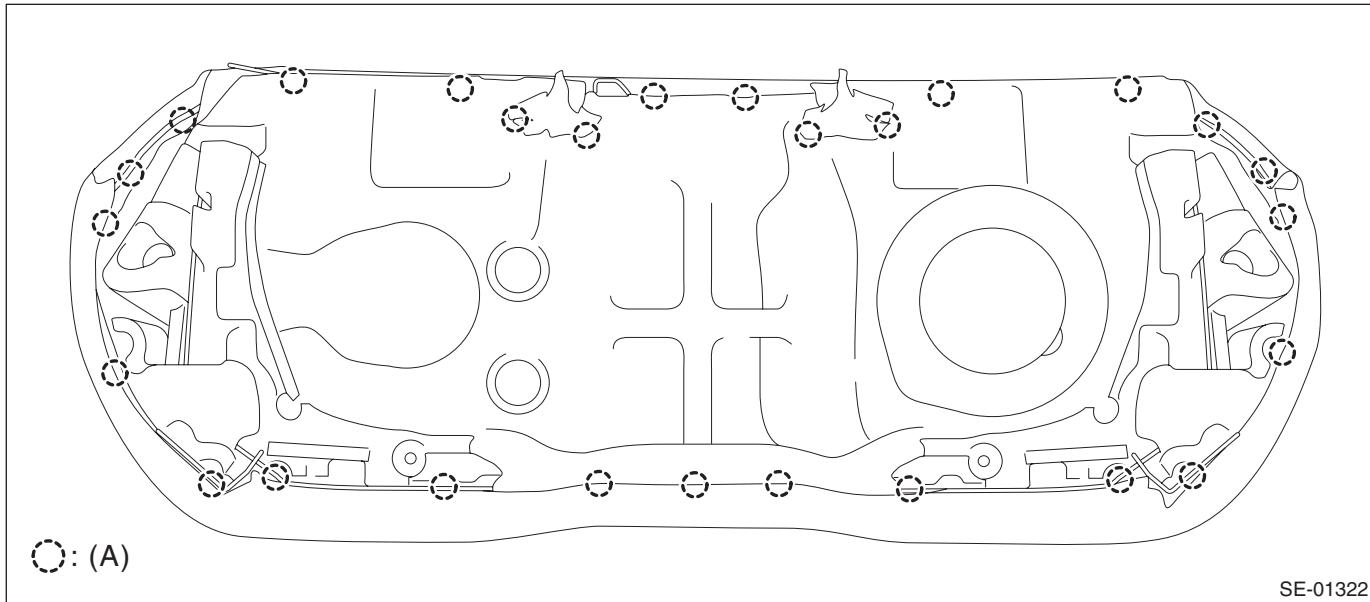

SE-01322

16) Remove the hog rings (A), then remove the cover - rear cushion.

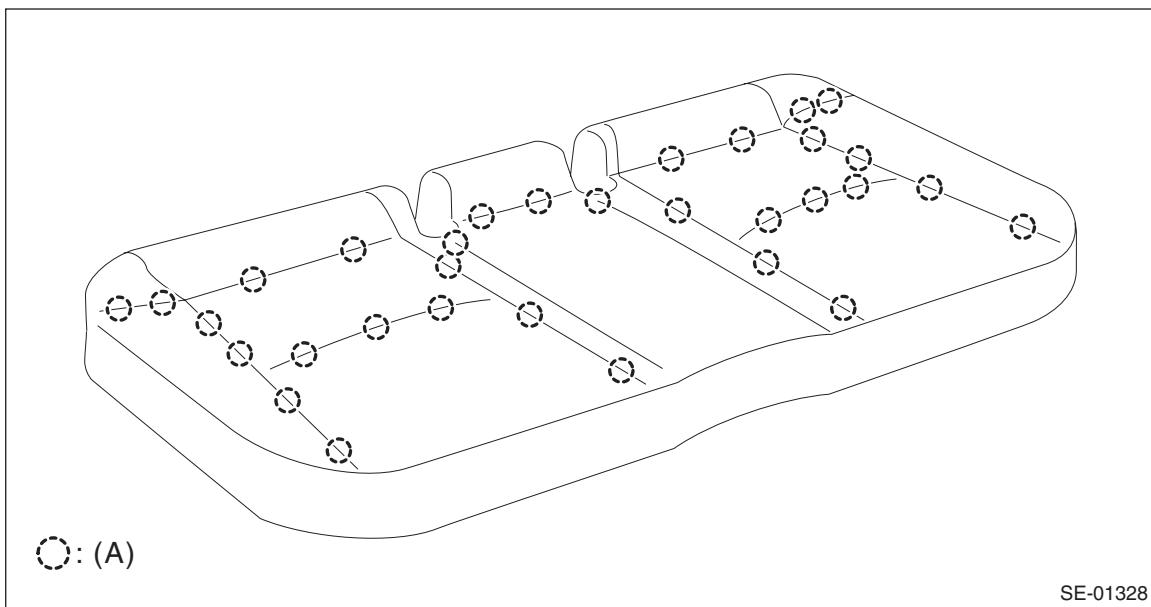

SE-01328


D: ASSEMBLY

CAUTION:

- Do not reuse hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that there is no wrinkle or twisting on the cover COMPL - rear backrest.

1) Assemble the cover COMPL - rear backrest and the cover - rear cushion in the same manner as for the front seat. <Ref. to SE-26, ASSEMBLY, Front Seat. >

2) Make sure that all hog rings (A) and wire clips (B) are attached securely.

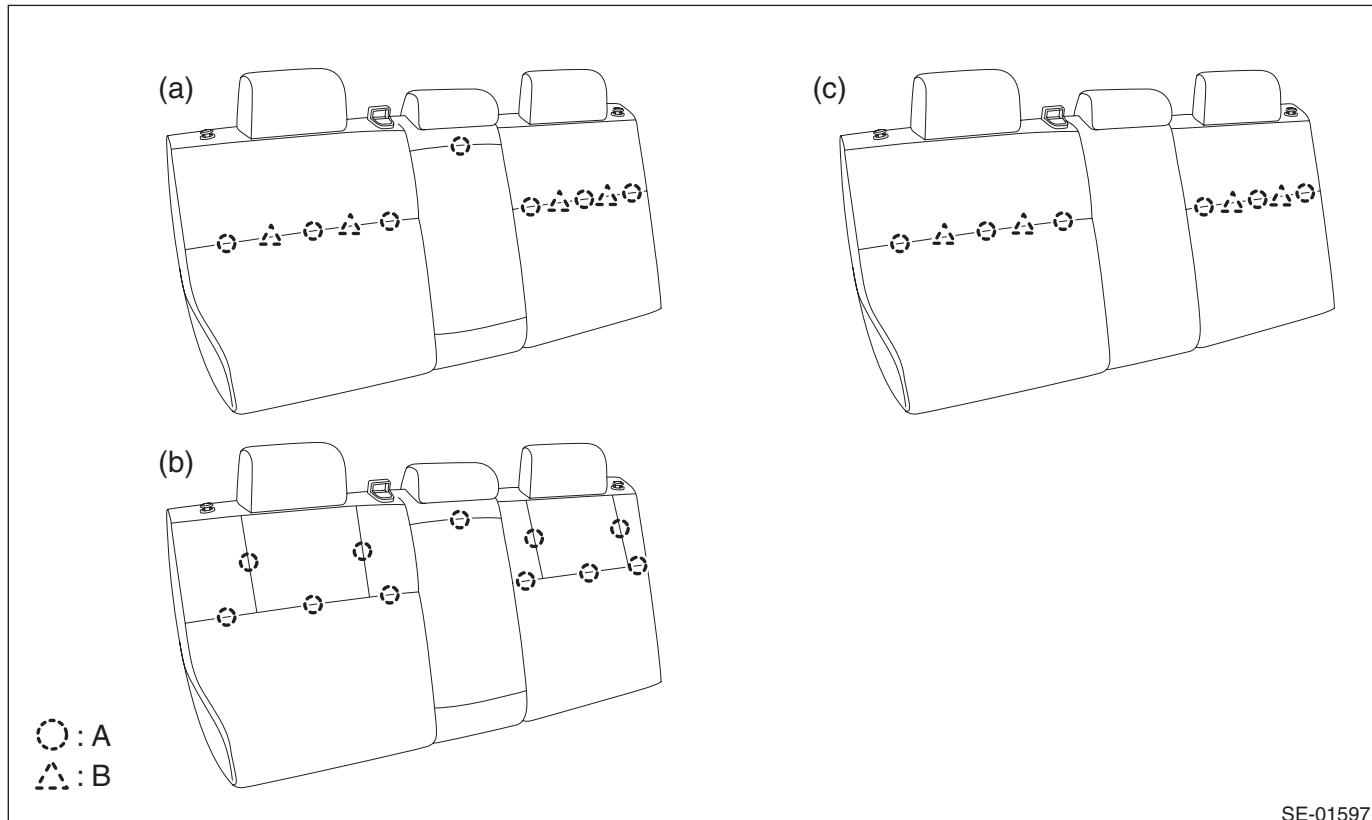



SE-01597

(a) Model with armrest ASSY - rear center (normal seat type)

(b) Model with armrest ASSY - rear center (leather seat type)

(c) Model without armrest ASSY - rear center

3) Make sure that all hog rings (A) are attached securely.

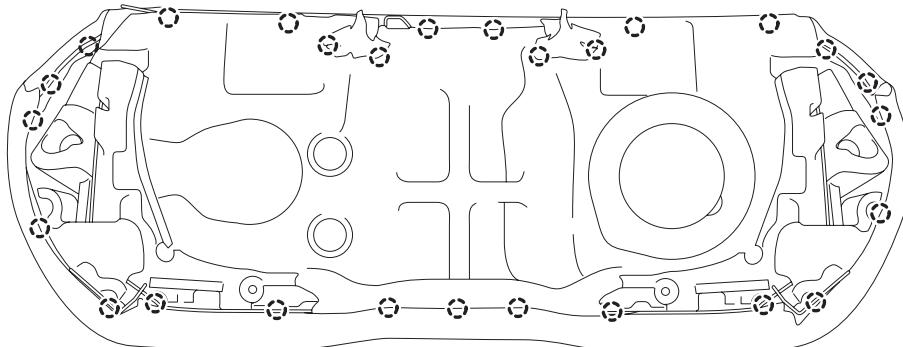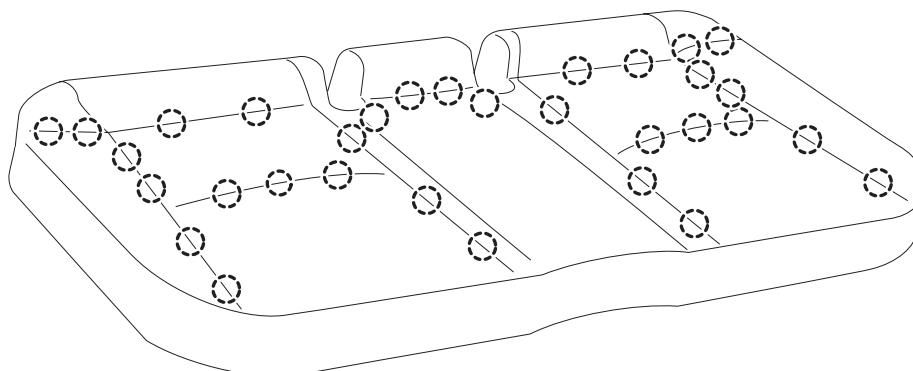

○: A

SE-01573

4) Before installation, check the following items.

- No tear and fray on the cover COMPL - rear backrest and the cover - rear cushion.

- No fray or deformation on each wire cable.

5) Install each part in the reverse order of removal.